

P!NK Instruction Book

1. Package Includes

P!nk device x1

User manual x1

Storage bagx1



2. Power On

Press the power/toggle key 3 seconds, then the red Led on (Manual Control Mode).

Press the power/toggle key 3 seconds, then the blue Led flash (Bluetooth Mode).



3. Power Off

Press the power/toggle key 2 seconds when power on, then the red led will Turn Off

4. Charging Battery

P!nk includes a li-ion rechargeable battery.


Twist off the cap by rotating counter-clockwise.

Plug into a USB charger or a computer USB port.

Charging: Led light flash.

Charging completed: Led light on.

Low Battery: the device cannot be powered on or it will power off soon after turning on.

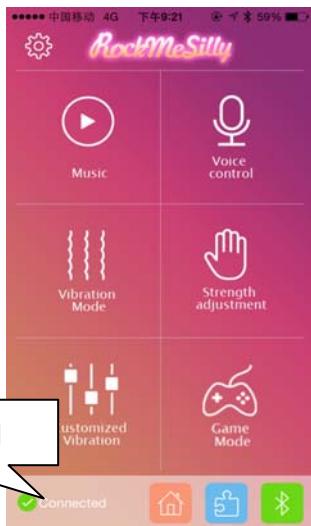

Picture 1

5. Smart Phone Control Mode

Download:



Visit App Store to search “RockMeSilly” App.

Scan QR Code

Visit the website below

[Run “RockMeSilly”](#)

Turn(iOS device→Settings→Bluetooth) on and run the RockMeSilly App.

Pairing

1. Hold the power/toggle key for 3 seconds when P!nk is power on RedLED Turn ON
2. Hold the power/toggle key for 3 seconds when P!nk Blue LED Turn ON Pair succeed the blue Led is Flash .

Click Bluetooth refresh button.

When paired, the App status will show “P!nk Connected”. (see Picture1)

When paired, the LED on P!nk will turn blue is flashing.

Re-connect

Once paired, the P!nk device in the proper range will auto-connect to the running App. Click refresh button for quick connection.

Re-pairing

If P!nk cannot pair with your iOS device,

1. please press(iOS device→Settings→Bluetooth→ ON
2. Close the Rockmesilly App
3. Run Rockmesilly app
4. Press App Bluetooth logo


6. Manual Control Mode(without smartphone)

Change the vibration mode manually

Turn on P!nk but do not run the RockMeSilly App. Press power/toggle key for 1 second to toggle different vibrations modes. There are 10 vibration modes available.

Turn off automatically

P!nk device will automatically turn off after 5 minutes of no use in manual control mode.

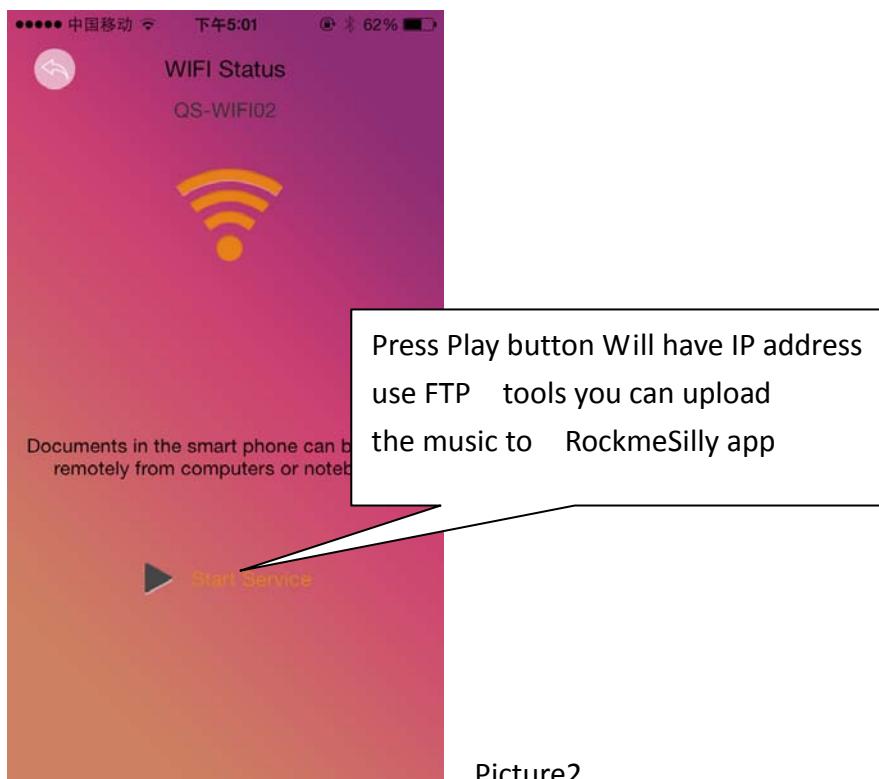

7. Rockmesilly App Brief Introduction

Remote Control

Switch RockMeSilly to background then run third-party voice Apps, such as Line, Skype or Wechat to have a remote conversation. The voice can control the vibration frequency by RockMeSilly app in background.

Sync music by iTunes

Sync music by ftp (see Picture 2)

Open ftp server in Wifi LAN environment. You could upload music files to RockMeSilly app with ftp tools.

8. Notice

Before the usage

Please clean P!nk device with cleanser or warm water and anti-bacterial soap for first time use. We suggest using water-lubricants with P!nk to enhance the experience.

In use

We recommend using together with a condom. Select the proper vibration mode' stop using device if there is discomfort or tingling.

After usage

After using, clean the device and dry it.

Storage

Keep the device in a cool, ventilated place. Avoid leaving P!nk in direct sunlight and keep it out of the reach of children.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.