


SELFIE STICK WITH REMOTE SHUTTER



LOCATION OF PARTS AND CONTROLS

1. Phone holder
2. Phone holder screw mount
3. Angle adjustment
4. Remote shutter
5. Charging outlet
6. Bluetooth LED
7. ON/OFF switch
8. Micro USB cable

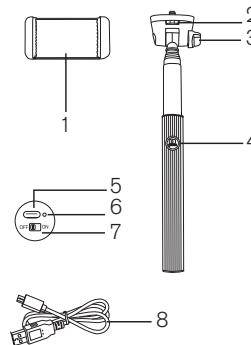

ACCESSORIES

- 1pc Phone holder
- 1pc Micro USB cable
- 1pc Telescoping handle

COMPATIBILITY

- iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G and iPhone, iOS5 ~ iOS8
- Most Android devices, Samsung Galaxy S2, S3, S4, S5, Galaxy tablets, Note I, II, III, HTC, Nexus 4, 7, Android 4.0 ~ 4.3

CHARGING THE KEYBOARD

1. Plug the USB CHARGING CORD (included) into the MICRO USB PORT on the selfie stick and then into a USB outlet.
2. The Bluetooth LED will illuminate Red during charging, and shut off when charging is complete.

BATTERY PRECAUTIONS

- Dispose of old batteries properly. Do not dispose of old batteries in a fire.
- Do not leave batteries where a young child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- Batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Discard this product as you would a spent battery.

SPECIFICATIONS

Selfie stick Length of extension	9.3" - 39.6"
Phone holder Length of extension	2.3" - 3.3"
Battery Capacity	50mAh
Charging time	1hours
Standby time	100hours

Find thousands more
great ideas online

Brookstone®

918118

Brookstone.com | 1-800-846-3000
One Innovation Way,
Merrimack, NH 03054

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

TAKE PHOTOS

1. Screw phone holder on Selfie stick.
2. Put your device on holder.
3. Slide the ON/OFF switch on Selfie Stick to "ON". Bluetooth LED will light up for a few seconds and then shut off.
4. Select the "Settings" icon on your smart phone's screen.
5. Locate and select "Bluetooth" in you smart phone's "General" menu.
6. Under "Devices" on your smart phone select the "Monopod shutter".
7. The smart phone screen should now show, "Monopod shutter" has connected successfully.
8. Press Remote shutter to take photo.
9. Slide the ON/OFF switch to "OFF" when your are done using the Selfie Stick.

Note: The Bluetooth will automatically go into standby mode after 15 minutes of non-use in order to preserve battery life. Just press shot key to reactivate the Selfie stick.

iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. Android is a trademark of Google, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., All other trademarks are property of their respective owners.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than

Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.