



The KRC15 (Not Included) is a wired remote for the KMC media center. Completely water-proof, you can mount it at any location on the boat for convenient access. For information on how to obtain the KRC15 remote contact us directly or your local retailer.

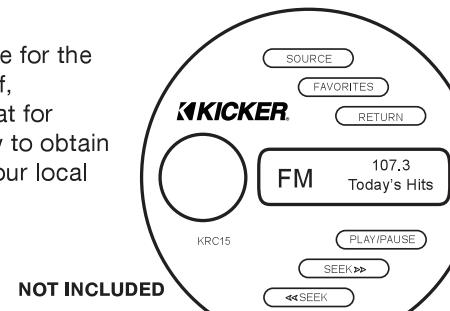

The PXIRCX (Not Included) is a wired remote for the KMC media center. Completely water-proof, you can mount it at any location on the boat for convenient access. For information on how to obtain the PXIRCX remote contact us directly or your local retailer.

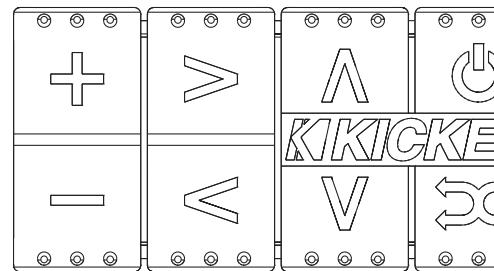

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MEDIA CENTER

MULTI-MEDIA RECEIVER WITH USB AND BLUETOOTH

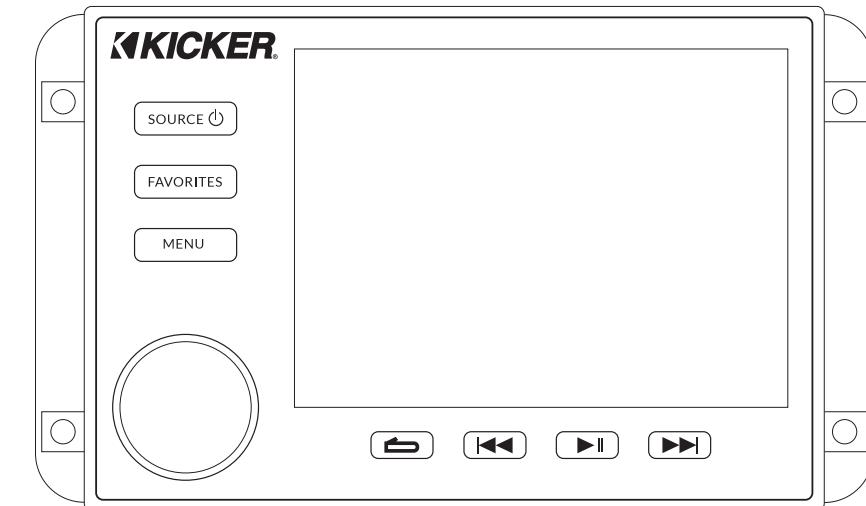

Thank you for purchasing the KMC20 Media Center. We recommend reading through the entire manual for detailed instructions on how to install and operate the unit. For support please call: 1-800-844-2774

SUPPORTS



Made for
iPod iPhone iPad

Bluetooth

USB

mp3 WMA

WATERPROOF RATING

The KMC10 is rated at IP67. This certification is rated for a high degree of resistance to dust and water.

ITEMS INCLUDED:

- (1) KMC10 (Media Receiver)
- (1) Instruction
- (1) 10A Fuse
- (1) Trim Ring
- (1) Harness


SPECIFICATIONS:

- Power: 12V DC
- Weight:
- Software Version:

TABLE OF CONTENTS

Installation Overview.....	2	Favorites.....	6
Wiring Codes.....	2	Source Specific Menu.....	6
KMC10 Navigation.....	3	Source Specific Menu Cont.....	7
12-Pin Connector.....	3	Audio Options.....	7
KMC10 Main Menu.....	4	Warranty.....	8
Sources.....	5	Additional Information.....	8

INSTALLATION OVERVIEW

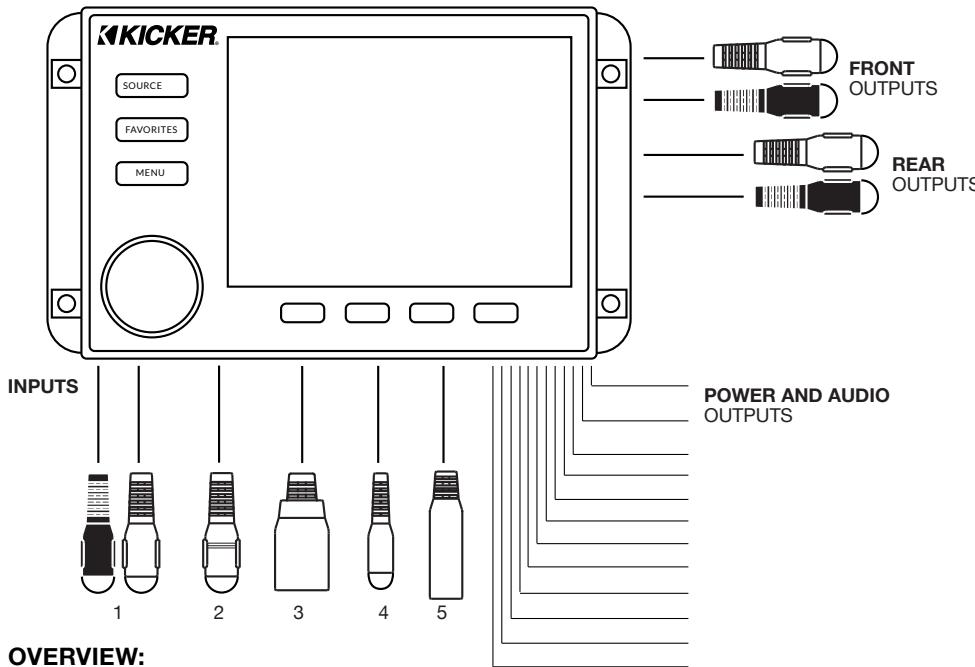

OVERVIEW:

- 1 - Auxiliary Input
- 2 - KRC15 Remote Port (5-PIN)
- 3 - USB Input (Audio Only)
- 4 - PXIRCX Remote Port
- 5 - Antenna Input

WIRING COLOR CODES


Black	= Ground
Red	= Accessory 12V (Switched)
Orange	= Illumination (100mA Max)
Blue/White	= Amplifier Turn-On
White	= Left Front (+)
White/Black	= Left Front (-)
Gray	= Right Front (+)
Gray/Black	= Right Front (-)
Green	= Left Rear (+)
Green/Black	= Left Rear (-)
Purple	= Right Rear (+)
Purple/Black	= Right Rear (-)

HOW TO NAVIGATE THE KMC10

The button layout below will give you a quick overview of the button functionality and how to use them. The Warning display will last approximately 25 seconds.

BUTTONS:

- 1 - Source
- 2 - Favorites
- 3 - Menu
- 4 - Back
- 5 - Seek/Tune Down
- 6 - Play/Pause
- 7 - Seek/Tune Up
- 8 - Volume Knob

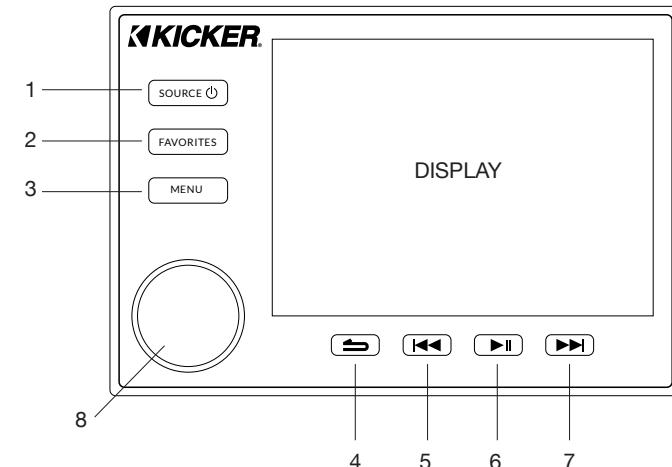

Function:

Power On	Press the Source (1) button once.
Power Off	Hold the Source (1) button for 2 seconds.
Volume Up	Turn the knob (8) clockwise.
Volume Down	Turn the knob (8) counter-clockwise.
Seek Up	Press Seek Up (7) once.
Seek Down	Press Seek Down (5) once.
Tune Up	Hold down Seek Up (7).
Tune Down	Hold down Seek Down (5).
Enter/Select	Press the Knob (8) inward once.
Pause/Play	Press Play/Pause (6) once.
Mute	Press Play/Pause (6) once.
Back	Press Back (4) once.

How To:


Power On	Press the Source (1) button once.
Power Off	Hold the Source (1) button for 2 seconds.
Volume Up	Turn the knob (8) clockwise.
Volume Down	Turn the knob (8) counter-clockwise.
Seek Up	Press Seek Up (7) once.
Seek Down	Press Seek Down (5) once.
Tune Up	Hold down Seek Up (7).
Tune Down	Hold down Seek Down (5).
Enter/Select	Press the Knob (8) inward once.
Pause/Play	Press Play/Pause (6) once.
Mute	Press Play/Pause (6) once.
Back	Press Back (4) once.

Note: The MUTE option is only available on the following sources:
AM - FM - WX - AUX

12-PIN CONNECTOR

The White 12-Pin connector on the KMC10 harness is a universal connector.

If the connector is not suited for your installation type, we recommend using the supplied wiring harness pigtail.

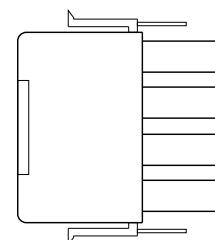

Part Number: 1-4807008-0

KMC10 MAIN MENU

The KMC10 Main Menu Settings are for the overall display and performance of the media center. The KMC10 offers many features that are adjustable.

To enter the Main Menu Structure: Hold the MENU (3) button for 2 seconds.

To change any of the settings, simply rotate the knob to highlight the item, then press the knob to select the item.

Day/Night: The Day/Night feature allows you to change the theme from Day Mode to Night Mode. The unit is defaulted to Auto.

Auto Day Night

In order for the unit to automatically switch between day and night modes, the orange illumination wire must be connected.

Illumination: The Illumination feature allows you turn ON or OFF the blue LED border around the screen.

Dimmer: The Dimmer allows you to adjust the brightness of the screen, buttons, and LED border. The unit is defaulted to +10.

Dimmer +10

Background: The Background feature allows you to choose from 4 different wallpapers for your screen, day and night mode included.

Low Battery: The Low Battery feature allows you the option to turn ON and OFF the Low Battery Alert. If the unit drops below 10.5V, the unit will display a visual alert and audible alert warning that your batteries need charge.

Aux 1: Allows you to rename the AUX1 source. With a selection from 5 different names with icons.

Tuner: Allows you to change the region for Tuner Mode.

Your available options:

N. America - Latin America - Europe - Russia - Australia - Middle East - Asia - Japan

SOURCES

To change any of the sources: Press the  button on the KMC10.

Available Sources:

FM Source: The FM source allows you to SEEK and TUNE through the stations.

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

SOURCES CONTINUED

AM Source: The AM source allows you to SEEK and TUNE through the stations.

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

WX Source: The Weather Band source allows you to SEEK and TUNE through the weather band stations.

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

USB1: The USB1 source will automatically detect the connected device.

The USB1 source will read iPod, MP3/WMA files. Does not support video files.

NOTE: The USB Source will display the Album Art if present.

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

On screen while in USB mode you are able to view the:

ARTIST - SONG TITLLE - ALBUM - TRACK - TIME - ALBUM ART

On screen while in iPod mode you are able to view the:

ARTIST - SONG TITLLE - ALBUM - TRACK - TIME - ALBUM ART

AUX 1: The AUX1 Source allows for any connection via the Audio Left & Right RCA Input. (See Installation Overview items number 1).

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

Bluetooth Source: The Bluetooth Source is only for Music (A2DP) Streaming.

Bluetooth Device Name: **“Media Center”**

Function: How To:

Seek Up Press the Seek Up (7) button once.

Seek Down Press the Seek Down (5) button once.

Tune Up Hold the Tune Up (7) button for 2 seconds. Then press (7) once.

Tune Down Hold the Tune Down (5) button for 2 seconds. Then press (5) once.

There is no password required. **This unit does not offer the Hands-Free profile.**

FAVORITES LIST

The Favorites button will allow you to view and set your favorite station from the following sources: **FM - AM - WX**.

A total of 10 favorites can be set.

To set a favorite station simply do the following:

1. Select the station you wish to add to the favorites list.
2. Press the Favorites button and select the Favorites preset number you wish to set.
3. Press and Hold the ENTER (8) button for 2 seconds to set.

To change a current favorites preset number, simply repeat the steps above.

SOURCE SPECIFIC MENU ITEMS

Pressing the Menu button while in the following sources will bring up Source Specific Menu items:

WX - USB1 - BT - AUX1

To change any of the settings below, simply rotate the knob to highlight the item, then press the knob to select the item.

WX Menu: Allows you the following:

Auto-Alert On and OFF - this feature will automatically interrupt any source and tune to WX for any alert message. This setting is defaulted to ON.

To change this setting to OFF, simply rotate the knob and select OFF.

WX Auto Alert
On Off

USB1/ iPod Menu: Allows you the following:

BROWSE - Allows you view additional file or folder names that may not be visible.

REPEAT - Allows you to turn REPEAT ON or OFF. Options for Current Song or All.

Repeat
Off Current All

SHUFFLE - Allows you to turn SHUFFLE ON or OFF

Shuffle
On Off

SEARCH - Allows you to search files and folders of the USB device. It also allows you to search the iPod menu for specific Playlist, Artists, Songs, Genre, and Compilations. Allows the user to search alphabetically and numerically.

DME - Digital Music Enhancer.

Digital Music Enhancer
On Off

SOURCE SPECIFIC MENU ITEMS CONTINUED

Bluetooth Menu: Allows you the following:

ENTER PAIRING MODE - Places the device into pairing mode.
Device name: Media Center

In order to pair your phone to the Media Center you must:

1. Make sure the Bluetooth is turned "ON", on your device.
2. Search for "Media Center".
3. Connect/ Trust the device to begin streaming music.
(No password needed)

DISCONNECT - Allows you to disconnect current paired device from Kicker Media Center.

CONNECT LAST DEVICE - Connects the KMC10 to the last paired device.

DELETE ALL DEVICES - Allows you to delete all paired devices from the KMC10 media center. The device will confirm with showing "No Device Detected"

CHANGE BLUETOOTH NAME - Allows you to change the Bluetooth transmitted device name. *Max characters allowed is 12.*

AUX1 Menu: Allows you to adjust the Aux Input Sensitivity.

AUX1
-6 + 6

AUDIO OPTIONS

There are several audio options that allow you to adjust the sound quality of the sound. Below are the options available and how to adjust.

To change any of the settings, simply press the knob for 2 seconds and rotate to select your preference.

Audio Menu: Allows you the following:

BASS - MID - TREBLE - BALANCE - FADER

Each menu item listed above has its own adjustment values.

Item
-6 + 6

MASTER RESET

To perform the master reset and restore all settings/ functions on the KMC10 back to their factory defaults, please do the following:

Press and hold the Play/Pause (▶/■) button for 5 seconds.