



Sicherheitshinweise

DE

Safety instructions

EN

Consignes de sécurité

FR

Indicazioni di sicurezza

IT

Instrucciones de seguridad

ES

Veiligheidsvoorschriften

NL

Wskazówki bezpieczeństwa

PL





General safety instructions

IMPORTANT SAFEGUARDS



READ ALL INSTRUCTIONS BEFORE USING.

Heed all warnings on the product and in all product documentation.

Keep these instructions for future reference.

Follow all instructions.

Improper handling of the product may increase the risk of injury.

EN

When using electrical appliances, basic safety precautions should always be followed, including the following:

WARNING

Risks for children

- ▶  0-3 Keep the product away from children during installation. Small parts are included. They may cause suffocation if swallowed or inhaled.
- ▶ Make sure that children do not play with the plastic wrapping. They may get caught in it when playing and suffocate.
- ▶ The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.



General safety instructions

IMPORTANT SAFEGUARDS

- ▶ Children shall not play with the product.
- ▶ Never allow children to operate electrical equipment unsupervised.
- ▶ Cleaning and user maintenance shall not be made by children without supervision.

EN

WARNING

Risk of electric shock

- ▶ The product is for household use only.
- ▶ To protect against risk of electrical shock, do not put the product or the mains adapter in water or other liquids.
- ▶ The product and the mains adapter unit shall not be exposed to dripping or splashing liquids and no objects filled with liquid, such as vases, shall be placed on the product.
- ▶ Only use attachments/accessories specified by the manufacturer.
- ▶ The product should be operated only with the type of power source indicated on the rating label or in the user manual.
- ▶ Protect the power cord from being walked on or pinched particularly at plug, convenience outlet, and the point where it exits from the product.



General safety instructions

IMPORTANT SAFEGUARDS

EN

- ▶ Unplug the product during thunderstorms or when unused for long periods of time.
- ▶ The product device can only be completely disconnected from the grid by disconnecting it from the mains. Thus, make sure that the power plug is always easily accessible.
- ▶ Regularly check the product and the mains adapter for damage. Immediately disconnect the mains adapter and do not operate the product if its housing or power cord or plug is defective or exhibits other visible damages.
- ▶ Refer all servicing to qualified service personnel. Servicing is required when the product or the mains adapter have been damaged in some way, such as power cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally or has been dropped.
- ▶ Do not block any ventilation openings. Install the product in accordance with the manufacturer's instructions.
- ▶ Do not install the product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ▶ No naked flame sources, such as lit candles, should be placed on the product.
- ▶ Dispose of used electrical products and batteries safely according to your local regulations.

- ▶ Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
- ▶ Regularly check the device and the mains adapter for damage. Do not operate the product if the power cord or plug has been damaged or malfunctioned in any way.
- ▶ Unplug the product from the power outlet when not in use and before cleaning, servicing, maintenance or moving the product.
- ▶ Never modify the device. Unauthorised modifications may affect the safety and functionality.



WARNING

EN

Risks when handling batteries

- ▶ Lithium rechargeable batteries can explode if handled improperly.
- ▶ You must not heat or short circuit rechargeable batteries or dispose of them in fire.
- ▶ Do not expose the rechargeable batteries to direct sunlight.
- ▶ If the battery is opened or dismantled, or if a damaged battery or a battery other than the one delivered is used, electrolyte may leak out. This can cause chemical burns and damage to the appliance and battery pack.
- ▶ Never open or dismantle the battery pack.
- ▶ Use only the battery provided. Replace it only with an equivalent battery.
- ▶ If you come into contact with electrolyte, rinse the affected area immediately with plenty of clean water and contact a doctor if necessary. If the battery pack is faulty, replace it with a new, original battery pack immediately.



General safety instructions

IMPORTANT SAFEGUARDS

EN

NOTICE

Risk of damage!

Improper handling of the product may result in damage to the product.

- ▶ A deep discharge damages the rechargeable battery. Recharge your rechargeable battery frequently. Only store the rechargeable battery once it is fully charged.
- ▶ Always place the product on a stable and level surface or securely mount it on a wall. It can be damaged if dropped.
- ▶ To avoid moisture in the product through condensation, do not expose the product to extreme temperatures. If the product was exposed to severe temperature fluctuations, wait approximately 2 hours until the product has reached ambient temperature.
- ▶ Do not cover the product during operation.

SAVE THESE INSTRUCTIONS



General safety instructions

IMPORTANT SAFEGUARDS

Responsible disposal

In the USA:

- ▶ Sort the packaging before you dispose of it. Dispose and/or recycle in accordance with the regulations in force in your city or state.
- ▶ Should the product no longer be capable of being used at some point in time, **dispose of it in accordance with the regulations in force in your city or state.**
- ▶ Please ensure your recycling information applies to local regulations and the EPA recommendations (www.epa.gov).
- ▶ Before disposing of used batteries of any kind, check with your local or state authorities for instructions.
- ▶ Removable batteries can be brought to specialized battery recyclers, participating retailers that provide battery takeback services, or local household hazardous waste collection programs. Contact the manufacturer or your local household waste authority for other management options.
- ▶ Non-removable batteries contained in electronic devices: Entire devices can be brought to certified electronics recyclers, participating retailers that provide electronics takeback services, or local electronics or household hazardous waste collection programs.

EN



General safety instructions

IMPORTANT SAFEGUARDS

Responsible disposal

In the United Kingdom and in the Republic of Ireland:

- ▶ Lore ipsum lorem ipsum
- ▶ Lore ipsum lorem ipsum

EN

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

EN

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Lautsprecher Teufel GmbH
Bikini Berlin
Budapester Str. 44
10787 Berlin (Germany)

Teufel Audio US, Inc.
16192 Coastal Highway
Lewes, Delaware 19958
USA

us.teufelaudio.com
www.teufelaudio.com
www.teufel.de
www.teufel.ch
www.teufelaudio.at
www.teufelaudio.nl

www.teufelaudio.be
www.teufelaudio.fr
www.teufelaudio.pl
www.teufelaudio.it
www.teufelaudio.es



Lautsprecher Teufel GmbH declares that this product complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity can be found at this web address:

www.teufel.de/konformitaetserklaerungen
www.teufelaudio.com/declaration-of-conformity

Online-support:

us.teufelaudio.com/support
www.teufelaudio.com/service
www.teufel.de/service

Contact:

us.teufelaudio.com/contact
www.teufelaudio.com/contact