


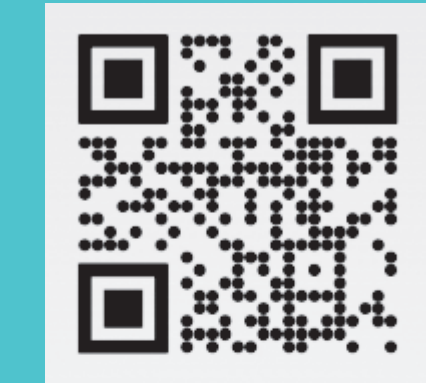

User Guide

unnecto User Guide

Table of Contents

1. Security.....	5
2.Getting Started.....	7
2.1. Keys and parts.....	7
2.2. Batteries.....	8
2.2.1. Installing and uninstalling the battery.....	8
2.2.2. Charging the battery.....	8
2.2.3. Using the battery.....	8
2.2.4. Battery level indicator.....	8
2.3. Connecting to the Network.....	8
2.3.1. SIM card.....	8
2.3.2. Installing and uninstalling the SIM card.....	9
2.3.3. Unlock the SIM card.....	9
2.3.4. Connecting to the network.....	9
2.4. Standby screen and Icons.....	9
2.5. Key function.....	9
2.6. Text Input Method.....	10
3. Call Function.....	10
3.1. Phone power on/off.....	10
3.2. Dial.....	10
3.2.1. Direct dial.....	10
3.2.2. the Phonebook.....	10

Camera settings include.....	14
8. Cloud Phone.....	14
9. DV.....	14
10. Settings.....	14
10.1. Profiles.....	14
10.2. Call settings.....	14
10.3. Phone settings.....	15
10.4. Display.....	15
10.5. Security.....	15
10.6. Connections.....	15
11. My Files.....	15
12. Calendar.....	16
13. Music.....	16
14. Profile.....	16
15. Video.....	16
16. Bluetooth.....	16
17. Image.....	16

General Information

1.Security

Emergency call

In any country, you can dial 112 (or other emergency call number) for emergency help.

Note:

Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

For your safety

Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.

Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.

Pay special attention to the ring tone volume and vibration settings if you have a heart problem.

In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions. You phone will emit radio frequency even in the standby mode. Turn off you phone when so instructed.

Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free option, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.

If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.

When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call *0684 to look up your IMEI number. Copy this number and save it for future need.

To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.

Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data loss.

When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.

Keep the phone, battery or charger out of reach of children.

Notices for your phone use

Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.

Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.

Keep the phone dry, all kinds of liquid can erode the electronic circuit.

Do not drop the phone or violently crush or shake the phone.

Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.

Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.

The phone will become warm under normal use and while in battery charging.

Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause

data loss.

The metal parts of the phone may irritate your skin depending on your health condition.

Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.

When the vibrato mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.

Use only the stylus approved by the phone manufacturer. Do not press the touch screen with needles, pen point or other sharp objects; otherwise it can damage the LCD and violate the terms of the warranty. Handle the stylus with care. Place it back to its proper storing place when not in use. Keep it away from children.

Notice for batteries use

Do not disassemble or modify your batteries, otherwise it can cause leakage, over heat, fire or explosion.

Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not dispose the battery as household waste.

Do not short the circuit of the battery with wires, needles or other metal objects, or store the batteries with necklace or other metal objects, otherwise it can cause leakage, over heat, fire or explosion.

There is a risk of blinding if the liquid of the batteries gets into your eyes. In case of this, do not rub your eyes, you should rinse your eyes with fresh water and go to the hospital immediately.

If the leaked liquid of the battery touches the skin, it can burn the skin. Please wash your skin with fresh water and go to the hospital immediately.

Never put the battery in your mouth. The liquid of the battery can be toxic.

Stop using the battery when you find it became hotter, and change color and shape abnormally during use, charging or storing.


Airplane safety

Power off your phone before boarding, the use of a wireless phone in an airplane will be dangerous to the operation of the airplane and disrupt the wireless telephone network and maybe illegal. Failure to observe these instructions may lead to law suit or denial of GSM cellular network service to the offender.

Should there be an emergency situation, contact crew member.

2.Getting Started

2.1.Keys and parts:

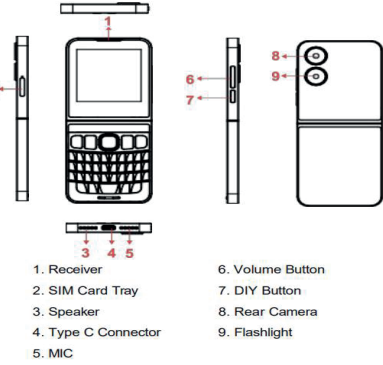

2.2.Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. You battery will reach its optimal state after three cycles of charge and discharge.

2.2.1.Installing and uninstalling the battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.

To uninstall the battery, flip the battery out from the bottom of the battery.

2.2.2.Charging the battery

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished.

During charging, the phone and charger will feel warm to the touch. This is normal.

Warning:

The operating ambient temperature of the charger is 0-50 C. Do not use it when the temperature exceeds this limit.

Do not touch the golden contacts of the SIM card and place it away from electricity and magnetism to avoid damage. You will not be able to use the phone if the SIM card is damaged.

Note:

Before inserting and taking out the SIM card, always make sure that the phone is switched off and disconnected from any external power source; otherwise both the phone and the SIM card may be damaged.

2.3.2.Installing and uninstalling the SIM card

The SIM card usually comes attached to a special card. The metal contacts of SIM card is easily damaged by scratching, so take it out carefully before assembling it into the phone.

Switch off the phone, remove the back cover, battery and other external power source. Fit the SIM card into the SIM card slot. Align the angled corner of the SIM card with the slot. Slide in the SIM card, make sure it is in place, install the battery, and restore the back cover.

Likewise, to remove the SIM card, switch off the phone, remove the battery and then take out the SIM card.

2.3.3.Unlock the SIM card

PIN code

Your Personal Identification Number (PIN) code protects the SIM card from unauthorized use. Your PIN code is usually supplied with the SIM card. If this security function is enabled, you need to enter the PIN code every time you turn on the phone. You can also disable this function.

To unlock the SIM card, press and hold the power button to turn on the phone. Enter the PIN code. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unlock it.

Power Key: Power on/off the phone

Note:

In this user guide, press means press an actual button on the phone.

2.6.Text Input Method

This battery can be charged and discharged for hundreds of times but it will eventually wear out. The battery life is shortened with each charging.

When replacing the battery, use only the batteries approved by the phone manufacturer. Damage resulting from using unauthorized batteries will not be covered by warranty.

3.Call Function

After the setup described in the previous sections is completed, you are ready to make and receive calls using the basic information provided in this section.

Note:

If you are using headset, please plug/unplug the headset gently to avoid damaging the headset's jack.

3.1.Phone power on/off

Power on

Press and hold power to turn on the phone. If PIN code is required, please refer to the previous section in this guide.

Power off

In Standby mode, hold power key to turn off the phone.

3.2.Dial

When the network carrier is shown on the screen, your phone has entered the Standby mode and you may make or receive calls. If you have installed two SIM cards, the two network carriers will both appear on the screen.

Note:

The functions vary with the SIM card.

Connect to BT headset: Change voice to BT headset.

Contacts: Enter the phonebook and do the related operations. This function is convenient for searching phone numbers during a phone call.

Keypad: input phone number

Hold: The current call is on hold and both you and the person you are calling will not hear each other. When the call is on hold, you may pick it up again or end the call through the Options menu.

Record: Record the phone conversation.

Mute: The microphone is turned off and the person you are calling will not hear your voice.

Hands-free: Speakerphone

Adjust volume : Adjust the volume of the speaker or headset.

Call logs: Open the call logs

Message: Enter the message screen and do the related functions.

End call: End the current call.

You may enter Dial or Phonebook screens to make a new phone call while the current phone call is still on-going

Note:

In the dual card mode, if one card is in use, the other card is under no-service state.

On the Standby screen, press Left soft key to enter the Main Menu. You can then access the various functions and operations.

4.Contacts

This chapter describes the functions of the phonebook. You can use alphabet for quick search of your contacts.

Each entry in your SIM card's phonebook consists of a phone number and a name. When you change to another phone, the contact information can be transferred to your new phone with the SIM card. The total number of entries allowed in the SIM card varies with the different SIM cards.

The contact stored in the phone can include name, cell phone number, home, others, group, ring tone. This information will not be transferred with the SIM card to your new phone.

4.1.Contact list

The contact list is arranged in alphabetical order. You have the following options: New, Write message, Call, Delete, Delete multiple, Import/Export, Send vCard, Settings, Search.

New: Create a new contact.

Groups: Change to group menu.

Write message: Send SMS MMS to the number.

Call: Dial the current number

Delete: Delete selected entry

Delete multiple: Delete multiple contacts

Copy: Copy to SIM1, SIM2 Card or Phone

Import contacts: Import contacts from memory card.

Export contacts: Export contacts from memory card.

Send vCard: Send vCard by SMS, MMS, Bluetooth.

Other: Set speed dial or check the phone Memory status

4.2.Contact

From the contact list you can select a contact and do the following: Edit, Call, Write message, Edit before dialing, Delete, Copy, Send vCard.

Edit: Edit the contact details

Call: Dial the current number

Write message: Send SMS MMS to the number.

Edit before dialing: Edit contact information After the call

Delete: Delete selected entry

Copy: Copy to SIM1, SIM2 Card or Phone

5.Call Logs

Call history function logs all recent calls including missed calls, dialed calls and answered calls. Options are:

Missed calls: View the Missed calls and carries on the operation

Dialed calls: View the Dialed calls and carries on the operation

Received calls: View the Received calls and carries on the operation.

Rejected calls: View the Rejected calls and carries on the operation.

delete all :delete all logs.

Add contact info: Add contact info to the message

Add phiz: Add phiz to the message

Save as draft: Save to Draft box.

6.1.2. New SMS

Enter the mms edit screen. You can send the mms after you input the words and insert attachment

6.2.Inbox

The Inbox lists the received SMS and MMS. You have the following options: Reply, Delete, Delete all, Call, Lock, Move to Phone/SIM, Mark, Sort, Export SMS, Add sender to, Delete repeated numbers, Add to blacklist.

After you select to read a message, you have the following options: Delete, Reply, Forward, Call, Move to Phone/SIM, Add to contacts and Details.

6.3.Outbox

The out-going messages are listed here. Your options include: Resend, New message, Delete, Delete all, move, mark, sort.

6.4.Drafts

Saved messages and unsent message are saved here.

You can select to read a message, you need to enter the message editor.

6.5.Sent box

Sent messages are saved here. Your options include: Open, Delete, Delete all, Forward, Lock, Move, Mark, Sort.

After you select to read a message, you have the following options: Forward, Delete, Call, Move, Details.

7.Camera

Note:

Taking pictures in dim lighting may result in poor picture quality.

After entering the Camera, the Camera Preview screen will appear with the status icons. Press center to take the picture.

Camera settings include:

Image viewer: Browse the photos

DV mode: Change to the dv mode

Effect: Normal, B&W,Blue,Green,Yellow, Red , Sepia , Negative

Settings:

Flash: auto, off, activate.

Quality: Low, Normal, Advanced.

Banding: 50Hz/60Hz

Shutter sound: Activate/off

Auto save: Activate/off

Video format: avi, 3gp.

Preferred storage: Phone,Memory Card

10.Settings

10.1.Profiles

Five Profiles are available: Normal Mode, Silent Mode, Meeting Mode, Outdoor Mode, and Indoor Mode. You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile.

10.2.Call settings

Dual SIM: Standby mode. Reply by original SIM. Set SIM name

Flip to answer: Flip to answer the call.

Flip off to end call: Flip off to end the call.

Call forward: You can set the SIM card to Call Forwarding

Call waiting: You can set the SIM card to Call waiting

Call barring: You can set the SIM card to Call barring:

Hide ID: You can set the SIM card to Hide ID

Others: Call time minute reminder, Auto redial, Auto record voice call.

10.3.Phone settings

Date& time: You can set the time, Time format, date, date format, update time setting.

Language settings: You can select display language: English and other , Writing language:English and other.

Shortcut settings: You can set the navigation key to be the shortcut key.

Auto power on/off: You can set Power on display, Power off display, Auto on/off.

Restore factory settings: Restore you phone to the factory or default settings through this option. You need to input your phone code (default is 0000) for the factory settings. All data will be deleted when your phone is restored to its factory settings.

10.4.Display

Wallpaper settings: you can set the Static wallpaper, More pictures.

Idle display settings: you can set the idle display settings. Include: Time & date, SIM1/2, Audio player, FM radio.

Contrast: You can set the screen backlight brightness, a total of seven levels

12.Calendar

In addition to the western calendar. You can add, edit and look up events on different dates. Options are:

Add new schedule: The editor will be displayed. You can add an appointment or an all-day event. Available input fields are: Subject, Location, Repeat, Start date, Start time, End date, end time, alarm, description. The display and reminder will be executed according to your setting.

View schedules: View the schedule of one day

All schedules: View All schedules

Clear today's tasks: Clear the schedule of one day

Clear all: Clear All schedules

Go to date: go to the date you choose

Weekly: According to the weeks shows

Daily: According to the days shows

13.Music

Upon entering the Music Player and press option key , Music list will be displayed. Through All Music you can look up all the music files. Other Options are: Add, Set as ringtone, Shuffle, Repeat, Settings, Open review

After you have selected music from the Playlist, you will enter the Music Player screen and you can look up the album, name of the song, artist, play time, item number, etc.

You can press center key to Pause and play, press left key to previous, press right key to next, press up key to volume up, press down key to volume down.

14.Profile

seven Profiles are available: Normal Mode, Silent Mode, Meeting Mode, Outdoor Mode, and Indoor Mode, Earphone, Bluetooth. You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile.

15.Video

Enter the Video Player and the Video file list is displayed. Select the video and you can do the following:

You can press center key to Pause and play, press left key to previous, press right key to next, press up key to volume up, press down key to volume down.

16.Bluetooth

You may do functions for your Bluetooth settings such as: Turn on/off, Bluetooth visibility, Paired devices, device name, Bluetooth file storage, help.

17.Image

View the saved images and into the camera

18.FM Radio

You can receive and listen to FM radio here.

Functions are also available via the Options menu:

Play/pause: play fm or pause fm.

Auto Search and save: Automatic search and save the channel

Channel list: There are 40 channels list

Save :Save to the Channel list

Manual search:Manually enter the channel search

Open speaker:Headphones to listen to FM can open after the speaker

Background play:Minimize the interface background play

Record: Record FM

Timing record:Open/Close timing record, Predefined time & frequency

Record file list: View or play the Record file list

Storage: Phone, Memory Card

Help: View instructions.

19.Calculate

A basic calculator is provided.

20.Recorder

Enter the Voice memo function, Press center key to start recording.

The memo can be played back immediately or using Option menu to do the following functions:

Recording started: Start a new recording

Record files list: View recording documents

Storage: Phone, Memory Card

File format: AMR(Low quality), MP3(High quality), WAV(Best quality)

your SIM card and your phone.

26.FAQ

The phone cannot be turned on

When the battery is very low, the phone may not be turned on properly. Please charge the battery.

Cannot make certain calls

Check if Call Barring is set. If it is set, you may not be able to make calls or only certain calls are allowed.

My call is picked up by another phone

Check if call divert is set. If it is set, your incoming calls may be diverted to other numbers or devices.

Error Message

Please insert SIM card

Make sure you have inserted SIM card. If you have installed it but it cannot be detected, please try to clean the golden contacts of the SIM card by using a dry cloth. If it still is not working, please contact your network carrier.

No service

If you are in an area not covered by your network, or if a physical obstacle is present, such as in an enclosed area, the message "No service" will be displayed on your Standby screen and you will not be able to make or receive calls. You can try to move closer to a window for better reception.

For emergency only

If you are outside your network but inside other network, you can only make emergency call.

Do not drop, crush or shake the phone to avoid damaging the internal energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (5mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

To maintain compliance with radio frequency exposure guidelines and limits, keep the smartphone at least 5mm

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (5mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

To maintain compliance with radio frequency exposure guidelines and limits, keep the smartphone at least 5mm

away from your body. When you carry the smartphone on your body, use only accessories equipped with an integrated belt clip that are supplied or approved by the manufacturer. If you use a body-worn accessory not supplied by the manufacturer, verify that the accessory does not contain metal and keep the smartphone at least 10 mm from your body.

Google,Android,Google Play,YouTube and other marks are trademarks of Google LLC.

28.Hearing-Aid Compatibility (HAC) STATEMENT

1. This phone is hearing aid compatible as determined by ANSI C63.19-2019.

2. This phone has been tested and certified for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

3. The ANSI C63.19-2019 standard does not use the MIT rating system for showing the hearing aid compatible of the phone that order version of the standard used, instead, the 2019 version of the standard uses the conversational gains for the phone's hearing aid compatible capabilities.

4. The volume control performance has been evaluated according to ANSI C63.19-2019 and waiver DA-23-914. The lowest conversational gain is 8.06dB with a hearing aid, and 14.22dB without a hearing-aid.

Note: FCC requires the HAC disclosure is provided in print-form, QR code or electronic form is not allowed.

