

5. Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-Zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- There is one piece 1.2V Ni-Mh rechargeable battery inside the moving pet and it is not replaceable.

7

6. Battery Replacement

- Change the remote controller batteries when lighting is weak or moving pet with poor action after fully charged.
- For best performance, we suggest to use two new "AA" /LR6 alkaline batteries
- Replacement of batteries must be done by an adult.
- Loosen the screw in the battery compartment door with a cross screwdriver and remove the battery door at the back of the remote controller.
- Remove the exhausted batteries and dispose of them properly.
- Insert two new "AA" /LR6 alkaline batteries, push batteries into marked positions, ensuring polarities (+/-) are correct.
- Replace battery cover and tighten screw to secure.
- Do not mix old and new batteries or batteries of different type: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Non rechargeable batteries are not to be charged.
- Rechargeable batteries are to be removed from the unit before being charged and under adult supervision.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product.
- Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- The supply terminals are not to be short-circuited.
- There is one Ni-Mh rechargeable battery inside the moving pet and it is not changeable.

8

7. Consumer Information

- Batteries included are for demonstration purpose only.
- Adult assembly is required for battery replacement.
- Wipe this toy with a clean, damp cloth. Do not immerse.
- This toy has no consumer serviceable parts. Do not take apart.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

8. FCC Rules

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

9

9. Warning

WARNING: All packing materials, such as film, plastic buckles, tie lines, labels, etc. are not part of the toy, for your child Safety, please proper handling the packaging materials.

Product outlook and colors may vary from shown. Package box contains important information and must be retained

⚠ WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

10. Patent Pending




HU are trademarks of HU Global Ltd
HU used with permission.
Manufactured and Distributed by HU Global Ltd.
Flat C07, 8/F., Wing Hing Ind. Bldg., 14 Hing Yip St.
Kwun Tong, Kln., H.K.

10



Cover

1. Product Introduction

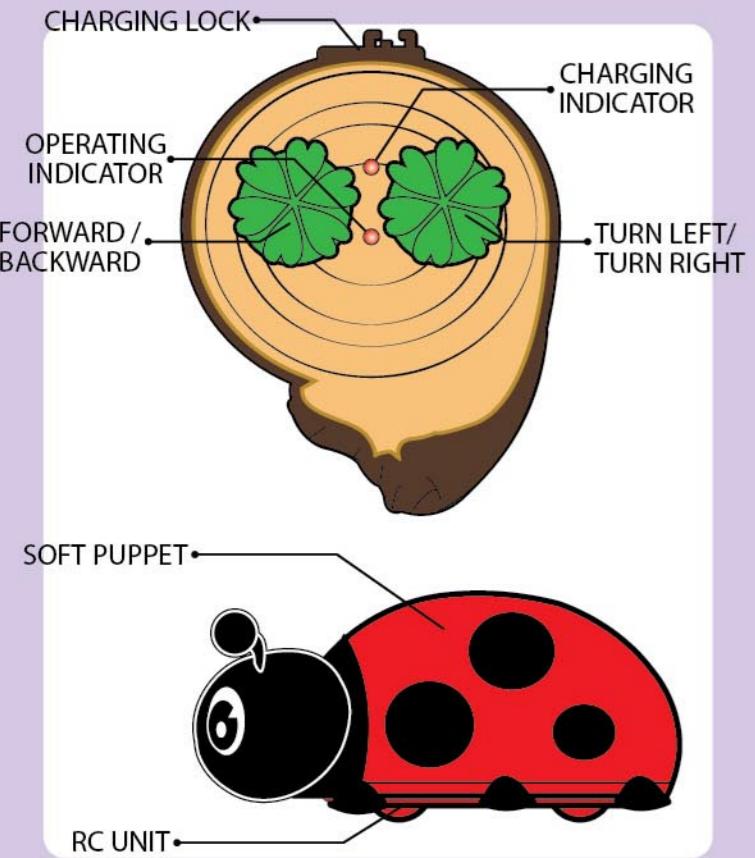

One Pet

One Transmitter

One User Manual



2. Package Content


LAZY BEETLE

2

3. Charging The Pet


1. Slide the switch on the back of remote controller to "OFF" position.
2. Slide the switch on the back of moving pet to "OFF" position.
3. Hold the remote controller in one hand to face yourself.
4. With the moving pet head pointing to the left according the imprint direction.
5. Press lightly until both posts are secured together.
6. Slide the switch on the remote unit to "OFF" position to start the charging, operating indicator flashes waiting for key in, red light on the front panel of remote controlling unit indicate charging process. When the red light turns off (after 3 minutes) the moving pet is fully charged.
7. Remove moving pet from the charging base.
8. Please keep the switch to "OFF" position when the moving pet is no using for saving battery power.

CHARGING INDICATOR

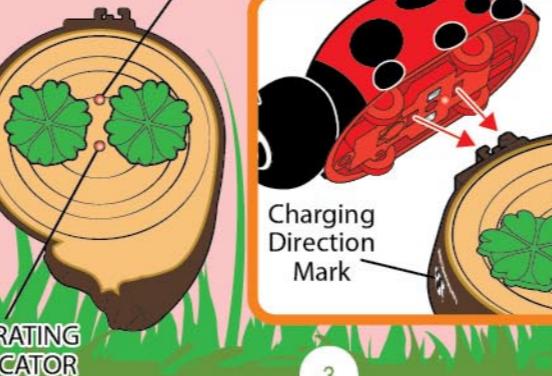

4. Playing Turbo Pets

1. Slide the switch on the moving pet to "ON" position and red light will flashing 1 seconds for every 5 seconds once the moving pet is powered.
2. Slide the switch on the remote controller to "ON" position, operating indicator flashes waiting for key in.
3. Control the operation direction of the moving pet by using two top key.
 - a. Left key control moving forward (press up) and backward (press down).
 - b. Right key control left (press left) and right (press right) steering direction
 - c. Press left and right key together to control movement with steering. Red light flashes once top key is pressed.
4. If you find the pet is swaying in one direction or another, this can be corrected by adjusting the gear guide on bottom of the pet.
5. The moving pet can be controlled up to 8 meter distance.
6. The unit use 2.4G RF control and you can play several pets together without distribute each others.

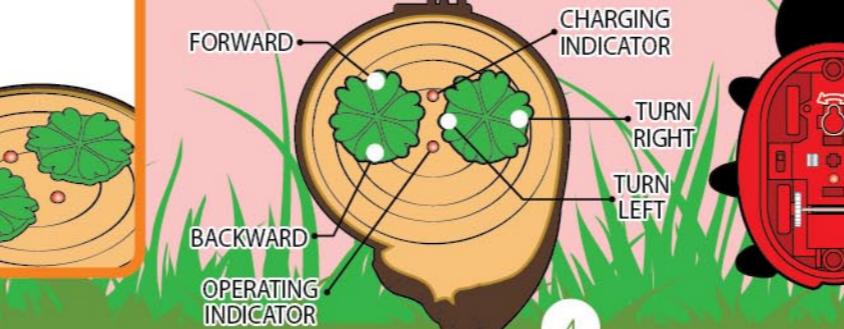

BRING US ALL HOME!!!



Electronic Pup-Pet
Remote Control Animals

3+

1

2

3

4

5

6

Back Cover