

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions
- **2.** Keep these instructions
- **3.** Heed all warnings
- 4. Follow all instructions
- 5. Do not use this apparatus near water
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **10.** Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- **11.** Only use attachments/accessories specified by the manufacturer.
- **12.** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- **13.** Unplug the apparatus during lightning storms or when unused for long periods of time.
- **14.** Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **15.** WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).
- **16.** A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 17. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



ADX AudioBar Instructions:

Getting Started

- 1. Plug in the AudioBar using the provided power supply. The unit will automatically turn on and enter pairing mode.
- 2. Pair with the Bluetooth Remote Control by holding the (Volume +) and (Play/Pause) buttons for 10 seconds. The AudioBar will beep when the remote is paired. (You should only need to do this once).
- 3. Press the (Bluetooth) button on the Remote Control to disconnect all other devices.
- 4. If you are using a TV to Bluetooth Transmitter pair it before connecting any other Bluetooth device
 - a. Make sure no other devices are connected to the AudioBar when pairing with the transmitter
- 5. Pair your Bluetooth-compatible device (such as a phone, music player, or computer) with the unit.
 - a. Open your device's Bluetooth preferences and select "ADX AudioBar" on your device.
 - b. For detailed instructions on how to pair a Bluetooth accessory with your device, please consult your device instruction manual.
- 6. The device can remain connected to one Bluetooth device and a compatible TV to Bluetooth Transmitter
 - a. Use the (Input) button to switch between your device and the (TV to Bluetooth Transmitter)

Using your AudioBar

- 1. Use the (power) button on the remote control to turn the AudioBar on. You will hear an ascending tone.
 - a. If the power button on the remote does not work, see #2 above to pair the remote with the AudioBar
- 2. The unit will connect automatically to the most recent Bluetooth device and the compatible TV to Bluetooth Transmitter
- 3. To connect a new Bluetooth device:
 - a. Disconnect all paired devices by pushing the (Bluetooth) button on the remote control
 - b. Open your device's Bluetooth preferences and select "ADX AudioBar" on your device.
 - c. For detailed instructions on how to pair a Bluetooth accessory with your device, please consult your device instruction manual.
- 4. To confirm proper connection, play music from your device. It should come out of the AudioBar.
 - a. Use the Volume + and to control the speaker volume.
 - b. You can also play/pause and track forward/back
 - c. Use the Sub+/- buttons to control the intensity of the subwoofer or bass shaker
 - i. The AudioBar can connect to a 40hm woofer speaker or bass shaker for enhanced performance
- 5. If your phone receives a call while it is connected to the AudioBar, the speaker will mute. You can use the (Decline) button to reject the call and return to your music or answer the call using the handset. (The AudioBar does not support any other phone features)
- 6. The ADX AudioBar USB port is a charge out port that provides 5V/2A output to charge your compatible devices.

To use the AudioBar with a TV (requires optional TV to Bluetooth Transmitter)

- 1. Pair the optional TV to Bluetooth Transmitter to your AudioBar and connect it to your TV's audio out (either optical or 3.5mm)
- 2. Use the (Input) button on the remote control to switch between the TV and a paired Bluetooth device
- 3. If there is only one device connected, the (Input) button will not do anything

Troubleshooting:

- No sound is coming out of my AudioBar
 - Is the sound bar plugged in with the power on?
 - o Is your device connected via Bluetooth?
- My AudioBar will not turn on
 - o Is it plugged in with power
 - o Make sure the remote is paired
- My device will not pair with the AudioBar
 - o Make sure that the AudioBar and the device are in 'discovery' mode
 - o Power on and off the AudioBar again




Installation Example:


1. Prepare mounting plate



2. Install ADX AudioBar into opening with matching screw mounting holes

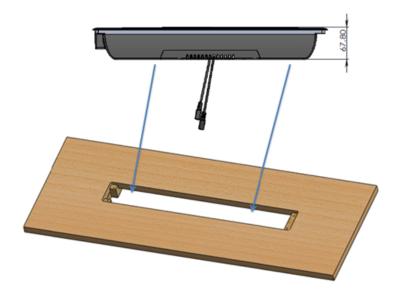

3. Screw and secure ADX AudioBar into mountain holes

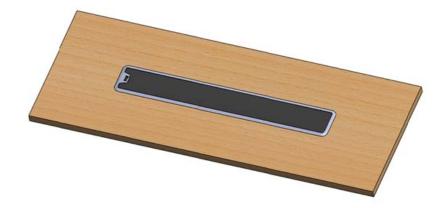

4. Connect power supply and subwoofer wires to complete installation



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

FCC Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.