

User Manual

Product Name: Tablet PC

Model Name: X8MT87



Manufacture: Shenzhen Jilicheng Technology Co.,Ltd


Thank you for choosing this wonderful Iguanapad Xtratech X8MT87.

To keep your device in the best condition, read this manual and save it for future

Consultations.

Android is a registered trademark of Google LLC.

Get ready for a unique experience.

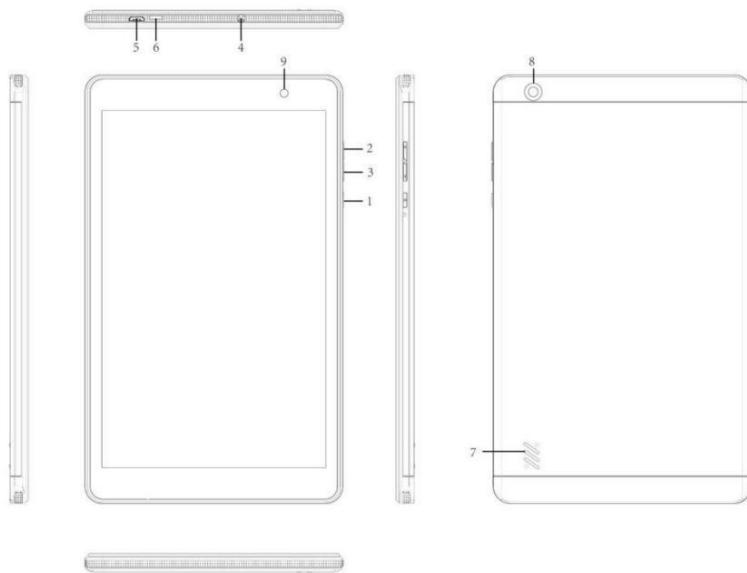

1. On
2. VOL +
3. VOL-
4. Headphone jack
5. USB port
6. TF card
7. Speaker
8. Rear camera
9. Front camera

Content

1 Ads	1
2 Introduction	1
2.1 Operation and Preparation.....	1
2.2 Status and Reminder	1
3 Quick Start Guide	2
3.1 Key function	2
3.2 Start and Shutdown	3
3.3 Awakening Screen and Sleeping	3
3.4 Using the touch screen	4
3.5 Home.....	4
4 Basic configuration	5
4.1 Wireless and Internet	6
4.2 Add Network.....	6
4.3 Bluetooth.	7
5 Multimedia	9
5. Music	9
5.1 Video	9
5.2 Photo gallery.....	10
5.3 Camera	12
6 Internet.....	13
6.1 BROWSER.....	
.....	13

1. Announcements

Safety warnings and warnings.

- Please always keep the tablet dry.

To avoid short-circuit problems in the device, corrosion failure and electrical short circuit, please prevent the device, battery and charger from coming into contact with water and moisture, and do not operate the device or charger with wet hands.
- To avoid device, battery, and charger failure, prevent the device, battery, and charger from violent shocks or shakes.
- To avoid failure of the device, battery, and charger, prevent the device, battery, and charger from getting too hot or the environment from getting too cold
- Never hit, throw, push the TABLET PC or drop it, do not extrude or bend the TABLET PC.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not within the scope of our company's warranty.

2. Introduction

2.1 Operation and preparation

Battery charging

Please load full before first use.

2.2 Status and reminder

Reminder icons

When a reminder message appears in your reminder window, click the column and swipe the screen to open the reminder list. Choose the menu you need and confirm the information. Then you can close the reminder window by clicking on the column to swipe up. See the following status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, if you are connected to WIFI you can open the reminder board to view detailed information. Abreel tablero recordatorio

When the reminder column displays a new reminder icon, hold the column and swipe down, then the reminder board will open.

3 Quick Start Guide

3.1 Key function

Keys Function description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home)	Click it in any interface will return to main interface.
Back button (back)	click it in any interface will return to previous menu
Setting button 	display recently browsed history

3.2 Starting and shutting down

Start-up


Press and hold the ON key for three seconds, you can enter the boot image. The system enters the lock screen state, please unlock it. Turn off

1. Press and hold ON, a shutdown pop-up window will open.
2. The shutdown window contains mute mode, airplane mode, reset mode and all four shutdown options.
3. Click Shutdown is the last step.

3.3 Wake up screen and sleep

The screen will close automatically when no operation occurs.

1. The screen will close on its own if no operation is performed for some time to save the battery.
2. When the screen is open, press the ON key, the screen will close immediately. Activation screen when closed.

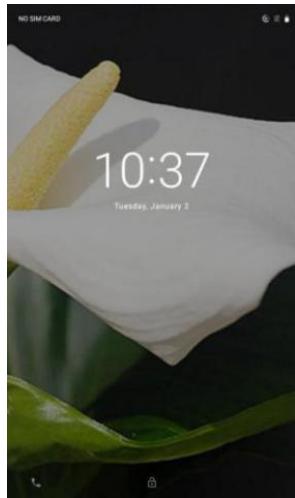

If the screen is closed, briefly press the ON key to open the screen. The screen will lock, open it, display the image as below screenshot shown, swipe left to unlock and enter the camera, swipe right the unlock icon to unlock the screen.

3.4 Using the touch screen

TABLET PC operating methods

Below are the methods for viewing the main screen, menu and application procedure on your TABLET PC.

Click

When you want to use the keyboard screen typing or choose the app on the main interface, you just need to touch it with your finger.

Keep going

If you want to open any elements (text box or link on the web page), or shortcut and move from the main procedure, you can click on this element.

Swipe or slide quickly

Swiping or swiping quickly indicates fast vertical or horizontal movement with your finger.

Pull

Before pulling, you must hold it tightly until you place it in the position you want. For most images, you only need to rotate the TABLET PC sideways to change the display direction from horizontal to vertical. For example, when you're typing words and watching movies.

3.5 Home

Main interface as shown in Image 3.2,

press and hold the white space and hold the white space and hold the white space and pop-ups will appear to configure the wallpaper, folder, widgets and shortcut.

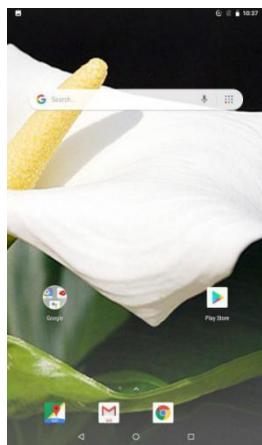


Imagen 3.2

4 Basic Configuration

4.1 Wireless and Internet

1. Connect Wi-Fi

1) From the main menu or interface, choose the configuration application for the procedure.

2) Click WLAN, open Wi-Fi, TABLET PC will automatically search for available Wireless Wi-Fi Internet. As picture 4.1

3) Choose the Wi-Fi internet you want to connect to, if you have password the password window will appear, enter the password, click Connect.

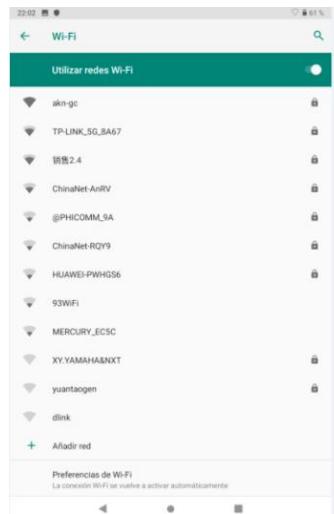


Imagen 4.1

4.2. Add network

1) Click the icon  AKN in the top right, as in Figure 4.2

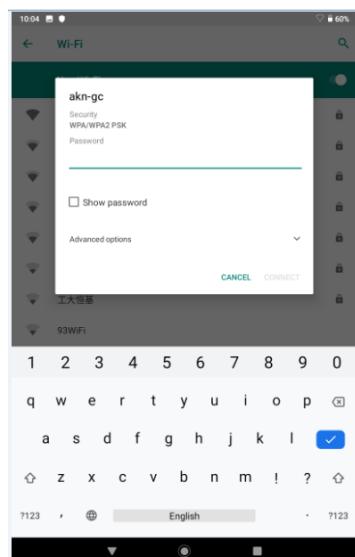


Imagen 4.2

- 2) Enter the network SSID, the wireless network name, click Save.
- 3) Click the already saved username, click Connect to use the network.

2. Network notice

If you open Network Warning, when the WIFI signal appears, the bottom right reminds you of the available WLAN network.

3. Keep WI-FI on during sleep.

1. Click the icon  at the top right of Figure 4.8, select Advanced.
2. Click Keep WI-FI on during sleep, as in Figure 4.2.

4.3 Bluetooth

How the Bluetooth function works

1. Click the settings app in the main menu interface
2. Click Bluetooth and open it.

3. Si alguien abre Bluetooth en su entorno, Click Search Device in the top right, then the TABLET PC will automatically search for the nearby Bluetooth device.

As in Image 4.31

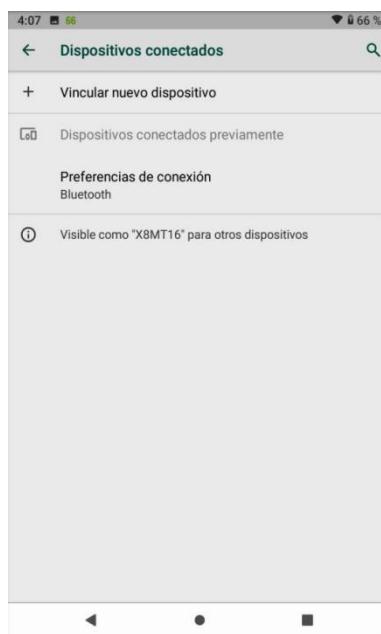


Imagen 4.31

4. Click OK after adjusting the brightness.

4.4.2 Automatic rotation

The system is default as open auto rotation, when turned off, the system will not rotate the tablet PC screen with the G sensor.

4.4.3 Sleeping

1. Click the settings application.
2. Click Show.

3. Click Sleep

4. Set the desired sleep time, as in Figure 4.43

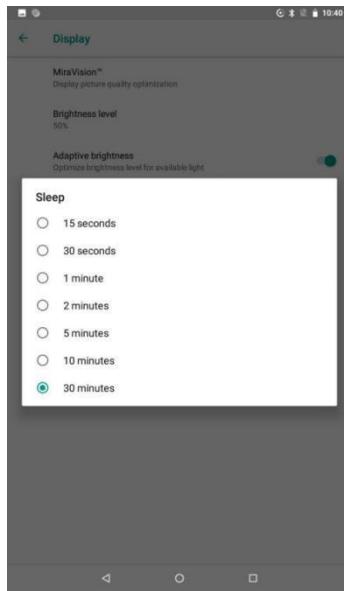


Imagen 4.43

5. Music

Enter the music player: in the menu or on the desktop, click the



music icon Play Música to enter the music player, click the music you want to play, as in Figure 5.1:

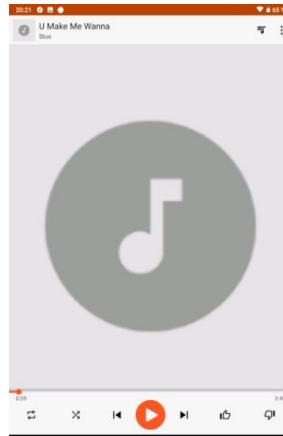


Imagen 5

- Drag the progress bar to adjust the playback progress.
- Music player button operation as image 5.1

5.1 Video

5.2 Ingest to the video player choose the app from the main menu,

choose the  video you want to play.

Operation of the video player button as image 5.3

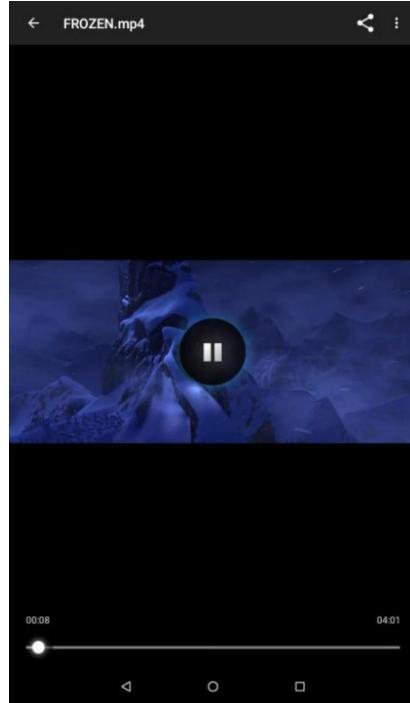


Imagen 5.1

5.2 Photo gallery

The photo gallery app can automatically search for photos and video files on SD card, it will also sort these photos and videos into the folder.

You can use the photo gallery to view and edit photos, set photos as wallpaper and watch videos.

View photos

1. Click the gallery application in the main interface.
2. Go to the gallery and click the folder you want to view.
3. Click on the image you want to view, the system will play it in full screen mode automatically.

4. The images can be zoomed in and out, put two fingers on the screen, separate your fingers (join your fingers, the picture will zoom in) or double click on the screen.

Note: When browsing images, swipe left or right to see more images.

Edit and configure images

When you check the images in full screen mode, click the menu key to display the menu selection, you can choose the selection you need to edit and configure the images

Slideshow

1. Open an image, use the virtual key to click the menu key, display the menu selection.

2. Click the slideshow, it will play automatically (or choose the  button in the pictures folder)

Trim

1. Click the menu key to display the menu selection.
2. Then click Crop, click and drag the related area to adjust the trimmer.
3. Click Trimmer and drag it in and out to adjust the image.
4. After adjusting the size you want, click Crop.

5. If you want to undo the crop, click Cancel to return to the image scan.

Edit

1. Click the menu key, display the menu selection.
2. Click Edit.
3. Adjust the brightness, style, color, smoothing settings in the selection.
4. Click Save.
5. If you want to stop editing, click the return key, click No to return to the image scan.

5.3 Camera

On the main interface or desktop, click the camera application procedure,



enter the camera

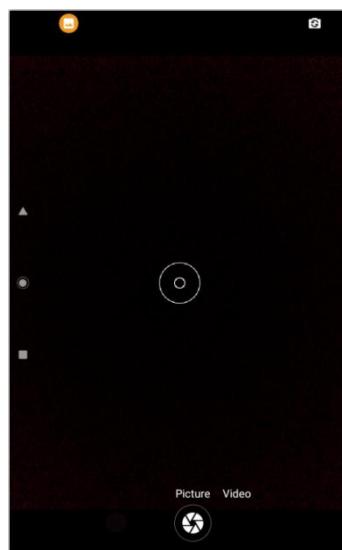


Imagen 5.3

6 Internet

6.1 Browser

If wi-Fi or mobile Internet is not properly connected (see Chapter 4.1 for wireless connection and internet settings), click the IE browser in the main menu or on the desktop to enter the IE interface, such as Image 6.1

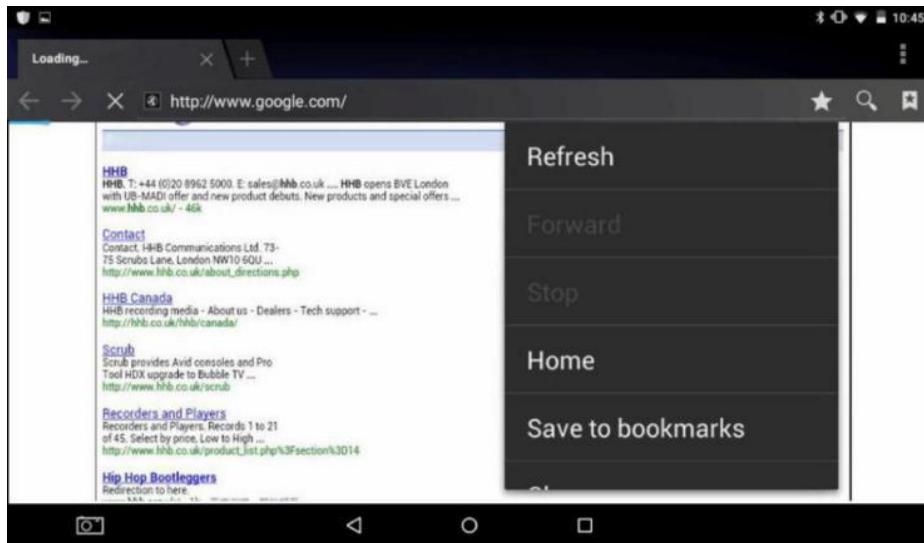


Imagen 6.1

Click the address bar to enter the website, click Start, enter the related web page, then you can browse the website information, as in Image 6.1.2 and you can click the menu to refresh, save to bookmarks, share page, bookmarks, history and web page settings.

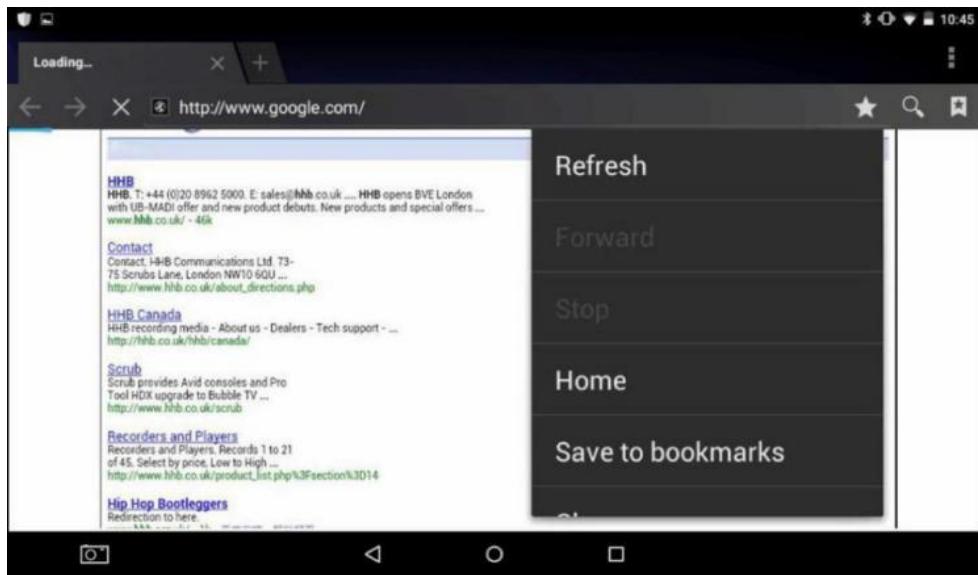


Imagen 6.1

Emergency call

If an emergency arises, dial 112/911 (or another emergency call number) for emergency assistance.

Due to the nature of cellular networks, the success of emergency calls is not guaranteed.

FCC Warning

a. § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b. § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c. § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- } -Reorient or relocate the receiving antenna.
- } -Increase the separation between the equipment and receiver.
- } -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- } -Consult the dealer or an experienced radio/TV technician for help.

d. Specific Absorption Rate (SAR) information:

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

e. FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet PC (FCC ID: 2ADVA-X8MT87) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.224W/kg and when properly worn on the body is 1.094 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

f. Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.