

145*180MM

28002

Wireless Over the Ear Headphone
INSTRUCTIONS



Features

- Wireless Headphones
- Wireless Speaker Phone Option
- FM Scan Radio Function
- Auxiliary Line-in Play Function
- TF Card Reading Function
- Mini USB Charging Cable and 3.5mm Line-in Cable
- Rechargeable Battery

Product Specifications:

Wireless Version:	V2.1+DR
Operation distance:	30 Feet
Range of frequency:	2.402 to 2.480MHz
Sensitivity:	+85 dB
MP3 PC interface:	USB2.0
Music format:	MP3/WMA
TF card support:	128M-32GB
Rechargeable lithium battery:	350mAh

Stereo headphone with MIC

Speaker:	φ40mm
Sensitivity:	115dB S.P.L at 1KHZ
Impedance:	32Ω
Frequency response:	20HZ-20KHZ
Rated power:	40mW
Power capacity:	100mW
Cable length:	4.5 Feet
Microphone unit:	4.5mmx2mm -58dB±3dB

Buttons of Operation (N\A for Auxiliary Line-In mode)

Power: Press and hold for 3 seconds to turn on or off.

<< / V- **Previous\Volume Down:** Press and release to go to previous song. Press and hold to decrease volume. In FM Scan Radio mode, search to the next station. Functions not available in AUX Line in mode.

>II / PAUSE\PLAY\PHONE: Press and release to pause/play music. Press and release to answer/end call. Press and hold for 3 seconds twice to redial the last call.

>>I \ V+ **Next\Volume Up:** Press and release to go to the next song. Press and hold to increase volume. In FM Scan Radio mode, search to the next station. Functions not available in AUX Line in mode.

M Mode: Press to toggle between Bluetooth®, Aux Input, TF Card, and Scan Radio Functions.

Charging the Headphones

Plug the mini USB end of the charging cable into the headset and then connect the USB end of the charging cable to the USB port of your PC or other USB power source. The red LED light will light up during charging. It is strongly recommended that the headphones be fully charged before first use and after long periods of inactivity.

Turn On\Off

Press and hold the power button for 3 seconds to turn on. To turn off, press and hold the power button for 3 seconds.

Please Note: It is strongly recommended that you turn off the headset and Bluetooth® on the device while not in use.

Wireless Pairing

1. Please check to make sure the device to which you are pairing has Bluetooth® capabilities. This information should be included in your phone or music player's instructions or packaging.
2. Make sure that the headset is turned off.
3. Place the headset and the device in proximity so that both devices are in view.
4. Press the power button to turn on. A blue and red light will alternately flash and the voice prompt will let you know the device is ready to pair.
5. Check your smartphone or music player's list of items available for pairing. Select the headphones and complete the pairing.
6. Once paired, the blue light will stay on solid and the voice prompt will let you know the devices are connected.

Note: Some mobile phones or other devices may pair automatically when re-started.

Answer / End / Redial a Call

When a call comes in, the ring will be heard through the headset.

1. Press the Pause\Play\Phone button >II / PAUSE\PLAY\PHONE to answer the call.
2. You may also accept or decline a call using your phone's functions.
3. To end a call, Press the Pause\Play\Phone button >II / PAUSE\PLAY\PHONE. You may also end the call using your phone's functions.
4. Redial the last dial-out number: On standby mode, press and hold the Pause\Play\Phone button >II / PAUSE\PLAY\PHONE twice.

Auxiliary Line-In Mode (Plugging in a phone or music player)

Plug one end of the provided 3.5mm AUX cable into the smart phone of music player's headphone or speaker jack and plug the other end into the TEK163. The headphones will automatically switch to Line-In mode. Operate the song selections and volume from the smart phone or music player. The mini USB cord may also be used to connect to USB devices for headphone use.

Please Note: Volume, Pause\Play, Next, and Previous song function buttons are not available in AUX Line-in mode. (Use your music player controls.)

FM Scan Radio Mode

1. Press the mode (M) button until the speaker says "FM Tuner".
2. Press and release the pause\play\phone button to cycle through stations. To stop scanning, press one of the seek buttons and then use them to find the desired station.
3. Use the next or previous buttons to find a station.
4. Press and hold next or previous buttons to control volume.

TF Card Mode

Plug the TF Card into the slot and use the Bluetooth® protocols for the button functions.

Precautions

- Please only use the computer USB or the DC 5V power adaptor matching the Mini USB interface to charge. Only use quality cords and adaptors.
- Please keep and use in normal environments. Exposure to extreme elements such as extreme heat and cold, fire, excessive moisture, dust, or other extreme elements may damage the unit. Do not touch with wet hands.
- Keep debris or other items from blocking the speakers or from entering any of the ports.
- Do not attempt to open, repair, or take apart the headphones. The headphones will be damaged during that process.
- If the speaker quality seems lessened, or a popping noise is heard, it may be due to low battery. Please recharge the speaker.
- This product is not for children.

TROUBLESHOOTING

No Sound

- Make sure that the music player is working and that the headphones are charged.
- Make sure the Bluetooth® is paired or the AUX 3.5mm cable is plugged in properly on both ends.
- Make sure the TEK163 is in the proper mode. If in FM Scan Radio mode, you may have to press the Next\Previous or Scan button to find a station.

Not charging

Check to make sure that you are using the correct cable and that it is fully plugged into both the device and the USB port that you are charging from. Also check to make sure the PC or other USB charger is turned on.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.