

## Battery Installation


Wireless keyboard use one AA alkaline batteries.

### Battery Installation Procedure of Keyboard

**Step 1:** Open the cover of battery compartment on the right cover of keyboard by squeezing in front of the tab.


**Step 2:** Insert one AA batteries into the battery compartment as the picture at right side.

**Step 3:** Close the battery cover.

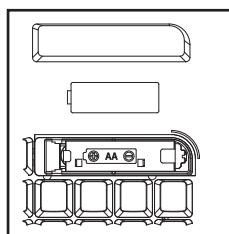

## USB Wireless Receiver Connection

Plug in the receiver unit into an USB port of connector.

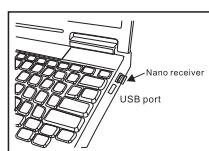

## Keyboard Hotkeys

FN+ESC=Media Player

FN+F1=Play/Pause

FN+F2=Previous Track

FN+F3=Next Track

FN+F4=Volume Up

FN+F5=Volume Down

FN+F6=Mute

FN+F7=Web/Home

FN+F8=Search

FN+F9=Favorite

FN+F10=Mail

FN+F11=Keyin Lock

FN+F12=My computer

FN+Insert=Calculator

1

2

## FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.


Model:SK-048AG

## Instruction Manual

FR 2.4G Hz Auto-Link Keyboard



## Keyboard light

The keyboard has two blue led, caps lock and digital lock key respectively

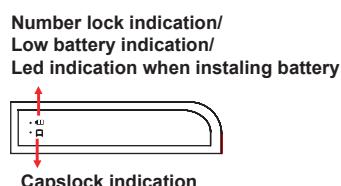

## Restore Factory Settings

 Restore keyboard setting back to the factory default settings: By press the "Esc" key and "K" key together at the same time, and then re-insert the USB receiver into the USB port of the computer

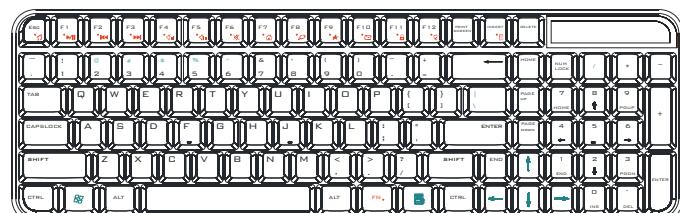

CAUTION: To use this device properly, please read the user's guide before installation.