SENIORSimple USER MANUAL



Table of Contents

Getting ready to use the device	4
What's inside the box?	4
Product Appearance	6
Quick Start Guide	7
Charging the Battery	7
Power On and Power Save Mode	8
Power off	9
Introduction to Home screen and main menu	10
Using the UbiSlate7CZ as a phone	11
Inserting a SIM Card	13
Bluetooth Pairing	14
The Status Bar & Icons	15
Shortcut menu	17
WIFI Settings	18
Using the Touch screen	19
Using MicroSD Cards	20
The UbiSurfer Browser	21
UbiSurfer Dual Browser Comparison Chart	22
APK Installation	24

Uninstalling APK Applications	24
E-mail (Ubimail)	25
Camera	25
File Manager	27
Multimedia Players	28
MUSIC	29
Super-HD Player	31
Set Date and Time	32
About Tablet	33
Device	34
Personal	34
Connect to PC	35
Troubleshooting	36
Important Safety Information	37
Radio Frequency Information	40
Safely disposing of the Device	42

Getting ready to use the device

What's inside the box?





C

WARRANTY CARD Ubislate Limited Warranty

This Ubislate ("product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

1. The limited warranty for the Product & Accessories extends as per given table below from beginning on the date of the purchase of the Product.

Tablet & Handset	Battery / Charger / Other Accessories	
12 months	6 months	

2. The limited warranty extends to the original purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent purchaser/end user.

3.The limited warranty extends only to Customers who purchase the product in the US.

4.During the limited warranty period, DataWind Ltd will repair, or replace, at DataWind's option, any defective parts, or any parts that will not properly operate for their intended use with new or factory rebuilt replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Customer for any such parts. DataWind Ltd. In repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including farming, and any non-operative parts. DataWind's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Customer returns the product for repair, determined by the price paid by the Customer for the product less a reasonable amount for usage. DataWind Ltd. shall not be liable for any other losses or damages. These remedies are the Customer's exclusive remedies for breach of warranty.

5.Upon the request from DataWind Ltd., the Customer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.

6.The Customer shall bear the cost of shipping the Product to DataWind Ltd. DataWind limited shall bear the cost of shipping the Product back to the Customer after the completion of the Services under this limited warranty.

The Customer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable: a)The product has been subject to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of DataWind Ltd., including damage caused by shipping

b)The product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, or damage caused by the connection to other products not recommended for interconnection by DataWind Ltd.

c)DataWind Ltd. was not advised by the Customer in writing to the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.

d)The Product serial number plate or the accessory data code has been removed, defected or altered.

e)The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna.

8.If a problem develops during the limited warranty period, the Customer shall take the following step-by-step procedure: a)The Customer should call DataWind Customer Service on 1 855 DATAWIND and explain the problem experienced. If it is not possible to solve the problem over the phone and a defect is confirmed, DataWind Customer Services will issue Customer with a RA (Returns Authorization) number. DataWind Customer Service is openbetween the hours of 9:30am to 6pm, EST, Monday to Friday.



A: Mobile Internet Device


B: AC Adaptor


C: Easy Start Guide

D: Warranty Card

The use of non-approved hardware accessory items or unapproved software may cause damage to the product or malfunctions not covered by the manufacturer's warranty.

Product Appearance

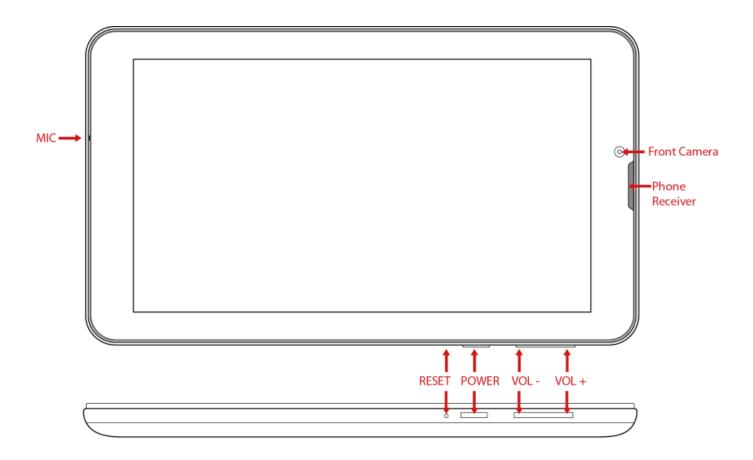

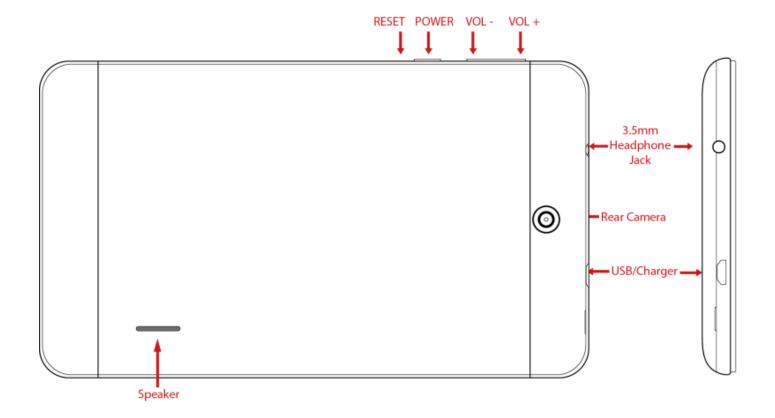

Quick Start Guide

Charging the Battery

- Your device has a built-in battery. Before using the device for the first time, you must charge the battery for at least 6-8 hours.
- Use only Datawind approved chargers. Unauthorized chargers may cause damage to your device and/or may lead to overcharging and/or explosion.
- Your unit uses a standard USB port for charging the battery. Use the supplied USB cable to charge either from the AC adapter shipped with the unit or from a

Computer USB port.

- To charge your battery you first plug the mating end of the cable into the USB port of the tablet, then the other end of cable into the AC adapter.
- Once cable is securely plugged into both tablet and AC Adapter, then only plug the AC adapter head into a standard AC outlet.
- After charging is complete, unplug the charging head from the power outlet and remove the USB cable from the tablet.

Note: It is best to charge the device at room temperature. It is not necessary to wait until the battery is completely drained before recharging, you may charge at any time. Also, the battery will maintain its lifespan longer if it is not left uncharged for periods of more than 2 weeks at a time.

Power On and Power Save Mode

Press and hold " " button for 3 seconds to power on the device. It can take up to a minute and half to boot the system. After system boot is completed, it will enter Android desktop. Start using the device.


You can turn off the screen to save power by shortly

pressing the power " " button. The screen will turn off. Repeat the process to reactivate the device.

Power off

Press and hold "U" button for 3 seconds. A menu will appear confirming that you would like to power off.

Choose your desired option by tapping the corresponding item on the screen or Tap Cancel to exit to previous operation.

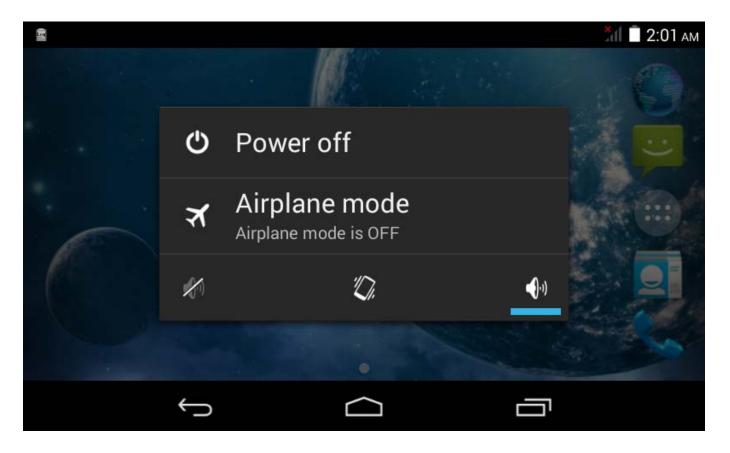

Note: When the device's battery is low, it will send continuous alerts and will shut down automatically when the battery is empty. If the device fails to power on, please plug it into an outlet to first check if the battery is empty. Please recharge the battery for at least one minute before attempting to restart the device.

Introduction to Home screen and main menu






- Swipe left and right to see the entire apps on the main menu
- Launch desire app by touching its icon
- You can drag and drop your favorite apps on the home screen

Using the UbiSlate7CZ as a phone


• Your UbiSlate7CZ is also a phone which works on quad band GSM 850/900/1800/1900Mhz frequency spectrums.

- It comes with Bluetooth connectivity to pair with headsets and/or also will work through speakerphone or headset connections.
- You must insert your valid GSM SIM card into the SIM card slot while the device is powered off in order for it to function correctly.
- Dialing, disconnecting and contact lists function like your standard mobile phone.

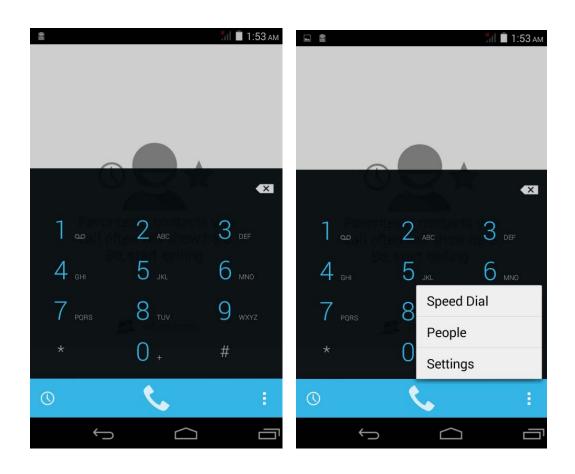

Inserting a SIM Card


- SIM cards would be supplied by your local phone operator.
- It is the use of these SIM cards that allows you access to the network for surfing the web and to use the UbiSlate7CZ as a Phone.
- There is a SIM card slot at the top of the device beside the MicroSD Card Slot.
- Insert the SIM Card so that the notch enters the device first and the gold contacts are facing the back of the device and the UbiSlate7CZ logo.

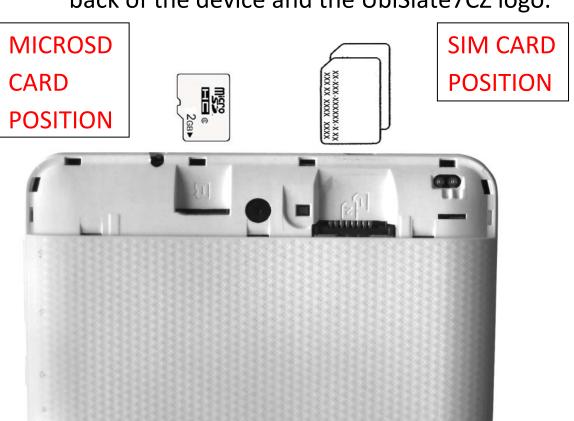


Bluetooth Pairing

Pairing your UbiSlate7CZ to your Bluetooth headset may differ for every headset; however the premise of searching for Bluetooth devices by the UbiSlate7CZ is fairly universal. A pairing system will then usually require passwords entered on both devices to finalize the pairing. Usually this pairing will only have to be performed once.

Setting>>wireless & networks>>Bluetooth

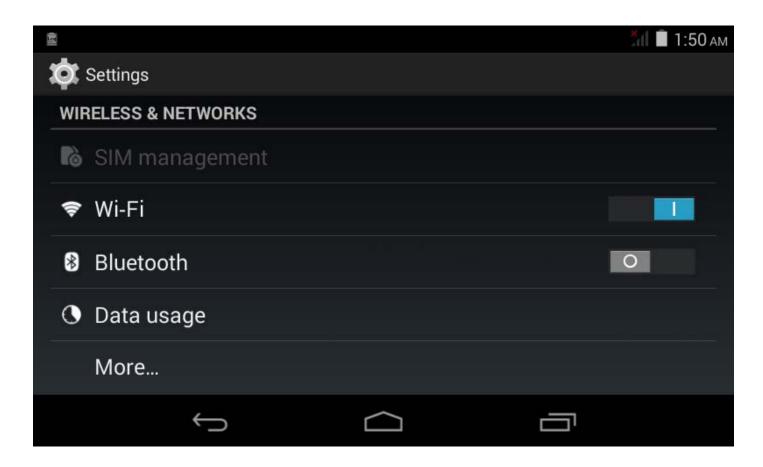

The Status Bar & Icons

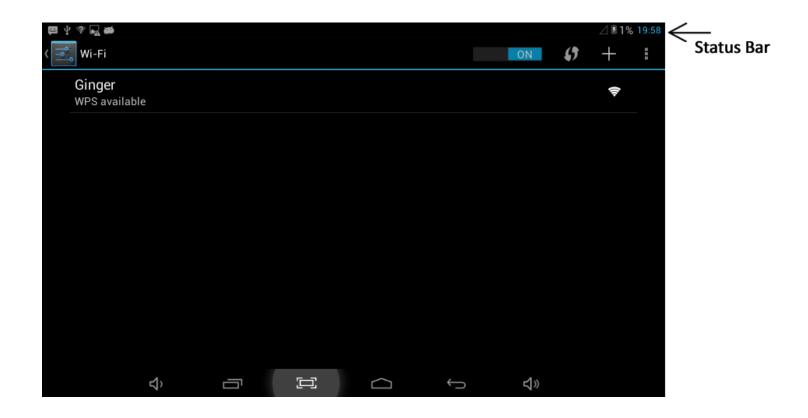

The status bar is located on the bottom of the desktop.

- ☐ Home Page Tap to return to the desktop☐ Back Tap to return to the last screen
- Recent Apps Tap here for a list of recently opened applications
 - Applications Tap here to go to the application menu

MicroSD - This icon appears when a MicroSD card is inserted into the device

USB - This icon appears when a USB device is connected to the device

Android - This icon appears when the device is connected to a PC

Wi-Fi - This icon appears when the device is connected to a Wi-Fi network

5:46 Time - The current time is listed at the bottom right of the main screen

Battery - This icon displays the level of battery power remaining

Search - This icon will launch a search engine


Internet - This icon will launch the UbiSurfer Internet Browser



Bluetooth - This Icon appears when Bluetooth is

Shortcut menu

- Tap "Wallpaper" to select new wallpaper for the home screen.
- Tap "Manage apps" to go the list of installed applications where you can modify, add or remove them
- Tap "System settings" to go to settings interface

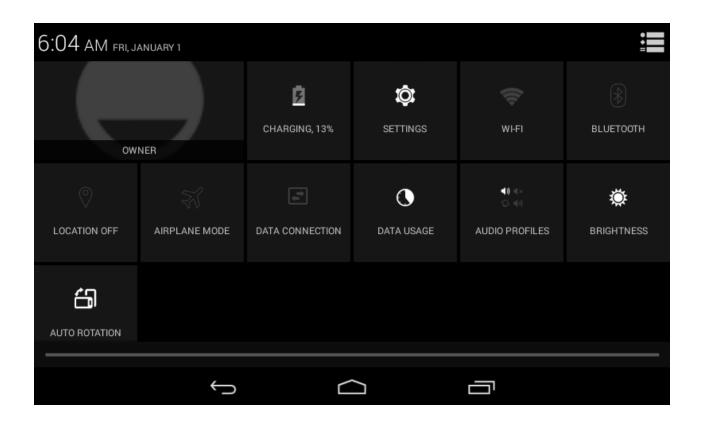


WIFI Settings

From the desktop, Tap the applications icon " and tap on "Settings" followed by "Wireless & networks" to enter the wireless settings page.

Setting>>wireless&networks>>Wi-Fi

Tap or slide the box at end of the Wi-Fi bar to the right to turn on Wi-Fi and do the reverse to turn it off. Go to Wi-Fi settings to select the appropriate Wi-Fi network from the list of Wi-Fi networks and follow the instructions to enter the password assigned by the Wi-Fi network provider. Enter the assigned IP address information if the chosen network requires such information in order to obtain their Wi-Fi network (please contact the Wi-Fi network provider if a password or IP address is required for Wi-Fi access).

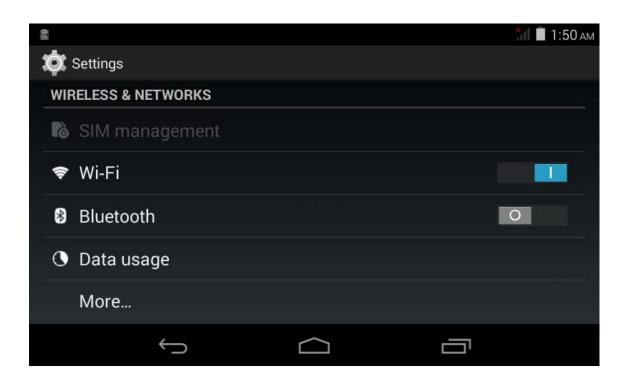

Using the Touch screen

Your device comes with a responsive touch screen which works as follows:

- **Tap:** To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply tap them with your fingertip or compatible stylus.
- **Double Tap:** Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.
- **Drag and drop:** Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip/stylus, move your fingertip/stylus on the screen until the item reaches its target destination.
- **Swipe:** Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip/stylus across the screen without lifting your fingertip/stylus. Do not pause on the screen with your fingertip/stylus at the initial point of

contact or you may accidentally drag an item instead.

• **Tap and hold:** Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip/stylus until the action occurs. Tapping and holding an icon will allow you to move it once it appears large.

Note: It is very important that you do not touch the screen with a body part or any foreign object while switching on the device as this may interfere with the proper functioning of the device. To avoid damage to the touch screen, do not use sharp tools. Do not allow the touch screen to come into contact with other electrical devices, or water. For optimal use, remove the screen protection film before using your device.

Using MicroSD Cards


MicroSD Cards are storage spaces used to transport files from one device to another. This device supports many different types of cards up to 32GB in size, however not every MicroSD card will work in the device.

To insert the MicroSD card, simply push it into the device (it can only fit in one way, with the gold contacts facing up

towards the side with the touch screen). To remove the MicroSD card, you must first go into System Settings (by tapping ":" shortcut, then tap "Storage" and scroll down on the right hand side until you see Unmount SD card. Accept the Unmount and then push down on the top of the MicroSD card and it will pop back up to be removed. To access files on the MicroSD card, use the "File Manager" application described below.

The UbiSurfer Browser

The UbiSurfer Browser is the main browser on this device. Using this browser will speed up your surfing experience and can be used anywhere there is a Wi-Fi or GPRS data.

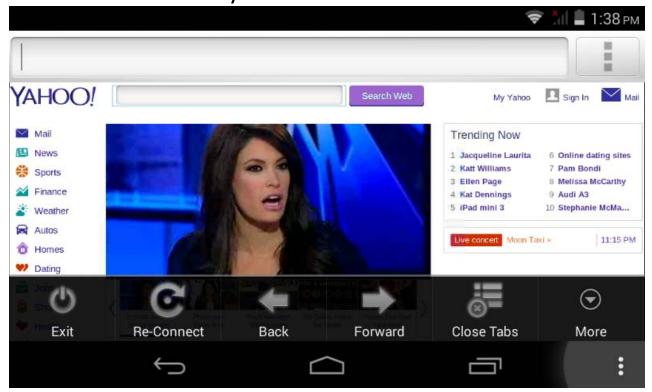

UbiSurfer Dual Browser Comparison Chart

Features	UbiSurfer Browser	Android Browser
Email	√ (Online)	√ (Local)
Web Surfing	V	V
Web Acceleration	V	
Instant Messenger	V	٧
Social Networking	V	٧
Online Banking	V	٧
News/Weather/Sports	V	٧
Graphics	V	٧
Attachments		
PDF	√ (Online)	√ (Local)
MS-Office	√ (Online)	√ (Local)
Audio		٧
Video		٧

To connect to the Internet via the UbiSurfer browser, click on the Internet UbiSurfer icon on the Home Screen or via the menu system.

To enter URL's, simply click on the address bar and type it in and click on enter. For example, if you wanted to visit a site like the Google UK web page, simply type www.google.co.uk and click GO. The Google UK homepage will appear on the screen. Note that www and .com are defaults so if you want to visit the web page www.facebook.com, you just have to type in Facebook

and then click GO.

On occasion, you may find multiple windows open. The number of open windows is written in a box at the top of the screen. If the number is greater than 1, you can close ALL extra windows by clicking Menu / Stop.

To add the website which you are currently on to your bookmarks, click on the favorites button at the top right side of the screen next to the address bar. Then click on Add and give it a name. From this menu system, you can also organize your favorites, access My Account from which you can add extra surfing time and roaming time (may not be applicable in all countries), but also My Settings from which you can adjust things like image resolution. Other Functionality can be found in the menu system.

This includes:

- Exit: To close the program
- Back: To revert back to the last web page you were on
- Forward: To go to the next website
- Refresh: To refresh the page that you are currently on
- Stop: To stop loading the web page and to close all Popups
- Home: To revert back to the UbiSurfer Browser Home
 Page

 More: To toggle between windows, show browser history, and access system settings

Note: If you are inactive for several minutes, the browser will give you a 60 second warning before disconnecting your session. Minimizing the application DOES NOT close it. To exit, you must click Exit.

APK Installation

This device supports third party Application Program .APK files. There are hundreds of thousands of applications (programs) that can be downloaded from the internet. Some are free and some cost money. Download the APK file from the internet and copy it into the device directly or store it inside a MicroSD card and insert it into the device. Use the File Manager application in the SD card folder (or wherever you have saved it) and tap on the file. Follow the instructions to install any compatible application to the device.


Uninstalling APK Applications

From the application menu, tap on "Settings" and select "Applications" from the list. Tap on "Manage applications" and you can see a list of installed applications (including factory default applications).

Tap on the application that you want to uninstall and follow the instruction to uninstall the applications.

E-mail (Ubimail)

This device has an application called UbiMail which can be used to send and receive e-mails from almost any POP or IMAP e-mail address. Following the instructions when you open the application will allow you set up and use this program easily. Note that if you ever received a pop-up message as per below, click the check box at the bottom to use the Ubimail application by default for this action.

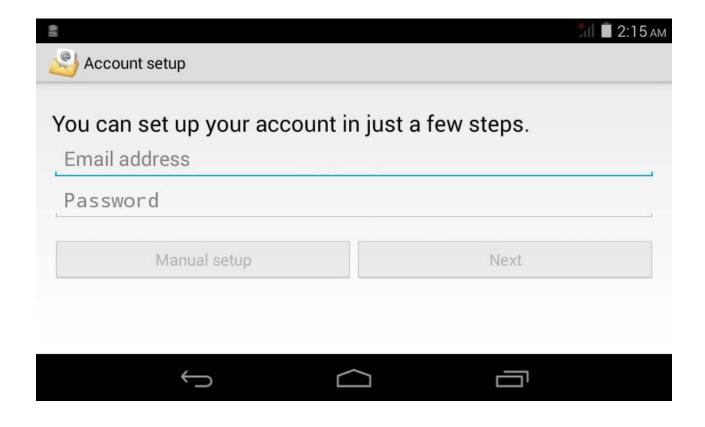

Camera

This device has a built-in 0.3MegaPIXEL front camera and a rear-facing 2.0MP camera for photo or video.



In the application menu, tap the camera icon to enter the camera interface.

Select either photo or video mode by tapping the preferred icon

In photo mode, tap on

to take a photo.

In video mode, tap on and


to start a recording

Tap on

to stop recording.

You may exit the Camera interface by pressing the back button to return to the application menu.


Tap on camera, it will show the list of the recorded videos and image files in a small icon. Tap the file that you want to view to start. For photo viewing, the function bar provides options such as enlarge photo, reduce photo, slideshow, share, delete, crop, rotate left, rotate right, etc for your selection.

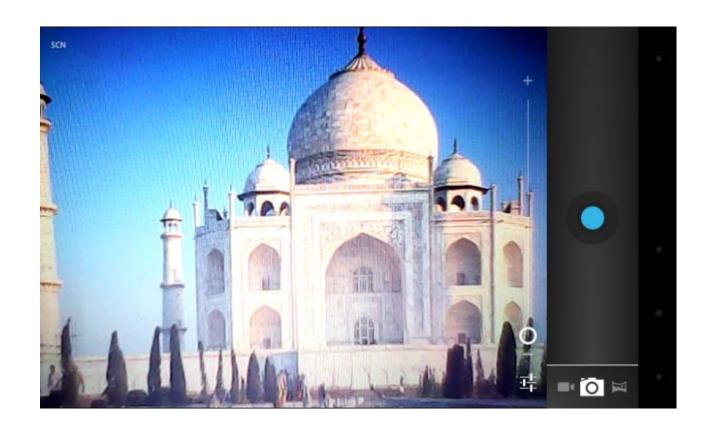

File Manager


From the application menu, tap "File Manager" to enter the list of files saved on the device including the file you just recorded and saved using Voice Recorder or pictures or videos from Camera.

Note: You can also open, rename, move, install, delete and e-mail all files stored on the MicroSD card or USB device or by category in File Manager.

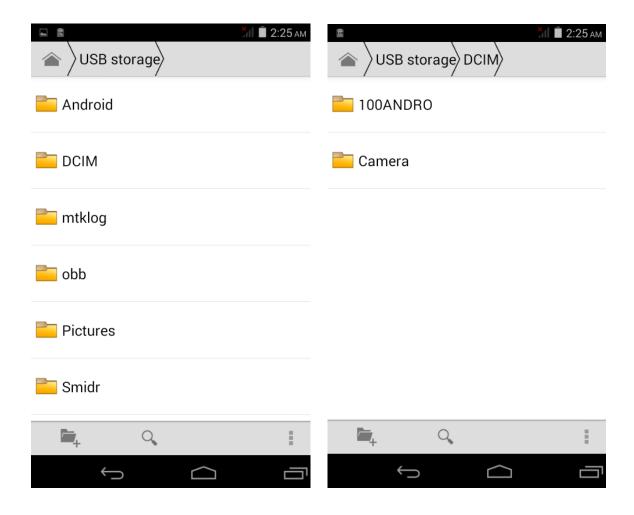


Multimedia Players

There are some preinstalled multimedia applications on the device as follows:

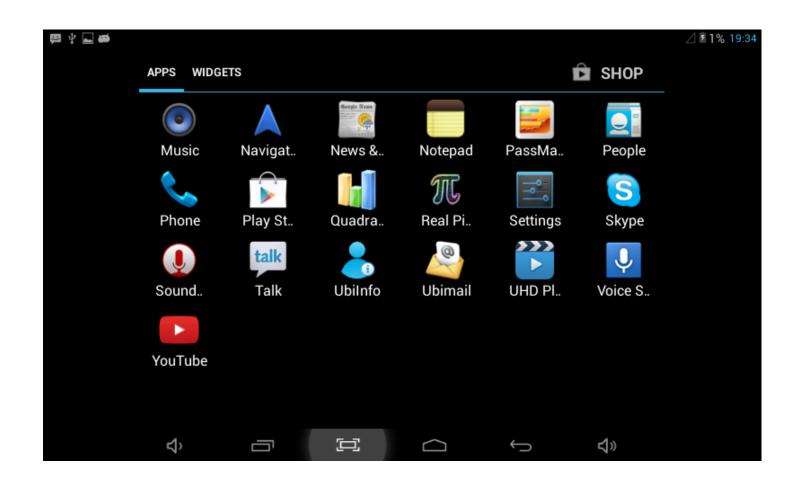




Go to application menu, tap on "MUSIC" to enter the music playback interface. Only music files that are stored inside the device will be shown in the file list. You can classify the music file list by: RECENT, ALBUMS, ARTISTS, SONGS, PLAYLISTS or GENRES by selecting the appropriate option.

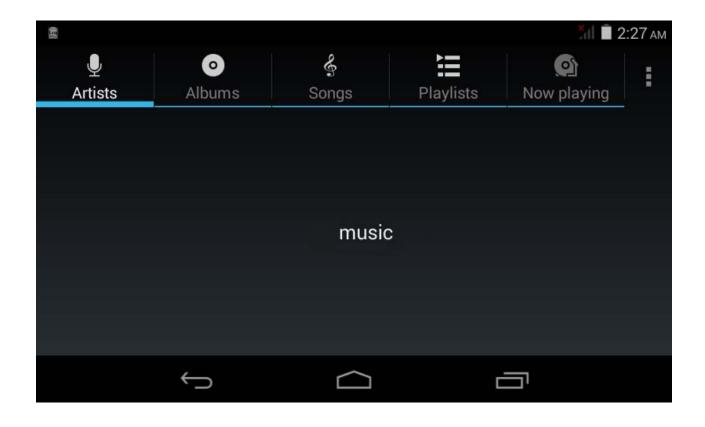


Tap the song for 1 second, the option menu will pop up. You can select Play, Add to playlist, Shop for Artist, Delete or Search.

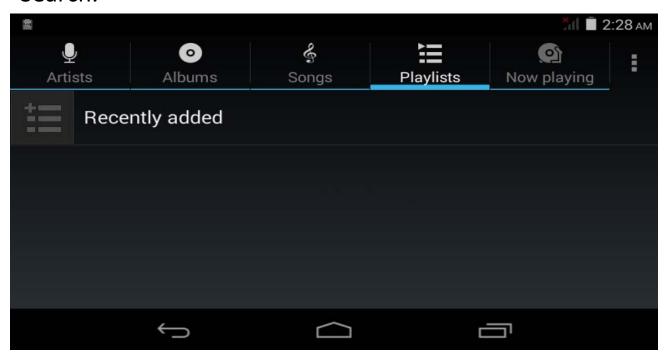

Tap "Play" to enter the playback interface and start music playback or you may also tap the song name directly. On the playback interface, you can tap on the function bar to adjust the playback time, backward, forward, play, pause, shuffle, or repeat.

Super-HD Player

Go to application menu, tap on "Super-HD Player" to enter the Super-HD Player interface and it will show how many image and/or video files are available inside the device.

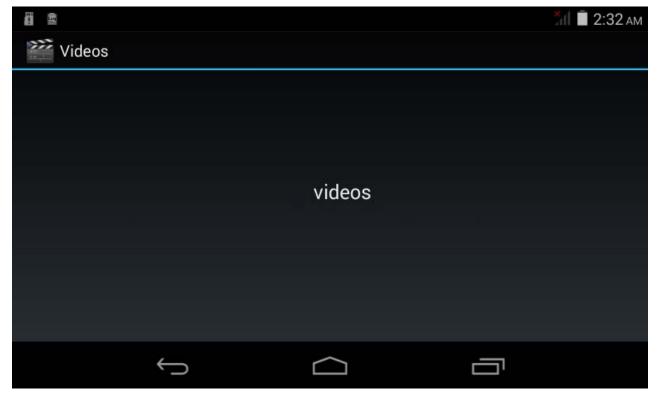

Tap on video, it will show the list of the video files in a small icon. Tap the file that you want to view to start playback. You can adjust the volume, play/pause, backward, forward, go back or go to submenu for more setting options by tapping the appropriate icon on the function bar.



Function bar


Set Date and Time

From application menu, tap on "Settings" and select "Date & time" from the list. Tick on "Automatic" and the date and time will be set automatically by using network-provided values or untick "Automatic" to set the date and

time manually. You can also adjust the time zone, set it to 24-hour time format and/or adjust the date format by tapping the appropriate options provided.


About Tablet

From the application menu, tap on "Settings" and select "About Tablet" to check the device status such as the firmware version, battery consumption status, model no., and Android OS version.

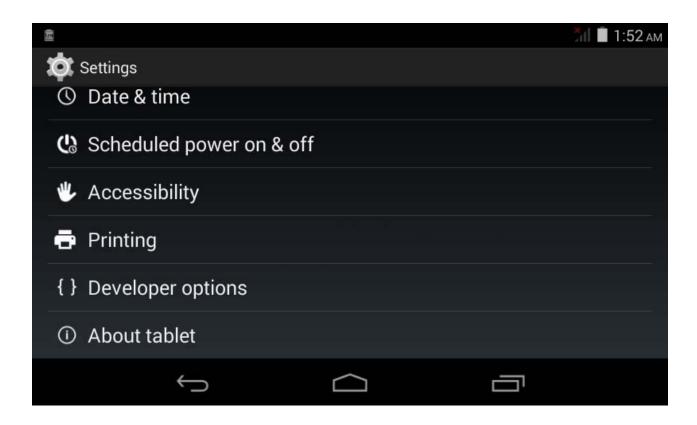


Device

- Set Audio profile and Display setting as you like
- Check storage, Battery status and Manage Apps

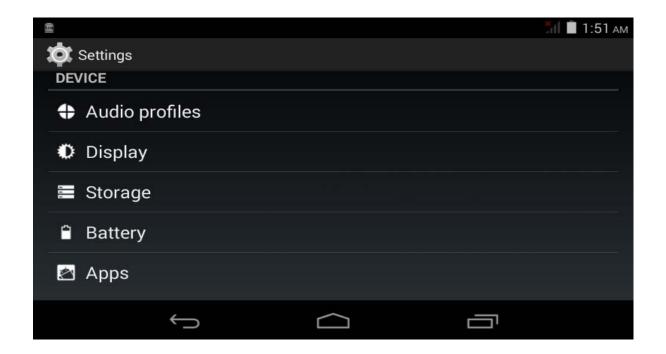


Personal

- Set your location as required
- Set your security setting as you like
- Set your preferable language and keyboard setting as you need
- Access the backup & reset

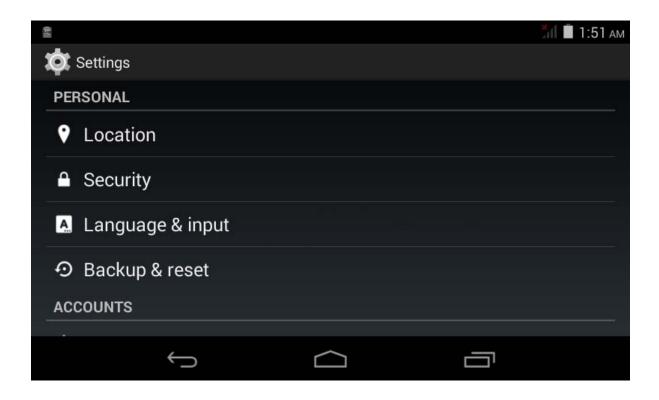

Connect to PC

Use USB cable to connect your tablet with PC and select USB storage and select USB options you like

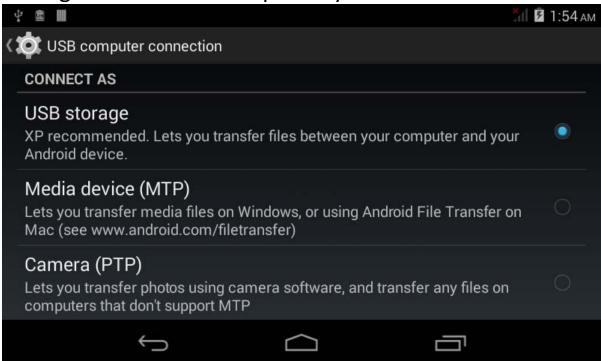

Troubleshooting

- This Ubislate7CZ is a capacitive touch screen device. It requires a simple connection between your finger and the screen in order for the touch to be registered. At times instead of using your finger, a stylus made for capacitive touch screen devices may be used. Do not use a pointy object or one that could scratch the surface of the device.
- Should you find that the software on the Ubislate7CZ does not respond to any commands, refuses to turn off or on, or any hardware component is not functioning properly, you may have to do hardware reset. This is accomplished (after turning off the device if possible) by inserting a pin into the reset key on the underside of the Ubislate7CZ and pressing the pin until the reset pin clicks.
- If your device is not powering on try following things:
- -Depress the power button until you feel a slight click then hold for 2-3 seconds. Do not force the button beyond the click, as you risk damaging it.
- -Plug in a charger, keep it charged at least 20minutes and try again.
- -Execute a hard reset of the unit (using a pin through the reset hole)
- If the powering on process does not complete reset the unit and try again.
- At very low battery charge, the Wi-Fi module may stop working before the device. To continue using the Wi-Fi module, the device should be plugged in to a charger. If

the Wi-Fi has stopped responding, you may need to power cycle the unit and keep it on the charger for an hour.

- If there is no sound coming from the speakers, check to see that the volume level is not set to 0, or check whether or not the audio file that you are listening to is not damaged by using it on another device or trying other files on this one.
- If you are having trouble copying files, check to see if your PC connection is set up properly, if the USB cable is properly attached, or whether there is enough available memory capacity on the drive in question.
- If your device ever requires a hard RESET, please press and hold the ON/OFF button for at least 5 seconds. This will not delete saved information, only reset the device.

For troubles that are not be resolved by reading this manual, please do not hesitate to contact our customer service team.

Important Safety Information

- Please remember to follow regulations governing the use of your Ubislate7CZ. Always turn off your device whenever its use is forbidden or when it may cause interference or danger (i.e.) hospitals/ aircraft/ petrol stations, etc.
- All safety laws and regulations pertaining to the use of

cell phones and two-way radios will apply to your use of the Ubislate7CZ. We advise you to follow these Laws and Regulations when using the device.

- If at all possible, use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter
- Make sure that the Ubislate7CZ has a low SAR
- Keep your calls short or send e text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
- Telecommunications standards prevent the sale of mobile phones that exceed a maximum exposure level known as SAR of 1.6W/kg. To find the maximum SAR value during testing of this model, dial *#*#727#*#*.
- Use the phone feature when the signal quality is good.
- Keep the device away from strong magnetic fields to avoid damaging the product
- Do not let the device fall or rub or make hard contact with any solid objects at any time. It may cause surface scratches, displacement of the battery, and loss of data or damage to the hardware inside.
- Never leave this product exposed to a humid environment or rain as the water can cause permanent damage to the hardware inside.
- Never clean the device with any chemicals or detergents which could cause permanent damages to the device surface.
- It is recommended not to use the headset continuously

at high volume. Volume levels should be adjusted to an appropriate level to avoid permanent hearing damage.

- Do not cut off the power abruptly during software updates or during download or it may result in data loss and/or system errors.
- Over-voltage, power cable strain, bending or squeezing by heavy objects is not recommended to avoid overheating or risk of fire.
- To eliminate the risk of electric shock; do not connect the cable power plug with wet hands.
- Some movies, music and pictures are under copyright protection, unauthorized usage is deemed as infringements to copyright laws.
- The performance of the wireless reception of the device could be influenced by the wireless equipments and networks.
- Do not use the device at gas stations, nearby fuel and/or chemicals.
- Please comply with any related restrictions and rules.
 Do not use the device where blasting operations are in progress.
- Only qualified maintenance personnel are allowed to install or repair the device.
- Please use the original accessories and battery. Do not use incompatible accessories on the device.
- For the sake of data safety, please back up any important information on the device or keep a

handwritten record.

- When connecting with other devices, please read the user manual for detailed safety instructions, please do not connect it with any incompatible products.
- The Ubislate7CZ and its accessories may contain small parts. For safety purpose please keep them out of the reach of small children.
- Some parts of the device may be magnetic in nature. Metallic materials may be attracted to the device. As a precaution, persons with a hearing aid or implant should not hold the device close to the implant or the ear with the hearing aid. (<15cm)
- Avoid placing credit cards or other magnetic storage media near the device because information stored on them may be erased.
- This device contains glass components that upon breaking may splinter, crack or shatter and pose a safety risk until such a point that all glass shards are disposed of.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when properly worn on the body is 0.919 W/kg and 0.252 W/kg for head.

Safely disposing of the Device



The Ubislate 7CZ should not be placed in household waste bins. Please check local regulations for information on the disposal of electronic products in your area

This appliance is labeled in accordance with e-waste rules as published by Central Government of India under the Environment Protect Act covering the Restriction in the Use of Hazardous Substances in the Manufacturing of Electrical and Electronic Equipment. The rules determines the framework for the return and recycling of used appliances as applicable This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per these rules.

UM: 0G06072BD9360Z