




IP CAMERA


Quick Install Manual

Learn more <http://cloud.boxkam.com>


1. Pan&Tilt HD IP Camera

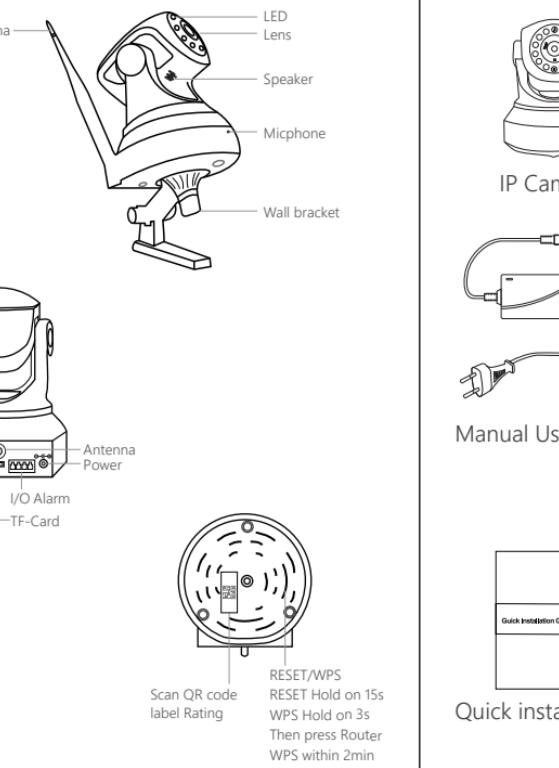

2. Package contents

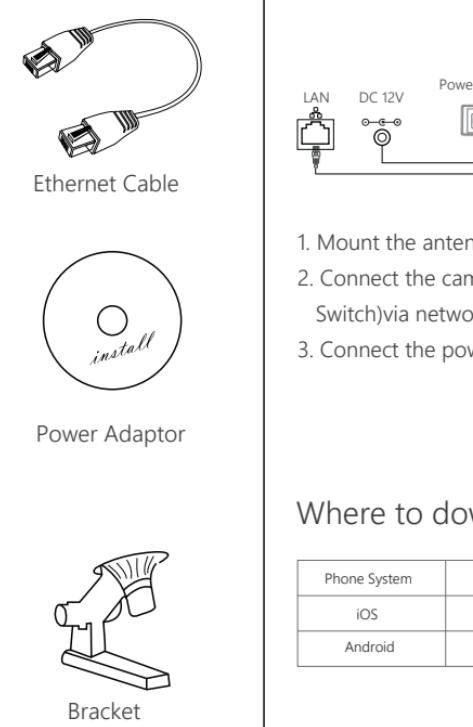

3. Product wiring diagram

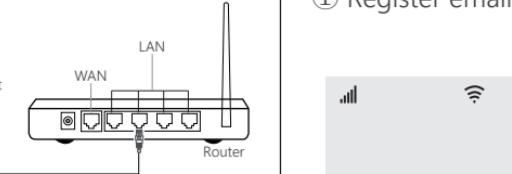


1. Mount the antenna and make it stand vertically
2. Connect the camera to LAN network(Router or Switch)via network cable
3. Connect the power adaptor to the camera

Where to download APP?


Phone System	Where to Download	App Name
iOS	App Store	Boxkam
Android	Google play	Boxkam

4. Remote access by smart phone

① Register email and password to login

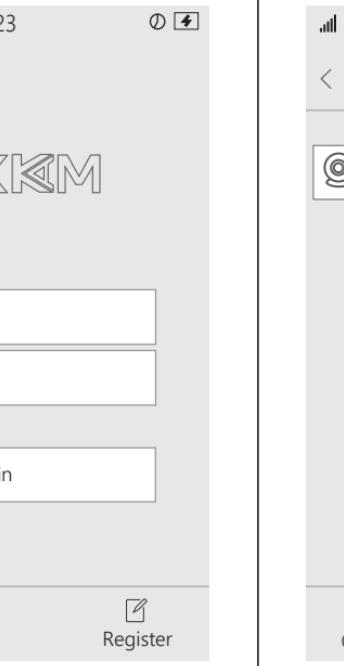

② Options to add camera

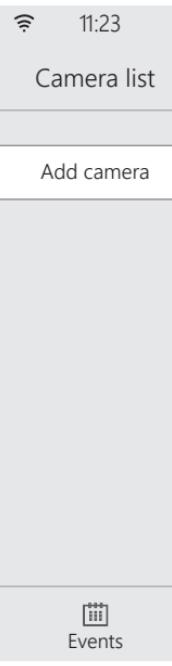


③ Add camera by QR Code




5. WiFi Setting


④ Add Camera successfully, Press this icon

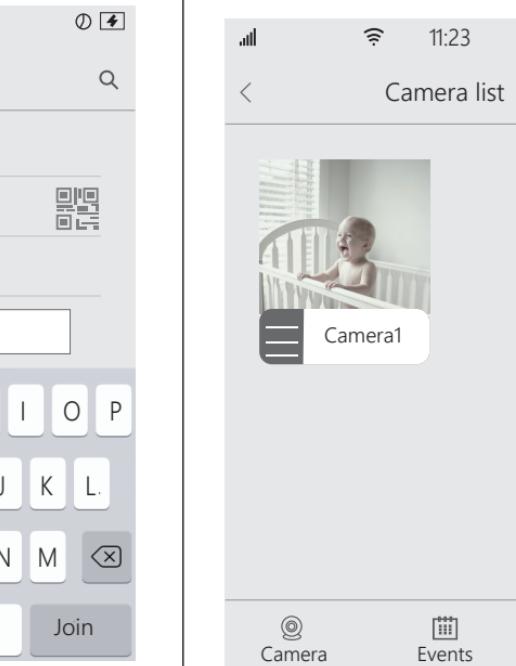


⑤ Select "Wi-Fi"

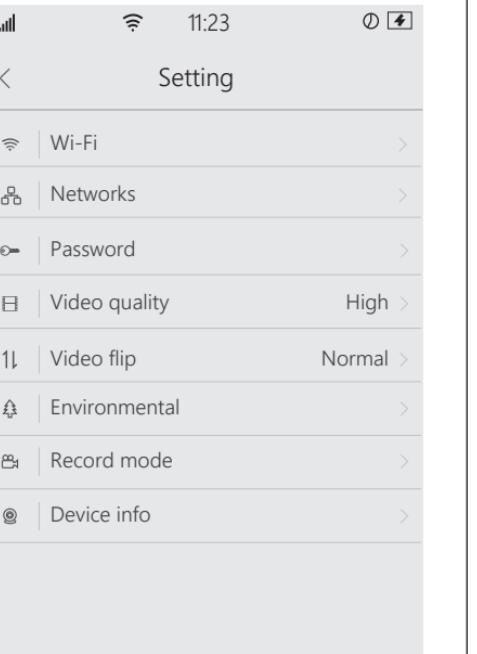


⑥ Select "SSID"

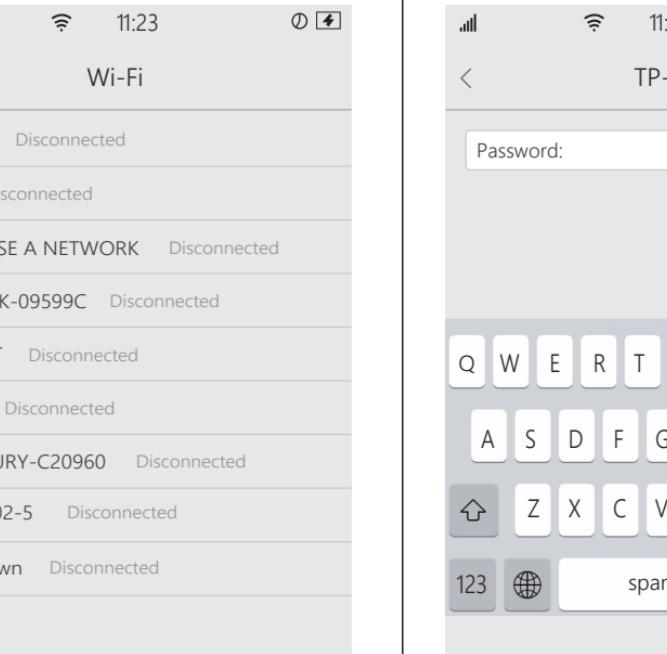


⑦ Enter password for Wi-Fi

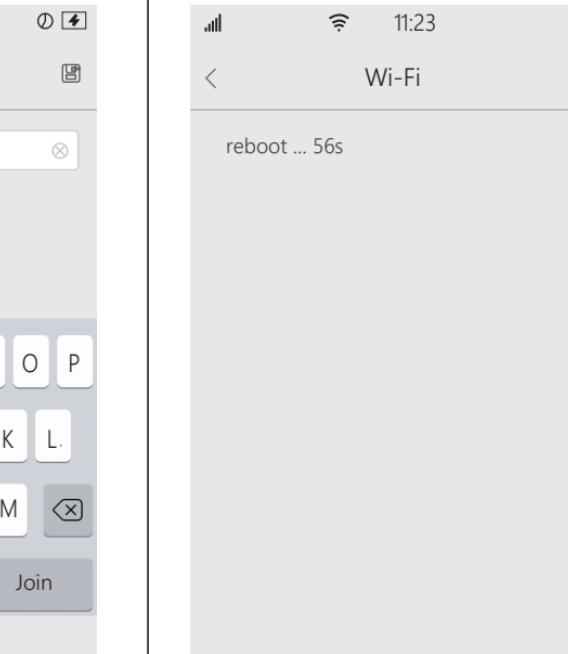

⑧ Waiting for device rebooting, remove the Ethernet cable now

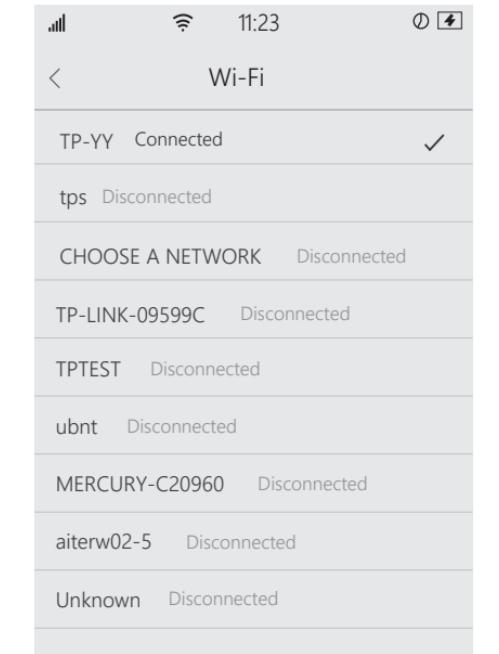

⑨ Wi-Fi connect successfully

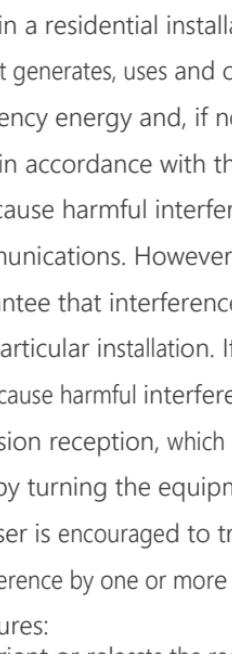

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Warranty:

Date of Purchase

Model No.

Device UD

Warranty Period

Faulty nature of device:

All products sold by BoXun are covered by 12 months warranty from the date of purchase.

Warranty covers any manufacturing or technical defect excluding breakage.

Warranty does not cover faults resulting from operation careless handling or not following instruction. Also electronic shock cases.

Selink Technology Co., Ltd
Add: B15, Mingin Industrial Park, Mingin Longhua District, Shenzhen 518133
Email: support@boxun.com