

# JUMPY Smart Watch Instruction & Parent Guide



Please read all **Operating and Important Safety Instructions** and **USB Cord Safety WARNING** before using the JUMPY Smart Watch.

## Getting Started

- 1. POWER UP** your JUMPY Smart Watch by pressing the Home key for 30 seconds.\*
- 2. DEVICE SET UP** by turning on parent's iPhone or iPad and following the setup wizard to connect the smart device.
- 3. REGISTER** your UMPY Smart Watch by creating a JUMPY parent account (or logging into an existing account).
- 4. PROFILE SET UP** settings for your child's smart watch by following on-screen instructions in JUMPY's main application on iPhone/iPad.
- 5. PLAY** The JUMPY smart watch is now ready for play. Expand the fun by downloading the mini Games app thru a compatible mobile device.\*

## Your JUMPY

The JUMPY smart watch creates an exciting and fun gameplay experience promoting interactive play, health and wellness. Your child can earn points with activity and gameplay, which are tracked on the Parents mobile device.

- JUMPY comes out of the box partially charged and ready to play. Charging instructions are below.
  - \* JUMPY App is compatible with most Apple iOS devices running 6.0 or higher.
  - \* Parents have to install JUMPY Main App on their iPhone or iPad.

## Operating Instructions

**Battery Charging.** JUMPY smart watch is equipped with a rechargeable lithium-polymer battery. It can be charged using the included USB cord via connection to a computer.

**For indoor, dry-location use only.** Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. If the unit does get wet, unplug all cables. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the USB port if wet or damaged.

**Avoid prolonged exposure to extreme temperatures and direct sunlight.**

Operate in places with temperatures ranging from “0°C (32°F) and 40°C (104°F)”. Do not leave the product in your car as the temperatures in a car can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

**Handle with Care.** To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product.

**Cleaning.** Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before reusing. Do not connect to the USB cable if wet or damaged.

**Repairing or Modifying JUMPY**

Never attempt to repair or modify as JUMPY Smart Watch does not contain any user-serviceable parts. Service should only be provided by JUMPY INC.

If the product has been in contact with liquids, punctured or subjected to a severe impact or fall, immediately remove this product from use.

For service information, go to: [www.jumpyc.com/support](http://www.jumpyc.com/support)

## Important Safety Instructions

Please read all the Important Safety Instructions prior to using JUMPY Smart Watch. Failure to follow these safety instructions could result in fire, electric shock or other injury or damage to watch or other property.

**Keep out of reach of children under the age of 3. Use of the JUMPY Smart Watch should be under the supervision of a parent.**

**CAUTION:** If your child has any sign of skin irritation or experiences any discomfort, please discontinue use and consult a physician. Keep straps dry and clean to help avoid skin irritation.

**CAUTION:** To be used under the direct supervision of an adult.

**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

**WARNING:** The USB cable could be a strangulation hazard. Keep out of reach of children under 3 years of age. The USB cable should be used only by an adult when connecting to a computer and is to be removed by the adult prior to the use of the product by the child.

**CAUTION:** If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact JUMPY Consumer Services for replacement if under warranty.

**WARNING:** The Lithium rechargeable battery cannot be removed from the product and should only be replaced by JUMPY. For your safety, never try to remove the battery. For more information about battery replacement service, go to: [www.jumpyc.com/support](http://www.jumpyc.com/support)

## **USB Cord Safety WARNING**

**CAUTION:** Use only the recommended USB cord for charging the battery. The device is a custom USB cord designed expressly for recharging specified JUMPY products.

**WARNING:** This toy is not intended for children under 3 years old.

### **ATTENTION:**

1. As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
2. Do not connect or disconnect with wet hands.
3. The USB cord should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the USB cord must not be used until the damage is repaired. If the cord is damaged, dispose of it in accordance with your local electrical product recycling regulations.
4. Unplug the USB cord if any of the following conditions exist:
  - The USB cord has become frayed or damaged.
  - The USB cord is exposed to rain, liquid, or excessive moisture.
  - The USB cord enclosure has become damaged.
  - You suspect the USB cord needs service or repair.
5. Disconnect JUMPY Smart Watch from the USB cord before cleaning.

To clean USB cord, disconnect it from the computer and clean with a cloth dampened with water. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the computer if wet or damaged.

## FCC NOTICE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF Exposure Information

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communication Commission for an uncontrolled environment.