

# **Wifi digital photo frame**



## **User Manual**

## **Specification:**

**Model: TYKE**

**Trade Mark: Trade Mark**

**Manufacturer: Timewyse Corporation**

- Android 4.4 system
- CPU: Allwinner dual core 1.5 Ghz
- RAM: 512MB DDR3 ( 1GB optional)
- ROM: 4GB ( 8GB optional)
- G-sensor
- WIFI: WIFI 802.11b/g/n
- Touch screen: Multi-Touch screen optional
- I/O interface: SD / USB / Mini USB/ Earphone port
- Photo format: JPG, BMP, GIF, PNG
- Audio format: MP3, WMA, APE
- Video format: MPEG1/2/4, AVI, RMVB, MOV, MKV (UP TO 1080P)
- Language: English, French, German, Spanish, Italian, Dutch, Polish and etc.

# Instructions

## 1. Operating interface

1.1 You will enter into the main interface after it turns on.



1.2 In main interface, you can move the software icon, press the icon in 1 second, then you can move it to anywhere in main interface.

1.3 Delete icons in main interface : Press the icon in 1 second, and then you can remove it (it means delete) .

## 1.4 Toolbar



From left to right: Volume down , Return , Main interface , Recent application , Volume up.

## 1.5 Guide for OSD function

👉 No matter which interface showed on screen, you can click the key at the bottom to back to main interface.

🏠 Back to main interface.

💻 Check recent execution of the application program.

📱 In main interface, you can check all application program, and press any icon of application program in one 1 second, then you can see this icon in main interface.

## 2. Setting⚙️

### 2.1 Wireless & Networks

#### ● Wi-Fi

Click “ON/ OFF” to open and close wifi.

If Wifi does not need password, just select “connect” to link it. Once Wifi have connection history, information will be saved automatically. Wifi iconWiFi will be showed at the top-right corner.

- **Data usage**

Display the current software and memory capacity.

## 2.2 Device

- **Sound**

Volume/ Default notification sound/ Touch sounds/ Screen lock sound , you can use tick or non-tick to set it up.

- **Display**

Brightness/ Wallpaper/ Sleep/ Daydream/ Font size/ Navigation show/ Cast screen/ Full screen mode and etc.

- **Storage**

Check the available storage space, the users can clear away SD card(format internal memory), and choose options that can do media scan for external SD card and USB.

- **Apps**

Manage application program.

Select setting- apps-downloaded- uninstall, choose the one you want it remove, then enter into below interface, click delete, finished

## 2.3 Personal

- **Location**


You can choose “google location reporting” service.

- **Security**

Screen lock/ Owner info/ Make passwords visible/ Device administrators/ Unknown sources/ Verify apps/ Credential storage/ Storage type/ Trusted credentials/ Install from SD card/ Clear credentials.

- **Language & input**

Option for language, text input, automatic error correction, choose the keyboard and input method you like, and set text language output, pointer speed.

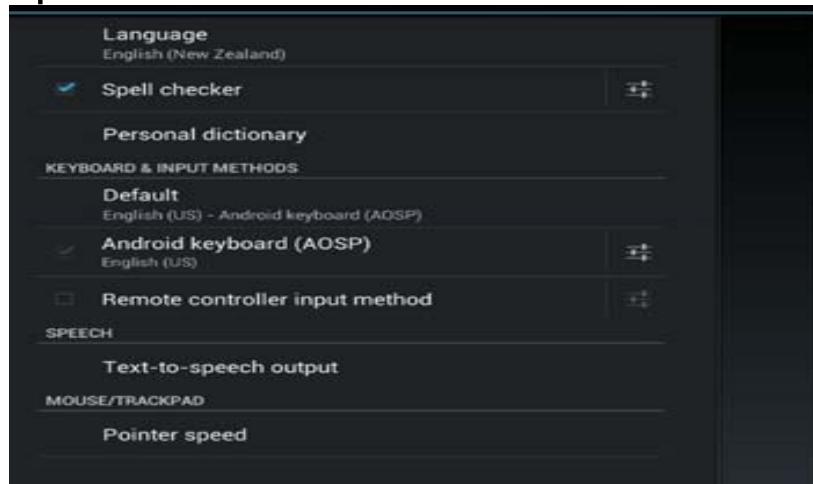

- **Backup & reset**

Back up my data, save all your files and settings.

Factory data reset , return to factory settings.

Warning: Once you select “factory data reset”, all personal data will be deleted from the product, please backup your data before executing.

## **2.4 System**

- **Date & Time**

The users can use date and time that provided by internet, or manually set and choose date, time and display format.

- **Accessibility**

To help users who are blind or weak sight, intercom system provides voice feedback. You can search and download this application program from internet.

- **Printing**

Connect to printer and print the files.

- **Developer options**

For Professional engineer usage.

- **About tablet**

Click this option to get the information for product.


### 3 Commonly application program

- **Browser** 

When your product linked Wi-Fi, click browser icon on desktop to open website, interface showed as below,

- **Calculator** 

There is a built-in calculator in the product, click  icon to calculate,

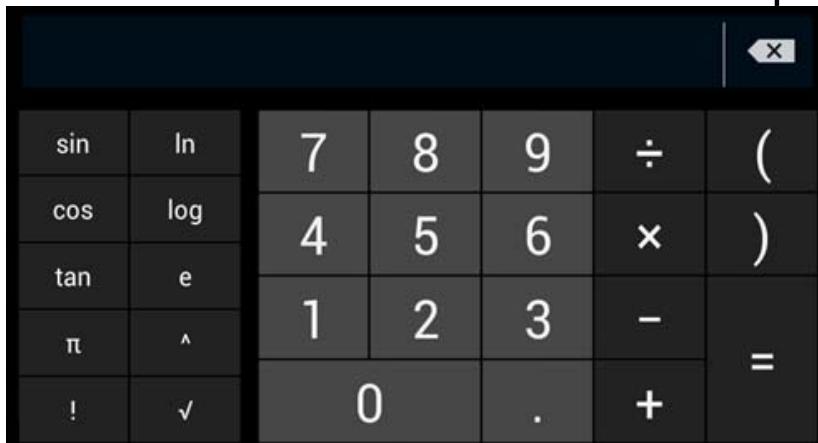

- **Calender** 

The users can use calender to check dates, time and memo etc. please log into google account ahead.



- a. Click calender icon, a dialog box named “google account” is popping out, click “next step” to continue.
- b. If you have no google account, please click “create” to create a new google account, if you have, please click “log-in” to continue.
- c. Input google email and password, then click “next step” to continue.
- d. When you finished set-up, pages will be exited automatically and back to main interface. Then click the calender icon again to verify date, time, add memo and so on. Click menu button, 1 day, 7 weeks, agenda, today and other options will be popping out, show as below interface,

- **Clock** A small icon of a clock face with hands.

Click clock icon to operate this application program.



When operating this program, you can set up this clock.

- **Download** 

Click all the download details.

- **People** 

You can log in one or more email address.

Click the mailbox icon and follow the steps to set up your email account, after setting can receive or send mail.


Click the mailbox icon to read the message, if you set only one email account, it will immediately open. If you have set up multiple accounts, they will be listed on the account interface. Click the email account you want, and then click on "Inbox", it will list all the messages, and then click on the message you want to open. You can reply to, forward, or delete messages. On the Inbox screen, you can compose a new message, click on the menu  to set about plans to get more mail accounts.

- **File Manager** 

Click the File Manager icon to browse saved file(stored on local device, SD card or U disk).

- **Music** 

Click the Music icon  to play music. All songs will be listed, you can select the one you wanted.

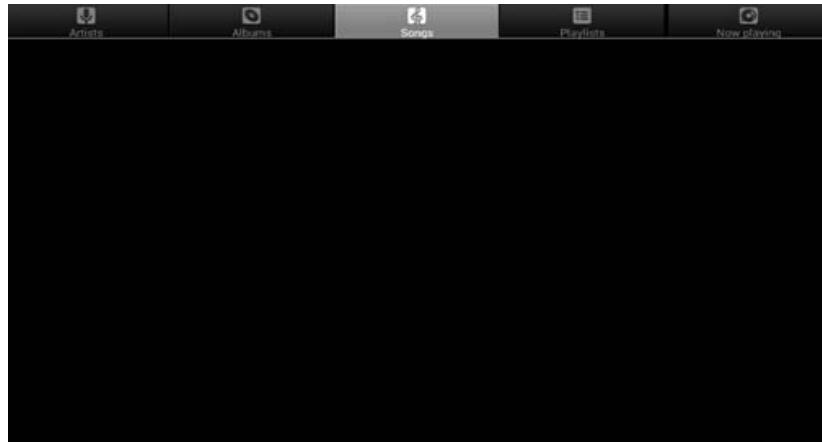


- **Search** 

APK files on your product, or search online: click icon 

- **Play video** 

Click the video player icon to run the application. All videos will be listed, select the video you want to play.

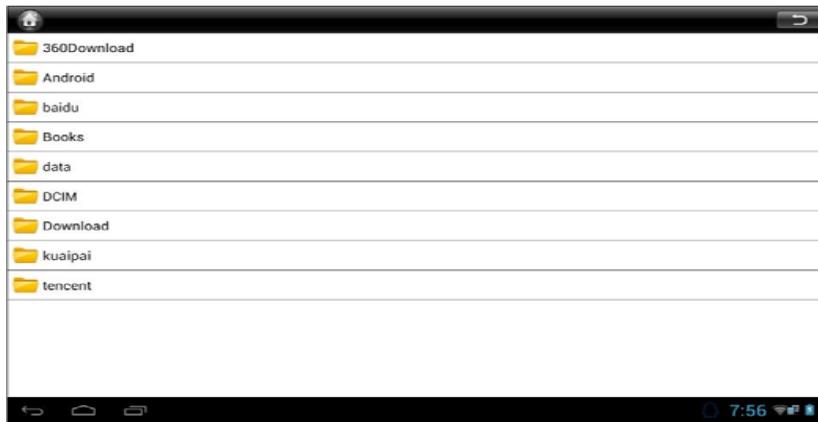

## Remarks: Install new program.

You can download this application program via internet, then install it online, or install it via SD card and USB. Just click and install it, run it after finishing this installation.

## ★ Important Safety Precautions

- ※ To avoid fire, electric shock and other risks, please comply with below measures:
- Do not place the product under raining and moisture condition
- Stay away from direct sunlight and heat sources.
- To avoid screen be crashed and damaged, please do not place objects on the LCD screen
- To avoid screen be scratched, please do not use any sharp objects to touch the screen

- Please only use the power adapter that comes with the device. Using any other power adapter may damage your machine, and it will not included in the repair guaranty.
- Please do not disassemble the unit to repair it by yourself, it may damage the unit, and it will not included in the repair guaranty.

## ★ Cleaning Equipment

We advise use soft and no corrosion cloth to clean the unit, such as lens cloth, if you want to clean the fingerprints or dust on screen.

## ★ FAQ

- can not start up ?
  - 1 、 Check the power cable connection.
- system halted
  - 1 、 Please restart the unit
- Open Web slow?
  - 1 、 Check the network signal.
  - 2 、 Maybe open too much pages.

3 、 Maybe running too many application.

● No network?

- 1 、 Verify that your area have wifi signal.
- 2 、 Please make sure wifi turn on.

## **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by

manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

“To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”

## **IC Statement:**

### **- English:**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3(B).

### **- French:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.