

PO#1B4610 SKS-1543 说明书

印色：单黑

材质：80G书写纸

尺寸：285*210mm

inside

back

front

USING THE STANDALONE TIMER

Your Perfect Bake PRO scale comes with a standalone kitchen timer.

To set the time

1. Touch the Timer button. The LCD changes to display *00:00* and *0hr*.
2. Touch and hold the Timer button. The *seconds* digits begin blinking. Use the up and down arrow buttons to set the seconds.
3. Touch the Timer button again. The *minutes* digits begin blinking. Use the up and down arrow buttons to set the minutes.
4. Touch the Timer button again. The *hour* digit begins blinking. Use the up and down arrow buttons to set the hours.
5. Touch the Timer button again. The timer starts counting down. (Note: You can skip setting minutes or hours by touching and holding the Timer button. The timer will start immediately.)
6. If you touch the Timer button while the timer is running, the LCD display will switch to displaying weight and you can use the scale normally. The timer will continue running in the background.
7. When the timer reaches zero, the scale will begin beeping and flashing the LCD. Touch the Timer button to silence the scale.
8. To reset a running timer, touch and hold the Timer button.

Until you turn the scale off, the timer will remember the last value you set and default to that value the next time you set it.

BATTERY INFORMATION

1. Install only new batteries of the same type in your product.
2. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
3. Do not mix old and new batteries.
4. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
5. Do not dispose of batteries in fire.

Batteries should be recycled or disposed of as per state and local guidelines.

FCC INFORMATION. FCC ID: 2AE3ABTS015PC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ONE (1) YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from defects in functionality, materials and workmanship for a period of one (1) year from the date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss of damage, including any labor/expense costs involved in the replacement or repair of said product. For warranty claims, please contact Perfect Company at support@perfectbakeapp.com, (360) 524-3001, or write to Perfect Bake Support, 705 Main Street, Suite 201, Vancouver, WA 98660.**

Perfect
COMPANY



Version 2

Perfect Bake[®] PRO

SMART SCALE AND INTERACTIVE RECIPE APP



For help please go to:

 
www.PerfectBakeApp.com/Support

Also visit the "Help" section of the Perfect Bake app for detailed instructions and tutorials.

inside left

inside middle

inside right

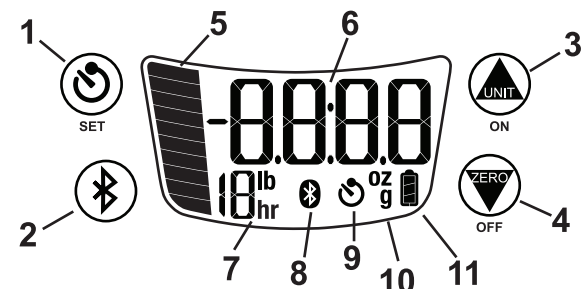

Note: ALL BUTTONS ARE TOUCH SENSITIVE. Gently touching a button (rather than pressing) will activate its feature.

1. **Timer/Set:** Select timer mode (see *Using the Standalone Timer*). Also used to start and stop the in-app timer.
2. **Bluetooth:** Turn Bluetooth on/off (see *Connecting with Bluetooth*).
3. **On/Unit/Up:** Touch and hold to turn on the scale. Touch to switch between units (g, oz, lb+oz). When connected to the app, use to select the next recipe block or manually advance.
4. **Off/Zero/Down:** Touch and hold to turn the scale off. Touch once to zero the scale. When connected to the app, use to select the previous recipe block.
5. **Weight bar graph:** Indicates the total weight as a percentage of the scale's maximum capacity (6kg/13lbs). When connected to the app, it indicates the percentage weighed of the current ingredient.
6. **Numeric display:** Shows weight in scale mode, or minutes:seconds in timer mode.
7. **Numeric Pounds/Hour display:** Shows pounds when the unit is set to lb+oz; shows hours when the scale is in timer mode.
8. **Bluetooth connectivity indicator:** Blinks to indicate that the scale is visible for a mobile device connection. Remains on when a connection has been made. See *Connecting with Bluetooth*.
9. **Timer indicator:** Indicates the scale is in timer mode and the numeric display is showing time (see *Using the Standalone Timer*).
10. **Units indicator:** Indicates whether the numeric display is showing grams or ounces.
11. **Battery level indicator:** 3-segment display indicates remaining battery power. An empty, blinking battery indicates 10% power remaining. If the battery level reaches 0%, the scale will display "batt" and then turn off. Replace the batteries to restore normal operation.

CARE

CLEANING – Never immerse the scale in water; simply wipe it with a damp cloth. The scale is not dishwasher safe.

STORAGE – Do not place heavy objects on top of the scale during storage. Doing so may affect the accuracy of the scale.

BOWLS – The bowls are dishwasher, freezer, and microwave safe.

STATIC – In an environment with electrostatic discharge, the product may malfunction. In this case, please remove the batteries and wait for 5 minutes and then replace the batteries.


SPECIFICATIONS

Batteries	3 x 1.5V AA/LR6
Maximum Weight Capacity	6000 grams/13 lbs.
Bluetooth Range	50 feet*
*Depends on connected mobile device and other devices nearby that may cause interference	
Weight resolution, grams	0.1 g
Weight resolution, ounces	0.005 oz
Weight resolution, pounds+ounces	0.01 oz

SETUP AND USE

Insert the batteries

 The battery compartment is on the bottom of the scale. Remove the battery door and insert 3 x 1.5V AA/LR6 batteries (not included) matching polarity

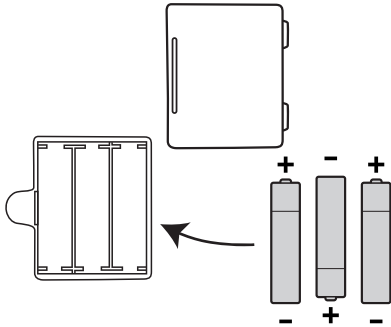


icons with those on the battery compartment. Replace the battery door.

Auto shut off

After 3 minutes of inactivity the scale will shut off automatically.

Maximum Weight

 When maximum weight capacity for the scale (6 kg/13 lbs) is exceeded, the display will show "OL". Remove weight from scale immediately.

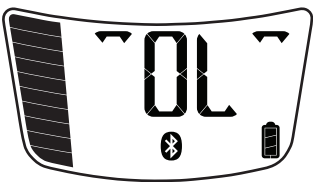

System requirements

- iOS 6 or higher
- Android 4.3 or higher

Go to <http://www.perfectbakeapp.com> for the latest list of compatible devices.

CONNECTING THE SCALE TO PERFECT BAKE APP

Download the free Perfect Bake app

Go to the iTunes App Store (for Apple devices) or Google Play (for Android) to download the Perfect Bake app.



CONNECTING WITH BLUETOOTH

To connect the scale to Perfect Bake app

The Perfect Bake PRO Scale uses Bluetooth Smart to connect to the Perfect Bake app on your smart phone or tablet. To connect the scale to your device:

1. Make sure your smart device has Bluetooth turned on.
2. Start the Perfect Bake app.
3. From the Main Menu, select *Settings*.
4. Turn on the PRO scale.
5. In the Perfect Bake app *Perfect Bake PRO* will appear in the *Bluetooth Scales* list. Touch it to connect.
6. When the Bluetooth icon on the scale's LCD screen stops blinking and the app shows a check mark next to *Perfect Bake PRO* the scale is connected.

Perfect Bake app will remember the last scale it connected to and attempt to reconnect to it the next time you start the app.

To Disconnect the Scale from Perfect Bake app

1. From the main menu, touch *Settings*, then touch *Perfect Bake PRO* in the Bluetooth Scales list.
2. Alternatively: touch and hold the Bluetooth button on the scale for 4 seconds.

The scale will be unchecked in the *Bluetooth Scales* list in the app and the Bluetooth icon on the scale's LCD screen will begin blinking, indicating it is available for connection to another device.

SKS-1543 说明书
印色：单黑
材质：80G书写纸
尺寸：285*210mm

inside back front

USING THE STANDALONE TIMER

Your Perfect Drink PRO scale comes with a standalone kitchen timer.

To set the time

1. Touch the Timer button. The LCD changes to display *00:00* and *0hr*.
2. Touch and hold the Timer button. The *seconds* digits begin blinking. Use the up and down arrow buttons to set the seconds.
3. Touch the Timer button again. The *minutes* digits begin blinking. Use the up and down arrow buttons to set the minutes.
4. Touch the Timer button again. The *hour* digit begins blinking. Use the up and down arrow buttons to set the hours.
5. Touch the Timer button again. The timer starts counting down. (Note: You can skip setting minutes or hours by touching and holding the Timer button. The timer will start immediately.)
6. If you touch the Timer button while the timer is running, the LCD display will switch to displaying weight and you can use the scale normally. The timer will continue running in the background.
7. When the timer reaches zero, the scale will begin beeping and flashing the LCD. Touch the Timer button to silence the scale.
8. To reset a running timer, touch and hold the Timer button.

Until you turn the scale off, the timer will remember the last value you set and default to that value the next time you set it.

BATTERY INFORMATION

1. Install only new batteries of the same type in your product.
2. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
3. Do not mix old and new batteries.
4. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
5. Do not dispose of batteries in fire.

Batteries should be recycled or disposed of as per state and local guidelines.

FCC INFORMATION. FCC ID: 2AE3ABTS015PC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference; and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ONE (1) YEAR LIMITED WARRANTY


The manufacturer warrants this product to be free from defects in functionality, materials and workmanship for a period of one (1) year from the date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss of damage, including any labor/expense costs involved in the replacement or repair of said product. For warranty claims, please contact Perfect Company at support@perfectdrinkapp.com, (360) 524-3001, or write to Perfect Drink Support, 705 Main Street, Suite 201, Vancouver, WA 98660.**

Perfect
C O M P A N Y




Version 2

 Perfect Drink® PRO
SMART SCALE AND INTERACTIVE RECIPE APP

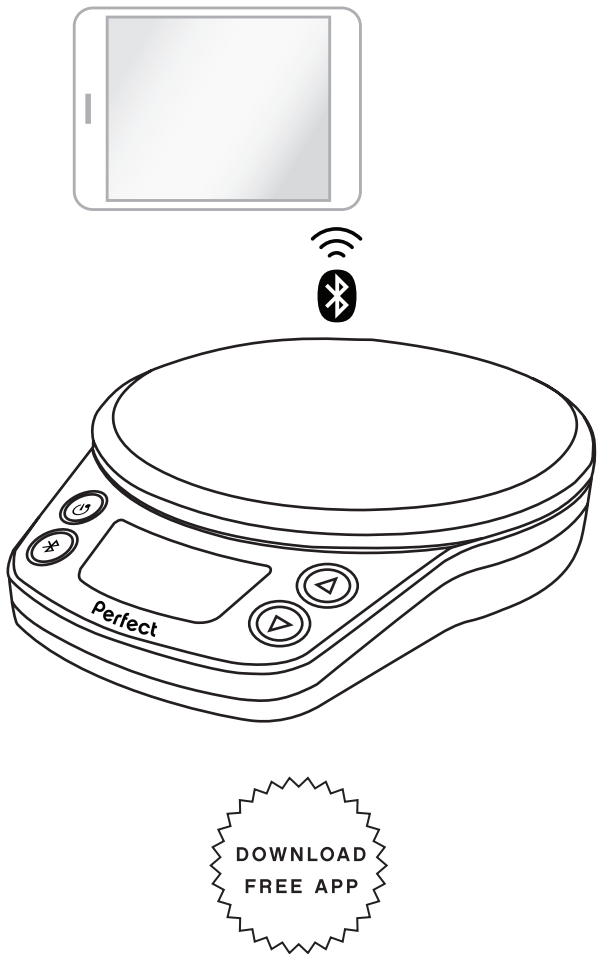

For help please go to:
www.PerfectDrinkApp.com/Support
Also visit the “Help” section of the Perfect Drink app for detailed instructions and tutorials.

 inside left inside middle inside right

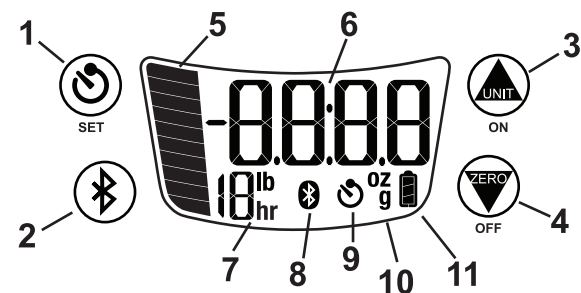

Note: ALL BUTTONS ARE TOUCH SENSITIVE. Gently touching a button (rather than pressing) will activate its feature.

1. **Timer/Set:** Select timer mode (see *Using the Standalone Timer*). Also used to start and stop the in-app timer.
2. **Bluetooth:** Turn Bluetooth on/off (see *Connecting with Bluetooth*).
3. **On/Unit/Up:** Touch and hold to turn on the scale. Touch to switch between units (g, oz, lb+oz). When connected to the app, use to select the next recipe block or manually advance.
4. **Off/Zero/Down:** Touch and hold to turn the scale off. Touch once to zero the scale. When connected to the app, use to select the previous recipe block.
5. **Weight bar graph:** Indicates the total weight as a percentage of the scale's maximum capacity (6kg/13lbs). When connected to the app, it indicates the percentage weighed of the current ingredient.
6. **Numeric display:** Shows weight in scale mode, or minutes:seconds in timer mode.
7. **Numeric Pounds/Hour display:** Shows pounds when the unit is set to lb+oz; shows hours when the scale is in timer mode.
8. **Bluetooth connectivity indicator:** Blinks to indicate that the scale is visible for a mobile device connection. Remains on when a connection has been made. See *Connecting with Bluetooth*.
9. **Timer indicator:** Indicates the scale is in timer mode and the numeric display is showing time (see *Using the Standalone Timer*).
10. **Units indicator:** Indicates whether the numeric display is showing grams or ounces.
11. **Battery level indicator:** 3-segment display indicates remaining battery power. An empty, blinking battery indicates 10% power remaining. If the battery level reaches 0%, the scale will display "batt" and then turn off. Replace the batteries to restore normal operation.

CARE

CLEANING – Never immerse the scale in water; simply wipe it with a damp cloth. The scale is not dishwasher safe.

STORAGE – Do not place heavy objects on top of the scale during storage. Doing so may affect the accuracy of the scale.

STATIC – In an environment with electrostatic discharge, the product may malfunction. In this case, please remove the batteries and wait for 5 minutes and then replace the batteries.


SPECIFICATIONS

Batteries	3 x 1.5V AA/LR6
Maximum Weight Capacity	6000 grams/13 lbs.
Bluetooth Range	50 feet*
*Depends on connected mobile device and other devices nearby that may cause interference	
Weight resolution, grams	0.1 g
Weight resolution, ounces	0.005 oz
Weight resolution, pounds+ounces	0.01 oz

SETUP AND USE

Insert the batteries

 The battery compartment is on the bottom of the scale. Remove the battery door and insert 3 x 1.5V AA/LR6 batteries (not included) matching polarity icons with those on the battery compartment. Replace the battery door.

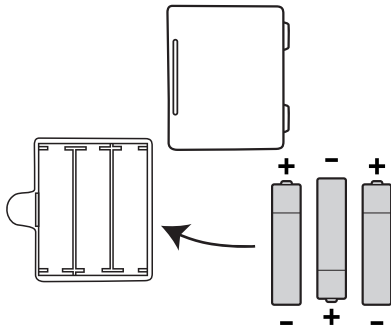


Auto shut-off

After 3 minutes of inactivity the scale will shut off automatically.

Maximum Weight

 When maximum weight capacity for the scale (6 kg/13 lbs) is exceeded, the display will show “OL”. Remove weight from scale immediately.

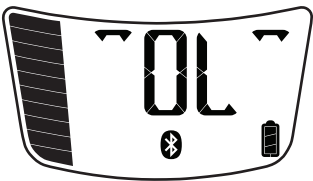

System requirements

- iOS 6 or higher
- Android 4.3 or higher

Go to <http://www.perfectdrinkapp.com> for the latest list of compatible devices.

CONNECTING THE SCALE TO PERFECT DRINK APP

Download the free Perfect Drink app

Go to the iTunes App Store (for Apple devices) or Google Play (for Android) to download the Perfect Drink app.



CONNECTING WITH BLUETOOTH

To connect the scale to Perfect Drink app

The Perfect Drink PRO Scale uses Bluetooth Smart to connect to the Perfect Drink app on your smart phone or tablet. To connect the scale to your device:

1. Make sure your smart device has Bluetooth turned on.
2. Start the Perfect Drink app.
3. From the Main Menu, select *Settings*.
4. Turn on the PRO scale.
5. In the Perfect Drink app *Perfect Drink PRO* will appear in the *Bluetooth Scales* list. Touch it to connect.
6. When the Bluetooth icon on the scale's LCD screen stops blinking and the app shows a check mark next to *Perfect Drink PRO* the scale is connected.

Perfect Drink app will remember the last scale it connected to and attempt to reconnect to it the next time you start the app.

To Disconnect the Scale from Perfect Drink app

1. From the main menu, touch *Settings*, then touch *Perfect Drink PRO* in the Bluetooth Scales list.
2. Alternatively: touch and hold the Bluetooth button on the scale for 4 seconds.

The scale will be unchecked in the *Bluetooth Scales* list in the app and the Bluetooth icon on the scale's LCD screen will begin blinking, indicating it is available for connection to another device.