
# **User Guide**

Model No.: OontZ Ang

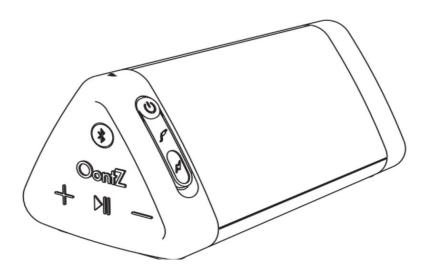

Cutomer's information such as website address, telephone, company address etc.

Thank you for purchasing our portable speaker. Please read these instructions completely, before operating this product.

#### IMPORTANT SAFETY INSTRUCTIONS

Read these instructions - All the safety and operating instructions should be read before the appliance is operated.

- 1. Clean only with dry cloth The appliance should be cleaned only as recommended by the manufacturer.
- 2. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 3. Close the power switch and take out the batteries during lightning storms or when unused for a long periods of time.
- 4. Object and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into the Enclosure through openings.
- 5. Servicing The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

#### **BATTERY PRECAUTIONS**

Follow these precautions when using batteries in this device:

1. Warning-Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent

- type.
- 2. Use only the size and type of batteries specified.
- 3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- 4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
- 5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- 6. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
- 7. Clean the battery contacts and also those of the device prior to battery installation.
- 8. Remove batteries promptly if consumed

### **Package Contents**

#### Pls. make sure that all of the contents listed below are found in the box:

1 Water cooler speaker with a Micro USBcalbe

### **Specifications**

Speaker	1.5 " x 2 full frequency speaker
MW	2 X 3W (THD 10%)
Battery	3.7V/1200mA/h 18650 Li battery
Audio In	Bluetooth AUX IN
Jack	MICRO USB Power supply(DC 5V/1000mA)
Play time	>10 hours ( Based on the 50% average music power )
LED	LEDX2 POWER-REDBLUETOOTH-BLUE
Amp IC	Single channel Class D support 5V
Input sensitivity	
Frequency response	80Hz~20kHz ( +/-3dB )
S/N	>70dB'A'Weighted

### How to use this portable speaker?

Press Power ON, The Bluetooth light will be flashing.

Open your phone's Bluetooth and connect to the speaker.

If connect successful the blue light is on.

Now you can play music on your phone.

Press • is volume up.

Press is volume down.

Press is disconnect Bluetooth and go in paring mode.

Press **U** is power off.

When you use the AUXIN the Bluetooth will be disconnect.

## **Quality and certification**

Safety	FCC CE
Environmenta	RoHs
Energy	ERPII; Energy star
Other requirements	Bluetooth BQB certifications

#### FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in

a particular installation. If this equipment does cause harmful interference to radio or television reception, which collection point for recycling of electrical and electronic products and batteries. Correct disposal of such products helps prevent potentially negative consequences on the environment and human health. For more information, consult your local authority or dealer.

## **Troubleshooting**

SYMPTOM	POSSIBLE SOLUTIONS
No sound	1. Volume on external player is set to minimum, increase volume.
	2. Power is off, turn on; the Power indicator will turn to orange.
	3. External unit is not on, turn on and start playback.
	4. Audio cable is not connected, connect it.
	5. The batteries are weak or dead.

THIS DOCUMENT IS NOT FOR EXTERNAL DISTRIBUTION.
STRICTLY FOR INTERNAL USE ONLY.