



FAUX FUR WIRELESS EARPHONES INSTRUCTIONS

Please follow these instructions
to connect your mobile device to your
Bluetooth® earphones.

These earphones include Bluetooth®,
microphone, and speakers, so you can
answer calls and play audio from your
mobile device all in one. 32ft range.

Press the on/off button on the headband for
approximately 10 seconds until the LED light
blinks blue and red.

Turn on the Bluetooth® on your mobile
device and connect with "BENDEL GIRL"

Hold power button for 10 seconds to turn
off. When on: blue and red lights flash.
When syncing: blue & red lights flash.
When paired: a blue light flashes.



If you are playing an audio file from your mobile device you can play or pause by pressing the on/off button.

Manage volume through your device.

To answer a call press the on/off button.

Press on/off button to hang up.

To charge, plug charging cable that comes with product to the Bluetooth® micro USB port through the small opening at bottom of the earphone earcap for about 2hrs.

The red indicator light will stay on while charging and turn off once fully charged.

Must be charged before first use.

After 4.5hrs a beeping noise indicates device is losing charge before it shuts off.

Contains Lithium Battery.
Battery Must Be Recycled or Disposed of Properly

HENRI BENDEL
NEW YORK



**ROUND CIRCLE SHOWS HOLE
PUNCH AND DOES NOT PRINT**

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can

FRONT

1.875 X 2.75 HANG TAG
PRINTS: PMS 4975

BACK
1.875 X 2.75 HANG TAG
PRINTS: PMS 4975

BACK

be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.