




Bluetooth® Speaker Instructions



Fully charge speaker before first use

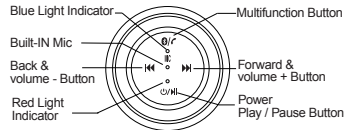

SPECIFICATIONS

- Power Supply: 5V, 500 mA
- Total Output: 2W
- Range: Class 2, up to 33 ft (10M)
- Battery Type: Rechargeable Lithium 250 mA
- Battery Life: Approx 2.5 hours
- Charge Time: Approx 4 hrs
- Works with any Bluetooth® compatible device.

PAIRING YOUR DEVICE

- Prepare your device to pair using Bluetooth®, making sure you are within 33 feet of the speaker.

- Press and hold the POWER PLAY/PAUSE button for 3 seconds.

- The speaker will automatically enter Bluetooth® pairing mode after powering on.

- While the speaker is in pairing mode and your device is ready to pair, select “mixbin” from your mobile device’s pairing list.

- Your device’s audio will begin playing from the Bluetooth® speaker

- Party!

CHARGING THE SPEAKER

- Connect the USB cable

(included) to the Micro USB port on the speaker.

- With the speaker OFF, plug the other end of the USB cable into a USB port on your computer, wall outlet, or car

- The RED INDICATOR LIGHT will illuminate while the speaker is charging

- The BLUE INDICATOR LIGHT will illuminate when charging is completed

BASIC OPERATION

- Short press BACK and FORWARD buttons for track selection.

- Press and hold BACK and

FORWARD buttons to adjust volume

- Short Press POWER PLAY/PAUSE button to play and pause music

- Press and hold POWER PLAY/PAUSE button to power on and off

BASIC CELL PHONE OPERATION

- When you have an incoming call, the speaker sounds an incoming call tone. Both the speaker and your cell phone may ring, depending on your cell phone settings

- Press the MULTIFUNCTION

button once to answer call

- Press the MULTIFUNCTION button twice to reject call

- Press and hold the MULTIFUNCTION button for 3 seconds to take the call from your cell phone

- Press the MULTIFUNCTION button once to end the call

- Press the MULTIFUNCTION button twice at anytime to redial

- If, while you are listening to music, your phone rings and you answer the call, the music selection will then continue from where it had stopped.

CARE AND STORAGE

- Store the speaker in a cool, dry place

- Do not use near fire sources

- Keep speaker away from water

- Do not dismantle speaker

- Incorrect operation may damage the speaker

WARNING: Liquids, chemicals, and open flames may cause permanent damage. Handle with care

Designed in USA - Made in China. Distributed Hamilton NJ 08609 MixBin Electronics LLC. All rights reserved.

Please contact info@getmixbin.com or call 855.MIXBIN-NOW regarding any questions or issues with the speaker.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.