



# WRIST WALKIE TALKIES

## INSTRUCTION MANUAL

5+

Thank you for purchasing your Nerf Wrist Walkie Talkies. You can use your walkie talkies to easily talk to your friends and look at the built-in watch to view the current time. For best results, read this instruction manual first before using.

### PACKAGE CONTENTS

- Two Wrist Walkie Talkies
- 12pcs AG10 batteries
- Instruction Manual with Warranty Information

### FEATURES

- Stay in touch with your friends!
- Perfect for indoor and outdoor play!
- Push-to-talk button and ON/OFF switch
- Built-in watch
- Each uses 6pcs AG10 batteries (included)

### INSERTING BATTERIES

Each walkie talkie requires 6 AG10 batteries for power.

When first using your walkie talkies pull out the paper tab covering the battery compartment.

To insert or replace batteries, use a screwdriver to remove the screw on the battery compartment door. Note that the battery compartment is located on the rear of each walkie talkie. Once the battery compartment is open, insert batteries with the correct polarity (+,-) as displayed in the battery compartment. After the batteries have been inserted, close the battery compartment, and once again use a screwdriver to screw the battery compartment door in place.

### USING YOUR WALKIE TALKIES

Once batteries are inserted you can follow the steps below to use your walkie talkies:

1. Slide the ON/OFF switch on each walkie talkie to the ON position.
2. Hold one walkie talkie close to your mouth.
3. Press the PUSH TO TALK button, and speak clearly to transmit a message to the other walkie talkie.
4. Release the PUSH TO TALK button when you are finished talking so that you can hear any incoming messages from the other walkie talkie.
5. When you are finished using your walkie talkies, slide the ON/OFF switch on each walkie talkie to the OFF position to power them off.

#### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information



# USING THE WATCH FEATURE

Lift open the cap to reveal the built-in watch.

Press the MODE button continuously to toggle through time, date and stop watch modes.

In time mode, the current time will be shown on the display screen.


In date mode, the current date will be shown on the display screen.

When in time mode, press the SET button two times to enter settings mode.

In settings mode, you can change the value of the current setting by pressing the MODE button, and confirm your setting and move on to the next selection by pressing the SET button.

The settings mode will let you adjust the following settings:

MONTH-->DATE-->HOUR-->MINUTE

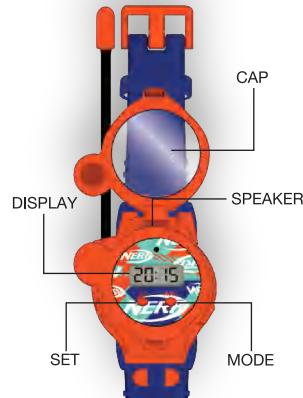

## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions. May cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \_\_\_ Reorient or relocate the receiving antenna.
- \_\_\_ Increase the separation between the equipment and receiver.
- \_\_\_ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \_\_\_ Consult the dealer or experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:  
The device has been evaluated to meet general RF exposure requirement.  
The device can be used in the portable exposure condition without restriction.

## One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To obtain Warranty Service and Troubleshooting information:  
Call 1-877-397-8200

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.



## WARNING:

CHOKING HAZARD

This article contains small parts which pose a hazard to children under 3 years.

NERF and all related trademarks and logos are trademarks of Hasbro Inc. © 2022 Hasbro.



Licensed by: