


POE Multi-Reader User Manual

Equipment:

Serial port cable, PC & POE Multi-Reader


1. Connect Reader with the PC via serial port cable.
2. Click “PORT SET”
3. Com Setting will show up

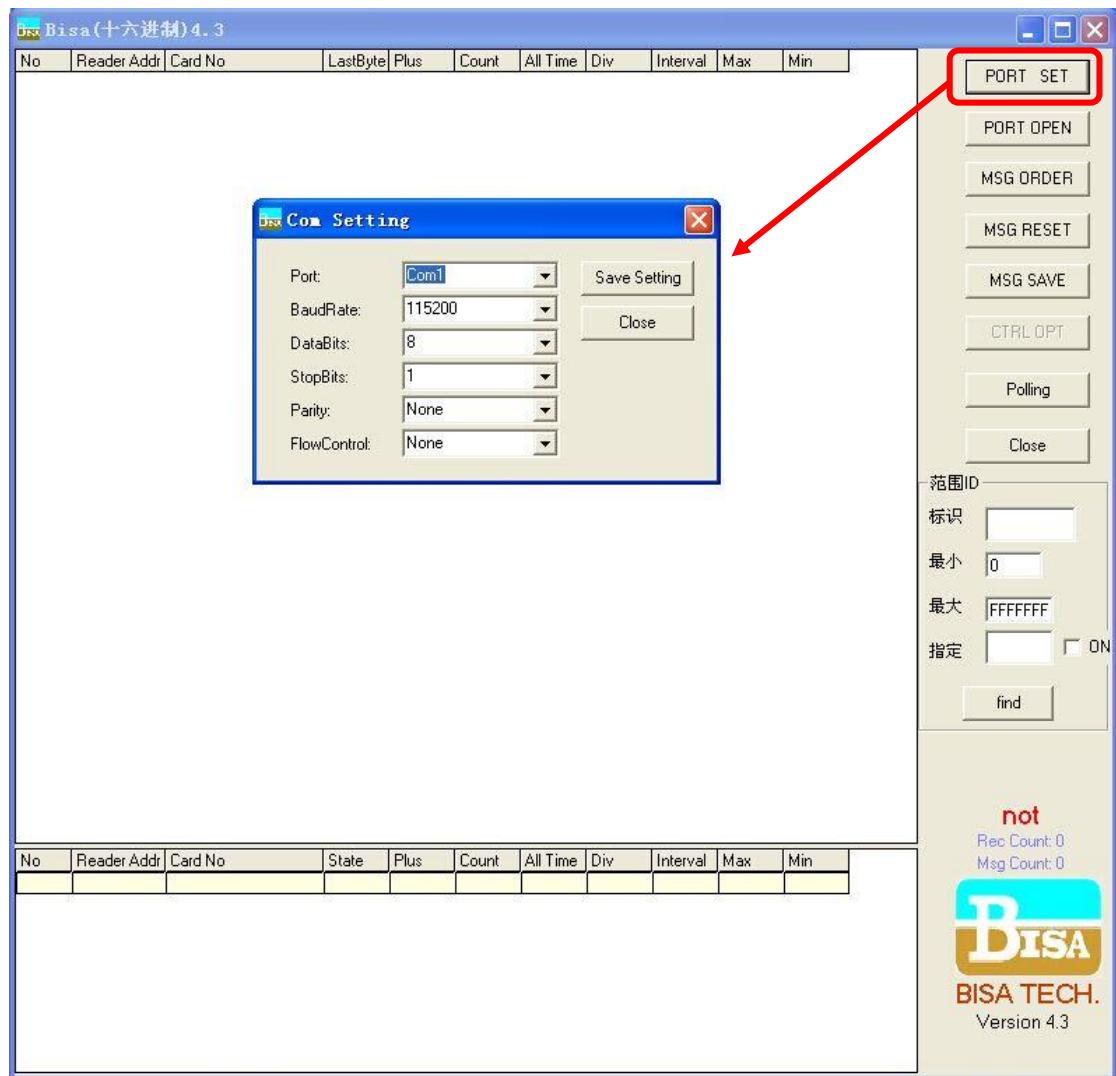

4. Select corresponding port with the PC then click “Save Setting”



5. Click “PORT OPEN”

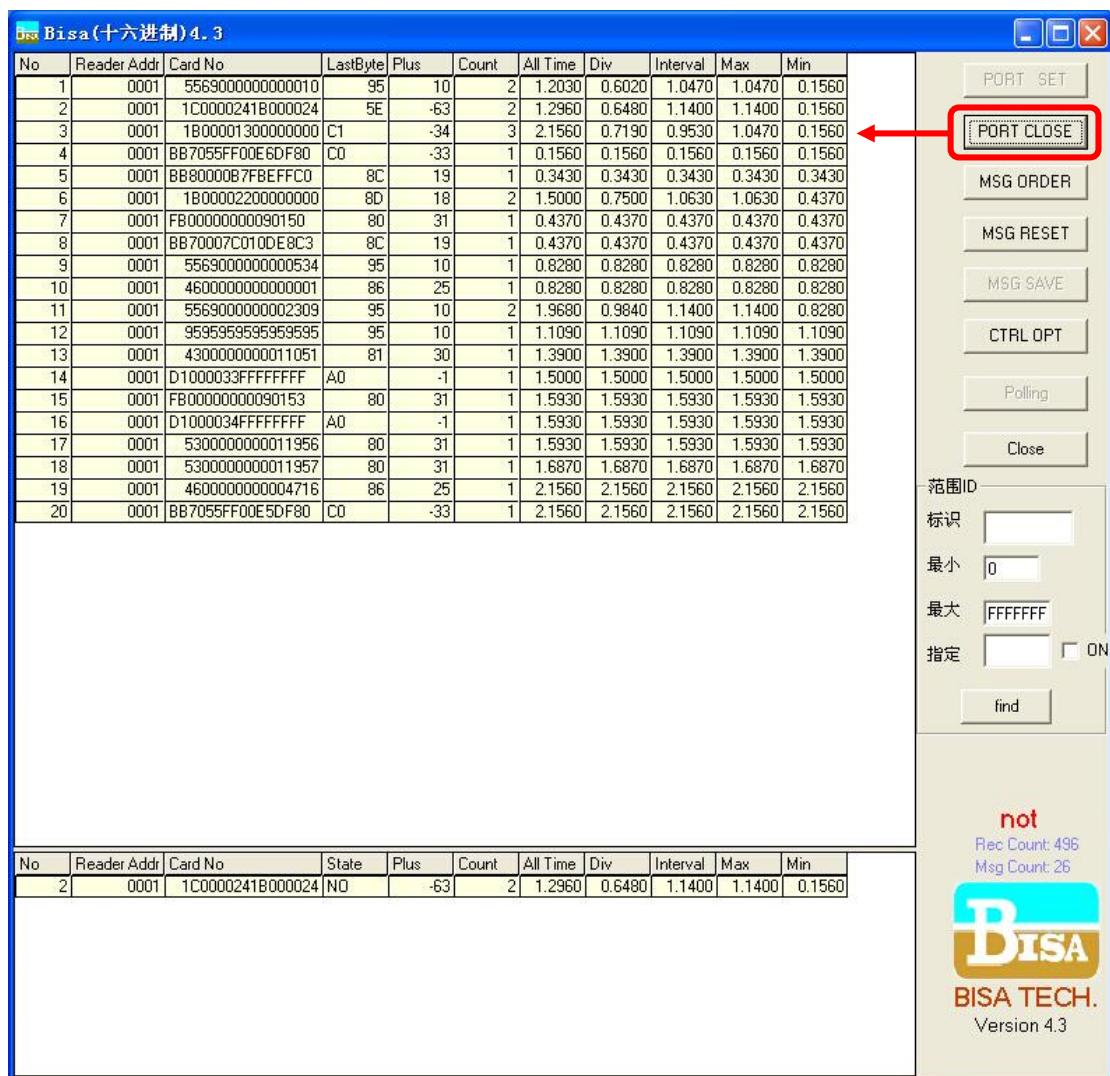

6. Data from tags will be received by reader now and the details information will be shown on the left hand side.

FCC Notices

This device complies with Part 15 of the FCC Rules.

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna
- Increasing the distance between the equipment and receiver
- Connecting the equipment to an outlet on a circuit which is different from the one the receiver is connected to
- Consult a qualified expert for help