


MSBT3909

 **Bluetooth®**

SD/MMC
CARD

USB
DEVICE

FM
TUNER

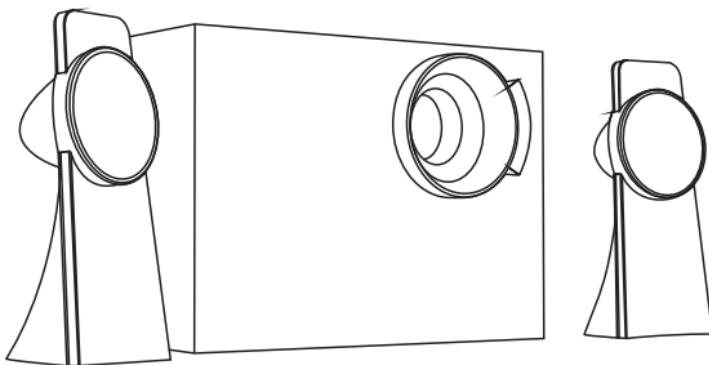

DEAR CUSTOMER

Congratulations on your purchase!

Please read this manual carefully and keep it for future reference.

Usage:

Specification:

- * Frequency Response: 40Hz-20KHz (**Audio**)
- * S/N Ratio: >75dB
- * Separation: >50dB
- * Speaker: 4" (101.6mm) + 2.75" (69.85mm) x2

Caution:

1. Do not expose to liquid or moisture (or dripping or splashing).
2. Do not place any objects filled with liquid on or over the apparatus.
3. Do not block the ventilation holes.
4. For indoor use only.
5. When using high output signal don't turn the volume to maximum to avoid distortion.


Inside Package:

Subwoofer Speaker	1pc
Satellite Speaker	2pcs
Audio Cable	1pc
User Manual	1pc
Remote Control	1pc
FM Antenna	1pc
Warranty Card	1pc

How to use the Bluetooth:

1. Select Bluetooth as the audio input.
2. Search for the Bluetooth device with the name "MSBT3909"
3. Connect to the Bluetooth
4. If your Bluetooth device is older than version 2.0, please input the password "0000" when connecting.

At the top

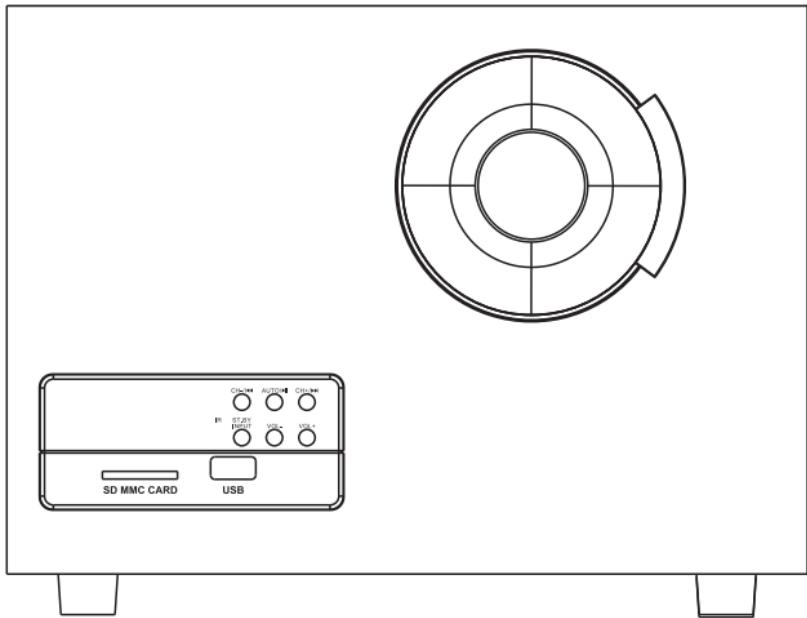

CH-/- **◀◀** ----- Previous track in USB/SD mode;
Previous saved channel in FM mode.

CH+/- **▶▶** ----- Next track in USB/SD mode;
Next saved channel in FM mode.

AUTO/PLAY ----- Play/pause in USB/SD mode;
Automatic FM radio search by pressing 3 secs.

IR ----- Remote Control Sensor Window


ST.BY/INPUT ----- Input function key, switch between AUX/USB/SD/FM modes;
Select the Stand-by function by pressing the Input function key for 3 seconds while in AUX/USB/SD/FM mode.

VOL+/- ----- Decrease/Increase Volume

SD/MMC Card ----- SD Card Port

USB INPUT ----- USB Port


System connection diagram

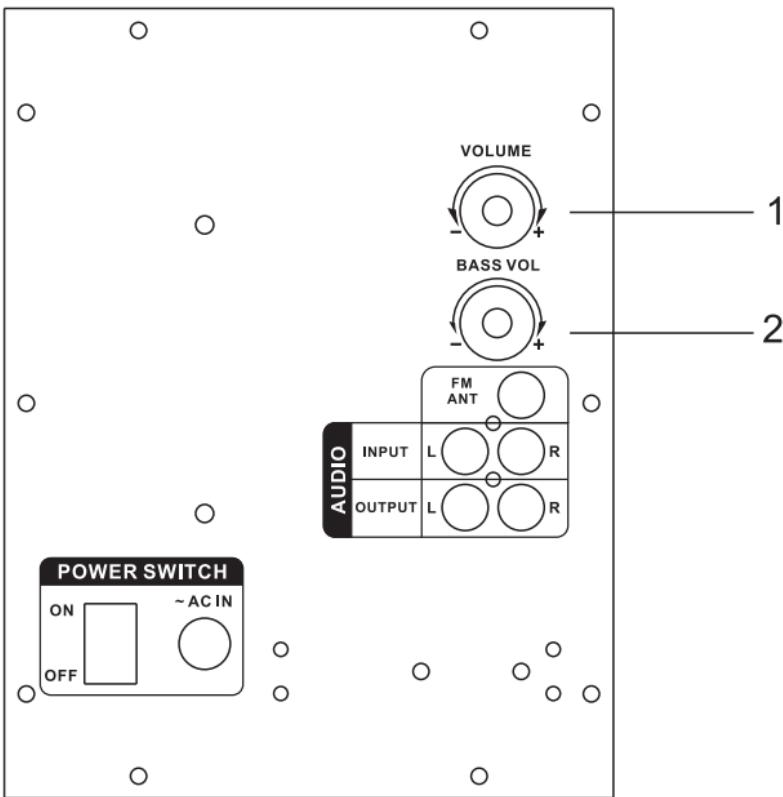

1. Master volume control knob.
2. Bass volume control knob.

*If the Remote Control is not functioning, it is likely because the battery has been used up.

System connection diagram

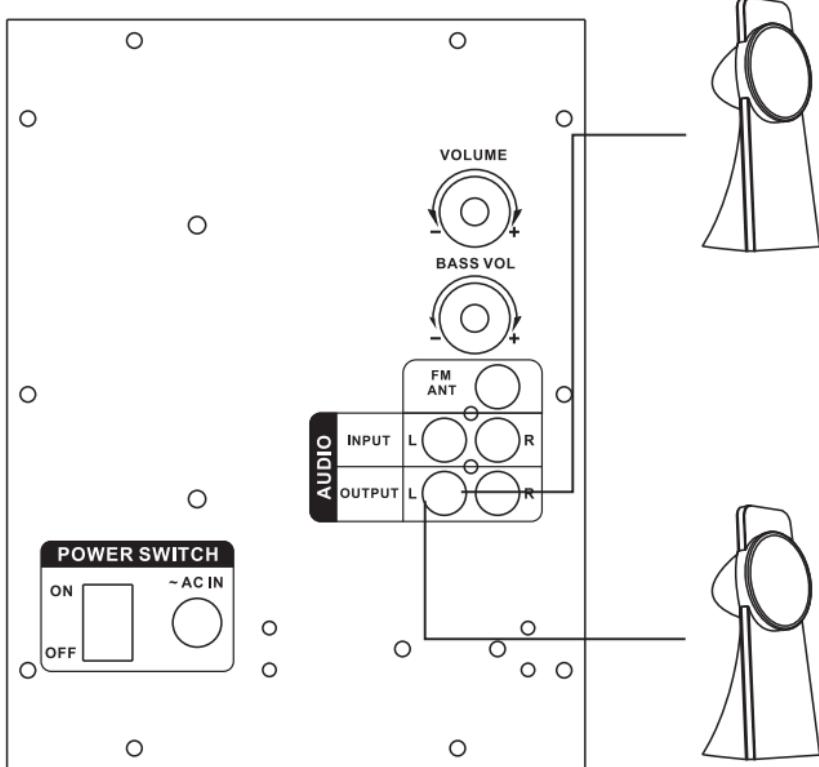

SPEAKER TERMINALS


Connect front speakers, a center speaker, and surround sound speakers to 2.1 speaker output terminals.



NOTE:

*Do not leave magnetic objects near the speakers.

System connection diagram

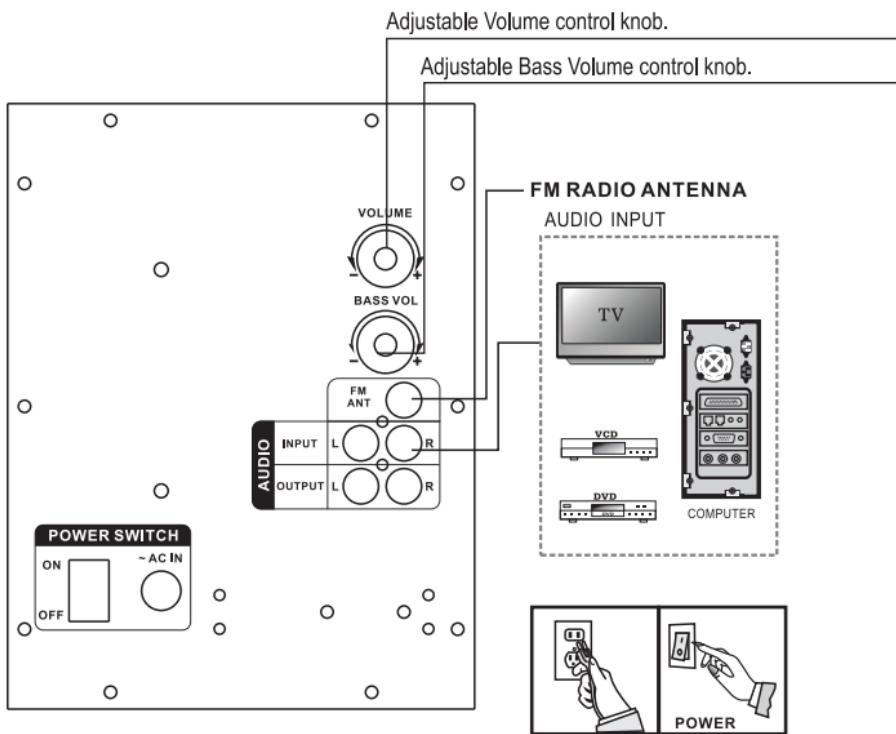

Connecting equipment:

Jacks and plugs of the connecting cord are color coded as follows:

Red jacks and plugs: For the left channel of audio signals.



NOTE:


Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.



IMPORTANT:

Connect the speakers and all other external equipment and finally connect the AC power cord.


How to use the remote control

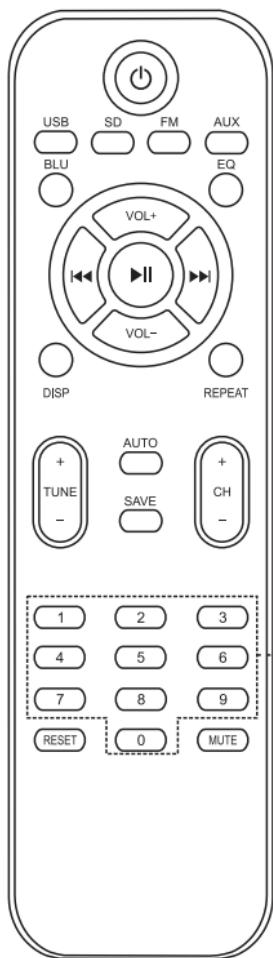

- Power switch button (standby)
On or off / standby.
- USB ----- USB Input
- SD ----- SD Input
- FM ----- FM Radio
- AUX ----- Auxiliary Input
- BLU ----- Bluetooth Input
- EQ ----- Equalizer Sound Selection
- ▶II ----- Play/Pause
- ◀ ----- Previous track while in USB/SD mode
- ▶ ----- Next track while in USB/SD mode
- VOL +/- ---- Master Volume
- DISP ----- Adjust Brightness
- REPEAT --- Repeat
- TUNE +/- -- Previous/Next Channel
(keep pressing to search)
- AUTO ----- Automatic Tuning in FM Radio mode
- SAVE ----- Save FM Channel
- CH +/- ----- Previous/Next Channel in FM Radio mode
----- Press any key to select track
- RESET ----- When volume level is at maximum, press the "RESET" button to return to the default status while the power is on
- MUTE – Mute key

*If the Remote Control is not functioning, it is likely because the battery has been used up.

Positioning the speakers

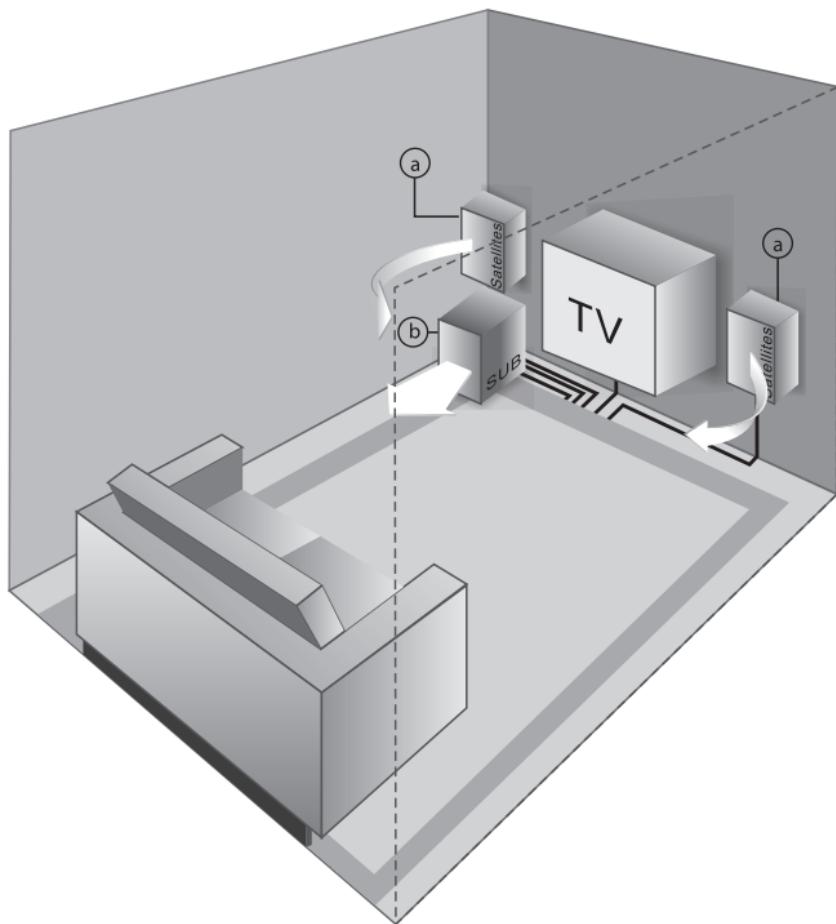

ⓐ Speakers

ⓑ Sub-woofer

Place the sub-woofer any place on the floor.

(There is no directional requirement for the Bass effect.)

WARNING!

Mobile Phone (via USB), Portable Hard Drive, MP4, and some other USB-powered electronics may not be compatible with this product.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SHENZHEN CITY ENKOR ELECTRONICS LIMITED. May void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.