

Infrared Motion wireless alarm chime Instructions

Model Number: 622-108

includes a wireless detector & receiver

Manufacturer: HEFEI LONG RIVER ELECTRICAL CO., LTD.

Instructions

Follow the steps for usage...

1. Place 9V batteries in the main unit & 2-AA batteries the receiver units paying close attention to the polarity..
2. In main unit, switch button to ON.
3. Mount the detector properly in location you wish the motion detection to occur.
4. ADJUST the Volume to either HI or LO position on the receiver.
5. The remote detective system should now be operating.
7. Place the receiver in an easy to reach place.
8. When the detector senses motion, the receiver will make an audible sound & the LED light will flash.
9. Wait for 30 seconds after switching on detector & receiver to activate.
10. Please install both units 3 feet above ground level for optimal performance.

Useful tips ...

The detector should be placed in an area protected from wind and moisture. Also, position the detector in a clear path to the receiver, so that you get optimal performance.

Care & Maintenance

Important: The detector & receiver should be positioned in sheltered places to avoid contact with water and direct sunlight.

If the LED indicator does not go on, the battery power is either low or dead. At that time you should change the batteries.


Clean the detector regularly with a damp cloth to avoid blockage of sensor by dirt or any small particles.

This unit is not waterproof, during heavy storms & snowfalls, it is recommended that the unit be moved indoors or in a safe place out of the elements.


When the unit is not in use, take out all batteries, clean both units and store the units in dry, cool place.

This device is not a toy and should keep out of reach from children.

DETECTOR | OUTDOOR

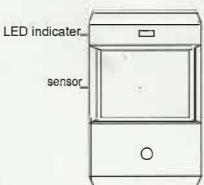


- Requires 9 volt heavy duty battery
- Infrared motion detection reaches maximum 400 ft. Obstacles in front may narrow the coverage.

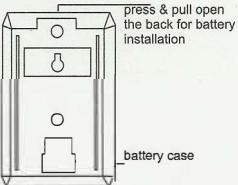


- Switch inside unit to ON to operate.

RECEIVER | INDOOR

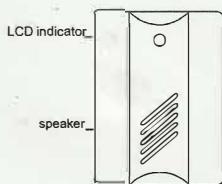

- Requires 2xAA batteries
- HI/LO switch for adjusting volume

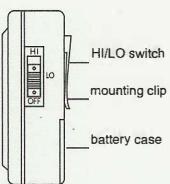

- Mounting bracket on back
- When signals received, LCD indicator will flash & a built in speaker will create a beeping sound.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.