

- (2) MENU button Short press; Call up/close menu Long press; Start scan function
- ③ On/Off button <u>Short press:</u> Switch on car sound system <u>In operation:</u> Mute car sound system (Mute) <u>Long press:</u> Switch off car sound system
- (4) Volume control
- (5) CD tray
- 6 Display
- 7 Rotary control
  In the menu: Change menu level,
  select menu item, change setting
  Radio mode: Set frequency,
  start station/PTY seek tuning
  CD/MP3/WMA/iPod mode:
  Track selection, fast forward/reverse
  Browse mode in MP3/WMA/iPod mode: ID3
  category (iPod only), select folder and track
- 8 **\( \Delta\)** button (Eject) Eject a CD
- 9 Microphone

- (10) Front USB port
- (11) Front AUX-IN socket
- (3) button
  Short press: Answering a call, speed dial
  Long press: Open the phone book of the cell
  phone or activate voice dialing
- (14) Keys 1 5
- (15) Infrared receiver
- (16) SRC button Select memory bank or audio source
- (17) **DIS** button <u>Short press:</u> Switch display <u>Long press:</u> Switch display brightness
- (18) SD card slot Access only with detached control panel







#### Contents

| Safety notes 39  |
|--|
| Cleaning notes 40  |
| Disposal notes40   |
| Scope of delivery 40   |
| Placing the device in operation 40                             |
| Attaching/detaching the control panel40                        |
| Display language41   |
| Important note for radio reception41                           |
| Switching on/off41   |
| Volume41   |
| Display brightness42   |
| Switching demo mode on/off42                                   |
| Traffic information42  |
| Radio mode 42  |
| RDS42  |
| Changing to radio mode or selecting                            |
| a memory bank43  |
| Tuning into a station43  |
| Storing stations or calling stored stations43                  |
| Scanning stations43  |
| Storing stations automatically (Travelstore)44                 |
| PTY44  |
| Configuring the display45                                      |
| CD/MP3/WMA/iPod mode45   |
| Basic information45  |
| Changing to CD/MP3/WMA/iPod mode46                             |
| Inserting/ejecting a CD46                                      |
| Connecting/removing a USB data carrier46                       |
| Inserting/removing the memory card47                           |
| Selecting tracks47 Selecting a folder (in MP3/WMA mode only)47 |
| Fast searching48   |
| Interrupting playback48  |
| Scanning all tracks (not in iPod mode)48                       |
| Playing tracks in random order48                               |
| Repeatedly playing individual tracks                           |
| or directories48   |
| Configuring the display49                                      |
| Browse mode49  |
| Searching by track names                                       |
| (not in iPod mode)50   |

| Pandora® mode (1 011 502 441 001 only) 50 |
|---|
| Requirements50                            |
| Connecting the iPod/iPhone device51       |
| Connecting the Android device51           |
| Starting the Pandora® mode51              |
| Searching stations51                      |
| Shuffle mode51                            |
| Skipping tracks51                         |
| Interrupting playback51                   |
| Thumbs feedback51                         |
| Bluetooth® 52                             |
| Bluetooth® menu52                         |
| Pairing and connecting a device53         |
| Twin connect54                            |
| Telephone functions54                     |
| Bluetooth® streaming mode57               |
| Bluetooth® streaming mode via             |
| app control (Android cell phone)58        |
| Phone book functions58                    |
| Additional functions in                   |
| the Bluetooth® menu59                     |
| External audio sources61                  |
| Front AUX-IN socket61                     |
| Sound settings 62                         |
| Calling and exiting the "AUDIO" menu62    |
| Making settings in the "AUDIO" menu62     |
| Setting the 3-band equaliser63            |
| User settings65                           |
| Calling the user menu and selecting       |
| a menu65                                  |
| Making settings in the "TUNER" menu65     |
| Making settings in the "DISPLAY" menu67   |
| Making settings in the "VOLUME" menu67    |
| Making settings in the "CLOCK" menu68     |
| Making settings in the "VARIOUS" menu69   |
| Factory settings 69                       |
| Useful information                        |
| Warranty                                  |
| Service70                                 |
| Technical data                            |
|   |
| Installation instructions213              |





## Safety notes

The car sound system was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions.

These instructions contain important information to easily and safely install and operate the car sound system.

- Read these instructions carefully and completely before using the car sound system.
- Keep the instructions at a location so that they are always accessible to all users.
- Always pass on the car sound system to third parties together with these instructions.

In addition, observe the instructions of the devices used in conjunction with this car sound system.

### Symbols used

These instructions employ the following symbols:



#### DANGER!

Warns about injuries



#### CAUTION!

Warns about damaging the CD drive



#### DANGER!

Warns about high volume



The CE mark confirms the compliance with FU directives.

- Identifies a sequencing step
- · Identifies a listing

### **Road safety**

Observe the following notes about road safety:

- Use your device in such a way that you can always safely control your vehicle. In case of doubt, stop at a suitable location and operate your device while the vehicle is standing.
- Remove or attach the control panel only while the vehicle is standing.
- Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e.g. police sirens). During mute phases (e.g. when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase.

### **General safety notes**

Observe the following notes to protect yourself against injuries:

- Do not modify or open the device. The device contains a Class 1 laser that can cause injuries to your eyes.
- Do not increase the volume during mute phases, e.g. when changing the audio source. Changing the volume is not audible during a mute phase.

#### Use as directed

This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist.

#### Installation instructions

You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the installation instructions at the end of these instructions.





#### Safety notes | Cleaning notes | Disposal notes | Scope of delivery | Placing the device in operation

### **Declaration of conformity**

The Blaupunkt Technology GmbH declares that the car sound system Toronto 440 complies with the basic requirements and the other relevant regulations of the directives 2004/108/EC and 1999/5/EC.

The declaration of conformity can be found on the Internet under www.blaupunkt.com.

## Cleaning notes

Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system.

- · Use only a dry or slightly moistened cloth for cleaning the car sound system.
- · If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol.

## Disposal notes



Do not dispose of your old unit in the household trash!

Use the return and collection systems available to dispose of the old device.

## Scope of delivery

The scope of delivery includes:

- 1 Car sound system
- 1 Operating/installation instructions
- 1 Case for the control panel
- 1 Support frame
- 1 Antenna connection adapter
- 2 Disassembly tools

Extended scope of delivery:

- 1 011 502 440 001 only
- 1 Spacer screw
- 1 Rubber cap

40

- 1 011 502 441 001 only
- 1 Handheld remote control (incl. battery)

- Connecting cable chamber A
- 1 Connecting cable chamber B

## **Optional equipment** (not part of the scope of delivery)

Use only accessories approved by Blaupunkt. Information is available from your Blaupunkt specialised dealer or on the Internet under www.blaupunkt.com.

## Placing the device in operation

#### Caution!

#### Transport securing screws

Before the startup of the car sound system, ensure that the transport securing screws are removed (see the chapter "Installation instructions").

## Attaching/detaching the control panel

The car sound system is equipped with a detachable control panel (release panel) to protect your equipment against theft. In the delivery state, the control panel is in the supplied case. To start operating the radio after installation, you must first attach the control panel (see the section "Attaching the control panel" in this chapter).

Always take the control panel with you when leaving the vehicle. The car sound system is worthless to a thief without this control panel.

#### Caution

#### Damage to the control panel

Never drop the control panel.

Transport the control panel so that it is protected against impacts and the contacts cannot become dirty.

Do not expose the control panel to direct sunlight or another heat source.

Avoid direct skin contact with the control panel's electrical contacts.





#### Attaching the control panel

- ► Push the control panel into the bracket at the right edge of the device.
- Push the control panel carefully into the left bracket until it clicks into place.

### Removing the control panel

Press the would button to unlock the control panel.

The left side of the control panel detaches from the device and is secured by the bracket against falling out.

- Move the control panel slightly to the left until it disengages from the right bracket.
- Carefully remove the control panel from the left bracket.

#### Note:

The car sound system automatically switches off after approx. 10 seconds if the control panel is removed.

### Display language

You can define whether the language for messages on the display is English or German. The setting is performed in the user menu (see the chapter "User settings", section "Making settings in the "DISPLAY" menu", menu item "LANGUAGE").

## Important note for radio reception

This car sound system is designed for operation in different regions with different frequency ranges and station technologies. Available reception areas are "EUROPE", "ASIA", "USA", "SOUTH AMERICA" and "THAILAND".

You may have to set a suitable reception area first for the radio reception in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "TUNER AREA").

### Switching on/off

#### Switching on/off with the On/Off button

- For switch-on, press the On/Off button 3.

  The car sound system switches on.
- To switch off the device, press and hold down the On/Off button 3 for longer than 2 seconds.

The car sound system switches off.

#### Note:

If you switch on the car sound system while the vehicle ignition is switched off, it automatically switches off after 1 hour to preserve the vehicle battery.

#### Switching on/off via vehicle ignition

The car sound system will switch off/on simultaneously with the ignition if the device is correctly connected to the vehicle's ignition as shown in the installation instructions and you did not switch the device off by pressing the On/Off button (3).

#### Volume

#### Adjusting the volume

You can adjust the volume in steps from 0 (off) to 50 (maximum).

■ Turn the volume control (4) to change the volume.

#### Note:

If a telephone is connected with the car sound system as described in the installation instructions, the car sound system is muted in case of a phone call. During muting, the display shows "TELEPHONE"

#### Muting the car sound system (Mute)

Briefly press the On/Off button (3) to mute the car sound system or to reactivate the previous volume.

While it is muted, the display shows "MUTE".





## **Display brightness**

You can manually switch the display brightness between daytime mode and night-time mode or switch automatically with the driving lights of the vehicle.

#### Note:

The manual or automatic switching of the display brightness is selected in the user menu (see the chapter "User settings", section "Making settings in the "DISPLAY" menu", menu item "DIMMER").

Press the DIS button (17) for approx. 2 seconds to start scanning.

## Switching demo mode on/off

The demo mode shows the functions of the car sound system as scrolling text on the display. By pressing any button, the demo mode is interrupted and you can operate the device.

The demo mode can be switched on and off in the user menu (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "DEMO MODE").

## **Traffic information**

In the reception area "EUROPE", an FM station can identify traffic reports by means of an RDS signal. If priority for traffic reports is switched on, a traffic report is automatically switched through, even if the car sound system is currently not in radio mode.

If priority is switched on, the display shows the traffic jam symbol ( "TRAFFIC" is displayed during a switched-through traffic announcement.

The priority is activated and deactivated in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "TRAFFICINFO").

#### Notes:

 The volume is increased for the duration of the switched-through traffic announcement. You can adjust the minimum volume for traffic announcements (see the chapter "User settings", section "Making settings in the "VOLUME" menu", menu item "TRAFFIC VOL").

• To cancel a switched-through traffic announcement, press the **SRC** button (16).

### Radio mode

#### RDS

Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the reception area "EUROPE" that allows the following additional functions:

- The station name is shown on the display.
- The car sound system recognises traffic announcements and news broadcasts and can automatically switch them through in other operating modes (e.g. in CD mode).
- Alternate frequency: If RDS is activated, the car sound system automatically selects the best receivable frequency for the station that is currently set.
- Regional: At certain times, some radio stations divide their programme into regional programmes providing different content. If the REGIONAL function is activated, the car sound system changes only to those alternate frequencies on which the same regional programme is being broadcast.

The functions RDS and REGIONAL are activated and deactivated in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu items "RDS AF" and "REGIONAL").

#### Note:

If you adjust a different reception area than "EUROPE", RDS is automatically switched off. The station name continues to be shown on the display. If you want to use radio stations with RDS features in your region, switch on RDS in the user menu.







The following memory banks are available in the different reception areas:

| Region        | Memory banks           |  |
|---------------|------------------------|--|
| EUROPE        | FM1, FM2, FMT, AM, LW  |  |
| ASIA          |                        |  |
| USA           | <br>  FA41             |  |
| SOUTH AMERICA | FM1, FM2, FMT, AM, AMT |  |
| THAILAND      |                        |  |

Press the SRC button 16 repeatedly until the desired memory bank is displayed.

#### Notes:

- Up to 5 stations can be stored in each memory bank.
- You can disable certain memory banks that you do not want to use (see chapter "User settings", section "Making settings in the "TUNER" menu", menu item "BAND SELECTION"). Deactivated memory banks are skipped during the source selection with the SRC button (16).

## **Tuning into a station**

There are various ways of tuning into a station:

#### Starting station seek tuning

Turn rotary control 7 one notch counterclockwise or clockwise to start station seek tuning.

The display briefly shows "SEARCH AUTO". The radio tunes into the next receivable station.

#### Notes:

- For the reception area "EUROPE": In the FM waveband, only traffic information stations are tuned into if the priority for traffic information () is switched on.
- The sensitivity of seek tuning can be adjusted (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "SENSITIVITY").

#### Tuning into stations manually

► Press the rotary button ⑦ once to activate manual station tuning.

The display briefly shows "SEARCH MANUAL".

★ Turn the rotary control 7 to change the frequency in increments.

#### Note:

The manual station tuning is automatically exited approx. 15 seconds after the last frequency change, and the station seek tuning is started by turning the rotary control (7).

## Storing stations or calling stored stations

- Select the desired memory bank.
- If necessary, set the desired station.
- Press the station button 1 5 (14) for approx. 2 seconds to store the current station under the button.

- or -

Briefly press the station button 1 - 5 14 to call up the stored station.

## **Scanning stations**

With the scan function, you can scan either every receivable station or every stored station of the current waveband.

#### Note:

You can adjust the scan time for each station (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "SCAN TIME").

## Scanning all receivable stations of the waveband

Press the MENU button 2 for approx. 2 seconds to start scanning.

During the scan, the display alternately displays "SCAN" and the current frequency as well as memory bank or station name.

Briefly press the MENU button ② to continue listening to the station that is currently being scanned.





#### Radio mode

#### Scanning all stored stations of the waveband

► Press the rotary control 7 for approx. 2 seconds to start the scanning.

During the scan, the display alternately displays the current frequency as well as memory bank and location or station name.

 Briefly press the rotary control 7 to continue listening to the station that is currently being scanned.

## Storing stations automatically (Travelstore)

With Travelstore, you can automatically search for and store the 5 FM stations offering the strongest reception in the region in the FMT memory bank. Any previously stored stations in this memory bank are deleted in the process.

In the reception areas "ASIA", "USA", "SOUTH AMERICA" and "THAILAND", you can also store 5 AM stations in the AMT memory bank.

- Select a memory bank of the desired waveband, e.g. FM1 or AM.
- Press the SRC button (16) for approx. 2 seconds.

The tuner starts the automatic station seek tuning; the display shows "FM TSTORE" or "AM TSTORE". After the storing is completed, the radio plays the station at memory location 1 of the FMT or AMT level.

#### Notes:

- For the reception area "EUROPE": If the priority for traffic information is switched on (), only traffic information stations are stored.
- If the FMT or AMT memory bank is deactivated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "BAND SELECTION"), it is automatically reactivated if you initiate the Travelstore function.

#### PTY

In the reception areas "EUROPE" and "USA", an FM station can transmit its current programme type, e.g. CULTURE, POP, JAZZ, ROCK, SPORT or SCIENCE. Hence, the PTY function allows a targeted search for broadcasts of a certain programme type, e.g. for rock or sports broadcasts. Note that PTY is not supported by all stations.

#### Note:

The PTY function is only available if it has been activated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY").

#### Selecting a programme type

To select a programme type. read the section "Making settings in the "TUNER" menu", menu item "PTY TYPES" in the chapter "User settings".

#### Note:

In the reception area "EUROPE", you can adjust the language in which the programme types are displayed (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY LANGUAGE").

#### Searching for stations

Prerequisite: PTY function is switched on.

- Press the rotary control 7 twice.
  - The display briefly shows "SEARCH PTY".
- Turn rotary control 7 one notch counterclockwise or clockwise to start the PTY seek tuning.

During the seek tuning, "SEARCH" and the currently selected programme type are shown on the display.

As soon as a station with the desired programme type is found, it remains being tuned into

#### Notes:

 If no station with the selected programme type is found, "NO PTY" is briefly displayed and 2 beeps can be heard. The radio will then retune to the station that it played last.







If the tuned radio station or another station on the broadcasting network broadcasts your selected programme type at a later point in time, the car sound system will automatically switch from the currently tuned station or from the current audio source (e.g. CD) to the station whose programme type matches the one you selected. Note that this function is not supported by all stations.

## Configuring the display

Press the DIS button (7) to toggle between these displays:

| Display      | Meaning                                   |  |
|--------------|---|--|
| ABCDEF       | Station name                              |  |
| RADIO TEXT   | Radio text, only if available             |  |
| P1 FM1 89.90 | Memory location/<br>memory bank/frequency |  |
| P1 FM1 08:40 | Memory location/<br>memory bank/time      |  |

## CD/MP3/WMA/iPod mode

#### **Basic information**

#### CD/MP3/WMA mode

This car sound system can be used to play back audio CDs (CDDA) and CD-R/RWs with audio, MP3 or WMA files as well as MP3 or WMA files on USB data carriers and SD(HC)/MMC memory cards.

#### Notes:

- To ensure proper functioning, use only CDs with the Compact-Disc logo.
- Blaupunkt cannot guarantee the flawless function of copy-protected CDs and all CD blanks, USB data carriers and memory cards available on the market.

Note the following information when preparing an MP3/WMA data carrier:

· Naming of tracks and directories:

- Max. 32 characters without the file extension ".mp3" or ".wma" (the use of more characters reduces the number of tracks and folders that the car sound system can recognise)
- No umlauts or special characters
- · CD formats: CD-R/RW, Ø: 12 cm
- CD data formats: ISO 9669 Level 1 and 2, Joliet
- · CD burn speed: Max. 16x (recommended)
- USB format/file system: Mass storage device/ FAT16/32
- · Memory card file system: FAT16/32
- · File extension of audio files:
  - MP3 for MP3 files
  - .WMA for WMA files
- WMA files only without Digital Rights Management (DRM) and created with Windows Media Player version 8 or later
- MP3 ID3 tags: Version 1 and 2
- · Bitrate for creating audio files:
  - MP3: 32 to 320 kbps
  - WMA: 32 to 192 kbps
- Maximum number of files and directories: Up to 30,000 files/500 directories depending on the data structure

#### iPod mode

You can connect numerous iPod and iPhone models to the car sound system via the USB port in the front of the device and the USB port at the rear and control the audio playback from the car sound system.

#### Notes:

- Alist of compatible iPod and iPhone models is located at the end of these instructions. Blaupunkt cannot guarantee the flawless function of other iPod and iPhone models.
- If an iPhone and iPod are connected at the same time, the devices are charged via the USB ports. If two iPhones are connected at the same time, charging is not possible.

Use a suitable adapter cable to connect your iPod or iPhone with the USB port of the car sound system.





## Changing to CD/MP3/WMA/iPod mode

- ► Press the **SRC** button (16) repeatedly until the desired audio source is displayed:
  - "CD": Inserted CD.
  - "SD(HC)": Inserted memory card
  - "USB FRONT" or "USB REAR": USB data carrier connected to the front or rear.
  - "IPOD FRONT / IPHONE FRONT" or "IPOD REAR / IPHONE REAR": Connected iPod / iPhone at the front or rear side
  - "AUX": Connected external audio source.

#### Notes:

- The respective audio source can be selected only if a corresponding CD is inserted or a corresponding device is connected.
- If the car sound system first has to read the data of a connected device or data carrier before the playback, the display shows "READING". The duration of the reading depends on the data volume and design of the device or data carrier. If the device or data carrier is defective or the transferred data cannot be played back, a corresponding message appears on the display (e.g. "CD ERROR").

## Inserting/ejecting a CD

#### Inserting a CD



46

## Risk of severe damage to the CD

Noncircular contoured CDs (shape CDs) and CDs with a diameter of 8 cm (mini CDs) must not be used.

We accept no responsibility for any damage to the CD drive that may occur as a result of the use of unsuitable CDs.

#### Note:

You must not hinder or assist the drive as it automatically draws in the CD.

Insert the CD with its printed side up into the CD tray (5) until you feel a slight resistance.

The drive automatically draws in the CD and checks its data. Afterwards, the playback starts in CD or MP3 mode

#### Note:

If the inserted CD cannot be played back, "CD ERROR" is briefly displayed and the CD is automatically ejected after approx. 2 seconds.

#### **Ejecting a CD**

#### Note:

You must not hinder or assist the drive as it ejects the CD.

► Press the △ button ⑧ to eject an inserted

#### Notes:

- If a CD is ejected and not removed, the drive will automatically draw it back in again after approx. 10 seconds.
- You can also eject CDs while the car sound system is switched off or whilst another audio source is activated.

## Connecting/removing a USB data carrier

#### Note:

You can connect USB data carriers to the USB port at the front of the device as well as the rear USB port.

#### Connecting a USB data carrier

- Switch off the car sound system so that the data carrier will be correctly registered.
- First, pull the protective cap of the USB port

  10 to the front until it moves out of the port
  and fold it to the right to connect a data carrier to the USB port at the front of the device.







- Connect the USB data carrier.
- Turn on the car sound system.

If the USB data carrier is initially selected as audio source, the data are read first.

#### Notes:

- If the connected USB data carrier cannot be seen, "USB ERROR" is briefly displayed.
- The time required for reading in the data depends on the design and size of the USB data carrier.

#### Removing a USB data carrier

- Switch off the car sound system so that the data carrier will be correctly unregistered.
- Disconnect the USB data carrier.
- After you pulled off the data carrier from the USB port at the front of the device, close the protective cap of the USB port 10.

## Inserting/removing the memory card

### Inserting the memory card

- Detach the control panel.
- Insert the memory card with its labelled side up and its contacts first into the card slot 18 until it clicks into place.
- Attach the control panel.

After switch-on, the device automatically selects the inserted memory card as audio source. The data of the memory card are being read. Afterwards, the playback starts in MP3 mode.

#### Notes:

- If the inserted memory card cannot be played, "SD ERROR" is briefly displayed.
- The time required for reading the card depends on the design and size of the memory card.

#### Removing the memory card

- → Detach the control panel.
- Push on the memory card until it disengages.
- ► Pull the memory card out of the card slot (18).
- Attach the control panel.

## Selecting tracks

■ Turn rotary control 7 one notch counterclockwise or clockwise to change to the previous/next track

#### Notes:

- If you turn rotary control several notches counter-clockwise or clockwise, you jump forward or reverse by the corresponding number of tracks.
- If the current track plays longer than 3 seconds and you turn rotary control 7 by one notch counter-clockwise or clockwise, the tracks starts playing again.

## Selecting a folder (in MP3/WMA mode only)

- ▶ Press the rotary control 7 twice.
  The display briefly shows "FOLDER SELECT".
- Turn rotary control (7) one notch counterclockwise or clockwise to change to the previous/next folder.

#### Notes:

- If you turn rotary control several notches counter-clockwise or clockwise, you jump forward or reverse by the corresponding number of folders.
- If you press the rotary control 7 again, the display briefly shows "TRACK SELECT".
   By turning the rotary control 7, you select a different track.





#### CD/MP3/WMA/iPod mode

### Fast searching

- Press the rotary control 7 once.
  The display briefly shows "CUE/REVIEW".
- Turn rotary control 7 one notch counterclockwise or clockwise to start fast cue/ review
- Press the rotary control 7 once the desired position has been reached.

#### Note:

If you press the rotary control  $\bigcirc$  a second time, the display briefly shows "FOLDER SELECT". By turning the rotary control  $\bigcirc$ , you select a different folder.

## Interrupting playback

► Press the **3** button ► 14 to interrupt the playback ("PAUSE") or to continue it.

## Scanning all tracks (not in iPod mode)

The scan function scans all available tracks.

Press the rotary control (7) for approx. 2 seconds to start the scan, or briefly to continue playing the currently scanned track.

During the scanning, "SCAN" and the file name are intermittently shown on the display.

#### Note:

48

The scan time can be adjusted (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "SCAN TIME").

## Playing tracks in random order

Press the **5** \* button (14) to change among the playback modes:

| Opera-<br>tion | Display    | Meaning                             |
|----------------|------------|-------------------------------------|
| CD/<br>iPod    | MIX ALL    | Mixing tracks                       |
| MP3/<br>WMA    | MIX FOLDER | Mixing tracks of the current folder |
|                | MIX ALL    | Mixing tracks of the data carrier   |
| Gen.           | MIX OFF    | Regular playback                    |

If the MIX function is switched on, the icon (mix all tracks) or improvement (mix tracks of current folder) is shown on the display.

## Repeatedly playing individual tracks or directories

Press the 4 5 button (14) to change among the playback modes:

| Opera-<br>tion | Display       | Meaning             |
|----------------|---------------|---------------------|
| CD/<br>iPod    | REPEAT TRACK  | Repeating tracks    |
| MP3/<br>WMA    | REPEAT TRACK  | Repeating<br>tracks |
|                | REPEAT FOLDER | Repeating folders   |
| Gen.           | REPEAT OFF    | Regular<br>playback |

If the REPEAT function is switched on, the icon (repeat tracks) or (repeat folders) is shown on the display.







## Configuring the display

Press the DIS button (7) once or several times to toggle between these displays:

| Opera-<br>tion | Display / icon         | Meaning                                     |
|----------------|------------------------|---|
| CD             | TRACK 01 00:15         | Track number and playing time               |
|                | TRACK 01 03:37         | Track number and duration                   |
|                | TRACK 01 08:40         | Track number and time                       |
| ABCDEF / 🔃     | File name <sup>2</sup> |   |
|                | ABCDEF / 📳             | Folder name <sup>2</sup>                    |
|                | ABCDEF / []            | Track name 1                                |
|                | ABCDEF / ( )           | Artist 1                                    |
|                | ABCDEF / (O)           | Album <sup>1</sup>                          |
| MP3/           | ABCDEF / 😿             | Genre <sup>3</sup>                          |
| WMA/<br>iPod   | PLAY TIME 00:15        | Playing time                                |
| irou           | TOTAL TIME 03:37       | Track dura-<br>tion                         |
|                | CLOCK 18:40            | Time  |
|                | ALL INFO /             | All informa-<br>tion as scroll-<br>ing text |

<sup>&</sup>lt;sup>1</sup> Track name, artist and album name must be stored as ID3 tag to be able to display them.

#### Note:

With every track change, the file name is briefly shown in MP3/WMA mode and the track name in iPod mode before the display switches to the defined display.

### **Browse mode**

In browse mode, you can directly search for and select a certain track on the MP3/WMA data carrier or iPod without interrupting the current playback.

#### Browse mode in MP3/WMA mode

In MP3/WMA mode, you can select and play a track from a directory of the data carrier.

► Briefly press the 1 ⊅ button (14) to call up the browse mode in MP3/WMA mode.

The point icon flashes on the display. The currently playing track and the point icon are shown.

#### Notes:

- To return to the respective higher-level directory level in browse mode, press the rotary control (7) for approx. 2 seconds, or turn the rotary control (7) until the "<<<" option is selected, and briefly press the rotary control (7).
- The browse mode remains switched on for 5 minutes without confirming a selection.
- You can exit the browse mode at any time by pressing the **1** pbutton 14.
- Turn the rotary control ⑦ to select another track 🗓 or folder 🚉, and press the rotary control ⑦ to confirm.
  - After selecting a folder, the first track or folder it contains is displayed.
  - After selecting a track, the playback starts and the browse mode exits.
- Repeat the operating procedure until the desired track is selected.

#### Browse mode in iPod mode

In iPod mode, the tracks can be selected and played via categories.

► Briefly press the 1 🎜 button (14) to call up the browse mode in the iPod mode.

The 

icon flashes on the display. The first category, "ARTISTS / ♣ ", is displayed.





<sup>&</sup>lt;sup>2</sup> The file and folder name is displayed only in MP3/WMA mode.

<sup>&</sup>lt;sup>3</sup> The genre information is available only on iPod mode.

#### Notes:

- Press the 1 pb button (4) for approx. 2 seconds to directly call up the "PLAYLISTS / []" category.
- The browse mode remains switched on for 5 minutes without confirming a selection.
- You can exit the browse mode at any time by pressing the **1** p button (14).
- Turn the rotary control 7 to select the desired category and press the rotary control 7 to confirm.

The first folder of the selected category is shown on the display.

#### Note:

To return to the category list, press the rotary control  $\bigcirc$  for approx. 2 seconds, or turn the rotary control  $\bigcirc$  until the "<<<" option is selected, and briefly press the rotary control  $\bigcirc$ .

Repeat the operating procedure until the desired track is selected.

The playback starts. You are exiting the browse mode.

## Searching by track names (not in iPod mode)

On MP3/WMA data carriers, you can find a track based on its file name and start the playback.

► Press the 1 → button (14) for approx. 2 seconds to start the search function.

You can now enter a file name with up to 16 characters:

#### Notes:

- You do not have to enter the complete file name. You can enter only the first characters of the file name and select the desired track from the list of tracks found.
- You can exit the search function at any time by briefly pressing the 1 pb button 4.
- Turn the rotary control 7 to select a character for the respective position.

- Briefly press the rotary control 7 to go to the next position.
- ► Press the rotary control 7 for approx. 2 seconds to start the search.

All tracks corresponding to the file name entered are listed.

- If necessary, turn the rotary control 7 to select a track.
- Briefly press the rotary control 7 to start the playback.

## Pandora® mode (1 011 502 441 001 only)

### Requirements

Control for Pandora® requires:

- An iPhone or an Android device with a reliable data connection, or an iPod touch that is connected to wireless internet
- The Pandora® app installed on the iPhone/iPod or the Android device.
- An active account with Pandora®. Sign up at www.pandora.com.
- The USB sync cable that came with your iPod/ iPhone device.

#### Notes:

- Pandora® is available only in the US and Australia.
- Refer to www.pandora.com/everywhere/ mobile for devices compatible with the Pandora® mobile application.
- Pandora® is an internet service, carrier and data charges may apply.
- Some Pandora® functionality cannot be operated from this car sound system.
- For issues using the Pandora® application, please contact Pandora at pandora-support @pandora.com







- Pull the protective cap of the USB socket (10) to the front until it moves out of the socket, and fold it down.
- Connect the iPod/iPhone device, using the USB sync cable included with your iPod/ iPhone device.

## **Connecting the Android device**

Connect this car sound system and the Android device via the Bluetooth function (see chapter "Bluetooth\*", section "Pairing and connecting a device").

## Starting the Pandora® mode

- Open the Pandora® application on your cell phone.
- ► Press the **SRC** button 16 repeatedly until "PANDORA" is displayed.

## **Searching stations**

You can display your station list and select stations directly from the car sound system.

- → Press the 1 → button (14) to display the stations menu.
- Turn the rotary control (7) to select "A-Z" (the station names are listed alphabetically) or "BY DATE" (the station names are listed by date).
- ► Press the rotary control 7 to display the selected station list.
- Turn the rotary control 7 to cycle through the list of stations.
- Press the rotary control 7 when the desired station is highlighted.

The playback will begin.

#### Notes:

- Stations must be created in your account prior to connecting your iPod/iPhone or Android device to the car sound system.
- You can exit the stations menu at any time by pressing the 1 
   <sup>⊕</sup> button (14).

### Shuffle mode

- ► Press the 1 → button 14 to display the stations menu.
- Turn the rotary control 7 to select "SHUFFLE" from the stations menu.
- ► Press the rotary control 7 to shuffle songs from all of your stations.

## **Skipping tracks**

Turn rotary control 7 one notch clockwise to skip to the next track.

#### Notes:

- The operation to replay a previous track is not available.
- Pandora® limits the number of skips allowed for their service.
- If you turn rotary control several notches clockwise, you jump forward by the corresponding number of tracks.

## Interrupting playback

► Press the 3 button ► 14 to interrupt the playback ("PAUSE") or to continue it.

#### Thumbs feedback

Press the rotary control 7 once.
The display briefly shows "THUMBS UP/DOWN".

#### Thumbs up

Turn rotary control 7 clockwise to tell Pandora® that you like the current track.

The **b** icon appears on the display until the next track. Pandora® will play more tracks with similar qualities.

#### Thumbs down

Turn the rotary control (7) counter-clockwise to tell Pandora® that you do not like the current track.

The **?** icon appears on the display until the next track. Pandora\* will not play the current track again, and will avoid playing tracks with similar qualities.





51

#### Rluetooth®

### Bluetooth®

You can connect the car sound system via Bluetooth® with other Bluetooth®-ready devices, such as cell phones or MP3 players. This allows you to use the car sound system with its integrated microphone as hands-free system for connected cell phones and control the audio output of other Bluetooth® devices and play them back via the loudspeakers of the car sound system (Bluetooth® streaming).

If a navigation app is installed on a cell phone connected with the car sound system, you can play back the announcements of the navigation app simultaneously with one of the internal audio sources of the car sound system (e.g. radio or CD). In addition, you can adjust the volume levels of both audio sources to each other. For further details, please read the sections "Activating/deactivating combined playback" and "Adjusting volume" in the chapter "Additional functions in the Bluetooth" menu".

#### Note:

You can also connect an external microphone for hands-free calling (see the chapter "Installation instructions").

Bluetooth® technology is a wireless connection of short range. For this reason, Bluetooth® devices must be located near the car sound system (in the vehicle) to establish and maintain a connection.

To establish a Bluetooth® connection, you must

To establish a Bluetooth® connection, you must first pair the car sound system and the Bluetooth® device. When you pair the devices, a Bluetooth® connection is subsequently established automatically. This connection remains in effect as long as the Bluetooth® device is within range. If the connection is interrupted, e.g. because you moved the cell phone outside the range, the connection is automatically re-established as soon as you are back within range.

You can connect 2 Bluetooth® devices with the car sound system at the same time (Twin Connect). Two cell phones can be connected at the same time, but only one streaming device. If you connect a new device with the car sound system, the connection to a currently connected device may

automatically be interrupted. However, the car sound system leaves up to 5 different Bluetooth® devices paired, and you can quickly and easily connect any of these devices with the car sound system again.

#### Bluetooth® menu

In the Bluetooth® menu, you find all the functions for pairing, connecting and managing Bluetooth® devices

#### Calling the Bluetooth® menu

- Briefly press the MENU button ② to open the user menu.
- Turn the rotary control 7 until the "BLUE-TOOTH" menu item is selected.
- Press the rotary control 7 to open the Bluetooth® menu.
- ★ Turn the rotary control 7 until the desired menu item is selected.
- Perform the setting (see the following sections)
- Briefly press the MENU button ② to exit the menu.

#### Notes:

- The Bluetooth® menu is automatically exited approx. 30 seconds after the last button activation and you are returned to the display of the current audio source.
- To go back to the next higher-level menu, turn the rotary control (7) until the "<<<" option is selected and press the rotary control (7).
- If a Bluetooth® process is running (e.g. re-establishing the connection to the last connected device), the functions of the Bluetooth® menu are blocked. If you attempt to open the Bluetooth® menu during this time, "LINK BUSY" briefly appears on the display. If you want to cancel the Bluetooth® process and open the Bluetooth® menu, press the button 12.







## Pairing and connecting a device

#### Note:

You can pair up to 5 Bluetooth® devices with this car sound system. Before you can pair a sixth device, you must first unpair one of the 5 already paired devices (see ch. "Additional functions in the Bluetooth® menu", section "Managing paired devices").

If you should attempt to pair a sixth Bluetooth\* device, "PHONE LIST FULL – PLEASE DELETE ENTRIES FROM LIST" is displayed.

#### Pairing and connecting a cell phone

#### Note:

If a connection with a cell phone currently exists, this connection is automatically disconnected if you pair and connect another cell phone.

- In the Bluetooth® menu, select the "PAIRING" menu item.
- Press the rotary control 7 to open the menu. The "MOBILE PHONE" menu item is selected.
- Press the rotary control 7 to register a cell phone.

The display intermittently shows "ENTER PIN" and the currently stored PIN (default "1234"). In addition, the Bluetooth® icon ℜ flashes. The car sound system can now be recognised by a Bluetooth® cell phone for approx. 2 minutes and connected.

Search the car sound system from your cell phone (Bluetooth\* name: "BP 440 BT") and establish the connection. Enter the PIN displayed by the car sound system, if necessary.

The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the cell phone are paired and connected.

#### Note:

If no connection can be established, the display briefly shows "CONNECT FAILED".

## Pairing and connecting a Bluetooth® streaming device

#### Note:

If a connection with a streaming device currently exists, this connection is automatically disconnected if you pair and connect another streaming device.

- In the Bluetooth® menu, select the "PAIRING" menu item.
- Press the rotary control 7 to open the menu.
  The "MOBILE PHONE" menu item is selected.
- ► Turn the rotary control 7 to select the "STREAMING" menu item.
- ► Press the rotary control 7 to register a streaming device.

The display shows the currently stored PIN (default "1234"). If required, enter the PIN of the streaming device:

- ★ Turn the rotary control 7 to select a digit for the respective position.
- ▶ Press the rotary control 7 to go to the next position.

#### Note:

Not all streaming devices require the entry of a PIN on the car sound system. For some streaming devices, you have to enter the PIN of the car sound system instead. For these devices, press only the rotary control ? repeatedly until you reach beyond the last position, thereby confirming the current PIN, and then enter this PIN on the streaming device.

The display intermittently shows "ENTER PIN" and the currently stored PIN (default "1234"). In addition, the Bluetooth® icon ≸ flashes. The car sound system can now be recognised by the streaming device for approx. 2 minutes and connected.

Search the car sound system from your streaming device (Bluetooth® name: "BP 440 BT") and establish the connection. Enter the PIN displayed by the car sound system, if necessary.





#### Rluetooth®

The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the streaming device are paired and connected.

#### Notes:

- If no connection can be established, the display briefly shows "CONNECT FAILED".
- If a Bluetooth® device is connected with the car sound system, the display shows the Bluetooth® icon \$.
- After switch-on, the car sound system automatically attempts to reconnect the device connected last. If the connection attempt fails, the display briefly shows "NO DEVICE". If necessary, attempt to re-establish the connection from the Bluetooth® device.

#### Twin connect

If you want to connect two Bluetooth® devices with the car sound system at the same time, Twin Connect needs to be activated in the Bluetooth® menu (see the chapter "Additional functions in the Bluetooth® menu", section "Activating/deactivating Twin Connect").

If two cell phones are connected with the car sound system, one of the connected phones must be selected as master telephone (see the chapter "Additional functions in the Bluetooth\* menu", section "Managing paired devices").

Upon activating Twin Connect, the currently connected telephone is automatically specified as master telephone. If no telephone is connected with the car sound system, the previously connected telephone is specified as master telephone. In the lift of telephones, an asterisk symbol (\*\*) is shown next to the Bluetooth\* name of the master telephone.

#### Notes:

- Only the master telephone is used for outgoing calls.
- You can access only the phone book of the master telephone.
- You can select the other connected telephone as master telephone at any time.

### **Telephone functions**

#### Answering/rejecting an incoming phone call

With an incoming call, the display alternately shows "INCOMING CALL" and the number of the caller. The current audio source is muted and a ring tone is played via the loudspeakers of the car sound system.

#### Note:

If the number of the caller is not being transmitted, the display shows "PRIVATE NUMBER" instead of the number. If the number of the caller is stored together with a name, the name of the entry and the number are displayed (see the section "Storing a phone number in the car sound system" in this chapter).

- Press the button (13) to answer the call. "CALL" and the duration of the ongoing call are displayed.
- Press the 12 button to reject the call or to end the current call.

The display shows "CALL END".

#### Notes:

- During the call, you can adjust the volume with the volume control 4 or mute the microphone and the loudspeakers with a short press of the On/Off button 3.
- You can preset the minimum volume for the call playback in the user menu (see the chapter "User settings", section "Making settings in the "VOLUME" menu", menu item "HANDSFREE VOL").
- You can switch the call playback back and forth between the loudspeakers of the car sound system and the cell phone with the button (13).
- If another call is received during an ongoing phone call, the second call cannot be answered via the car sound system.
- If the car sound system is switched off with active ignition, it automatically switches on with an incoming call. This allows you to make the call over the hands-free system.





After the call has ended, the car sound system automatically switches off again.

#### Making a call

- In the Bluetooth® menu, select the "DIAL NEW NUMBER" menu item.
- Press the rotary control 7 to open the entry menu.

You can now enter a phone number with up to 20 digits:

- Turn the rotary control 7 to select a digit for the respective position.
- ► Press the rotary control 7 to go to the next position.

#### Note:

To return to the previous position in the entry menu, turn the rotary control  $\bigcirc$  until the "<" option is selected, and press the rotary control  $\bigcirc$ .

Press the button 13 to call the number entered.

"CALLING" and the dialed number are alternately shown on the display.

As soon as your calling party answers the call, the display shows "CALL" and the time of the current phone call.

Upon ending the call, the display briefly shows "CALL END".

### Calling an entry in the phone book

#### Note:

This function is available only if the phone book of the connected cell phone was transferred to the car sound system (see the chapter "Phone book functions").

- In the Bluetooth® menu, select the "PHONE-BOOK" menu item.
- Press the rotary control 7 to open the phone book.

The display shows the first phone book entry.

#### Note:

If the phone book has not yet been transferred, the display briefly shows "PHONE-BOOK NOT AVAILABLE".

- or -

- IntheBluetooth®menu,selectthe"PBSEARCH' (phone book search) menu item.
- ► Press the rotary control 7 to open the entry
- Turn the rotary control 7 to select the first letter of the desired entry.
- ► Press the rotary control 7 to confirm the selection.

The display shows the first phone book entry that starts with the selected letter.

#### Note:

If the phone book does not contain any entry with the selected first letter, the display briefly shows "NOT FOUND".

- Turn the rotary control 7 to select a different entry.
- Press the rotary control 7 or the button 13 to call the number.

"CALLING" and the dialed number are alternately shown on the display.

#### Note:

You can also call an entry in the phone book via speed dial (see the section "Speed dial for phone book entries" in this chapter).

#### Making a call with voice dial

#### Note:

This function is only available if the connected cell phone supports voice dial.

- In the Bluetooth® menu, select the "VOICE DIAL" menu item.
- Press the rotary control 7 or the button 13 to activate voice recognition.

The car sound system is muted and the display shows "SPEAK NOW".

Say the name of the desired calling partner.





#### Bluetooth<sup>®</sup>

#### Notes:

- If no Bluetooth® connection is established when voice recognition is activated, the display briefly shows "VOICE DIAL FAILED – NO BT CONNECTION".
- If the spoken name is not being recognised or the time for the voice recognition has already expired, the display briefly shows "DIAL FAILED".
- You can cancel the voice recognition by pressing the button (12).
- Please note that the duration of the voice recognition is limited and depending on the respective cell phone.
- You can also activate the voice recognition via speed dial (see the section "Speed dial for voice dial" in this chapter).

## Storing a phone number in the car sound system

You can store phone numbers in the car sound system and make calls using the speed dial (see the following section).

A phone number is stored for the currently connected telephone and is available only for this telephone. The car sound system can store up to five numbers for up to five paired devices.

- Enter the phone number as described in the section "Making a call".
- Press the desired memory button 1 5 (14) for approx. 2 seconds to store only the number.
  - or -
- Press the rotary control 7 for approx. 2 seconds to enter a name for the entry.

You can now enter a name with up to 15 characters:

- Turn the rotary control 7 to select a character for the respective position.
- Press the rotary control 7 to go to the next position.

#### Note:

56

To return to the previous position in the entry menu, turn the rotary control 7 until the "<"

- option is selected, and press the rotary control (7).
- Press the desired memory button

  1 5 (14) for approx. 2 seconds to store the number and name

The display briefly shows "NUMBER SAVED". Afterwards, you are returned to the Bluetooth® menu and the "DIAL NEW NUMBER" menu item.

#### Notes:

- A number previously stored on the memory button is replaced.
- If a telephone is unpaired, the numbers stored for this telephone are automatically deleted.

## Speed dial for any phone number or for the number dialed last or a stored number

With speed dial, you can make a call without first having to select the corresponding function in the Bluetooth® menu.

To call the number dialed last,

press the button (13).

The display shows the number dialed last.

#### Note:

If no cell phone is currently connected, the Bluetooth® menu is opened. The "PAIRING" menu item is selected.

Press the button (13) to call the number.
"CALLING" and the dialed number are alternately shown on the display.

To call a stored number.

- press the button (13).
- Press a memory button 1 5 (14) to call the number stored.

#### Note

If no number is stored under the selected memory button, the display briefly shows "NO NUMBER".

Press the button (13) to call the number. "CALLING" and the dialed number are alternately shown on the display.





- press the button 13.
- Press the rotary control (7) to open the entry menu and enter a number (enter the phone number as described in the section "Making a call").
- Press the button 13 to call the number.

  "CALLING" and the dialed number are alternately shown on the display.

### Speed dial for phone book entries

#### Note:

This function is only available

- if the phone book of the connected cell phone was transferred to the car sound system (see the chapter "Phone book functions").
- if the speed dial is set for phone book entries (see the chapter "Additional functions in the Bluetooth" menu", section "Setting the button function for speed dial").

To select an entry of the phone book with the speed dial and call it,

press the button (13) for approx. 2 seconds.

The display shows the first phone book entry or the search function for phone book entries.

- If necessary, select another entry as described in the section "Calling an entry in the phone book".
- Press the button 13 to call the number.

  "CALLING" and the dialed number are alternately shown on the display.

#### Speed dial for voice dial

#### Note:

This function is only available

- if the connected cell phone supports voice
- if the speed dial is set for voice dial (see the chapter "Additional functions in the Bluetooth® menu", section "Setting the button function for speed dial").

To activate the voice recognition with the speed dial.

press the button (13) for approx. 2 seconds.

The car sound system is muted and the display shows "SPEAK NOW".

Say the name of the desired calling partner.

### Bluetooth® streaming mode

You can play back music from a Bluetooth® audio device via the loudspeakers of the car sound system if the audio device supports the Bluetooth® profile A2DP (Advanced Audio Distribution Profile).

### Starting the Bluetooth® streaming mode

Press the **SRC** (16) button repeatedly until "BT-STREAM" appears on the display.

The playback starts.

#### Notes:

- The Bluetooth® streaming mode can be selected only if a suitable streaming device is connected.
- If the connection to the streaming device is lost during playback, the display briefly shows "CONNECTION LOST" and the car sound system changes to the previous audio source.
- If a call is received during the music playback, the playback is interrupted and continued after the call.

#### Selecting tracks

Turn rotary control one notch counterclockwise or clockwise to change to the previous/next track.

## Interrupting playback

► Press the 3 button ► 14 to interrupt the playback ("PAUSE") or to continue it.





## Bluetooth® streaming mode via app control (Android cell phone)

With the "BLAUPUNKT Player Series 440" app, music files stored on an Android cell phone can be selected via the browse mode of the car sound system and played back. For this purpose, the app must be installed on the Android cell phone. The "BLAUPUNKT Player Series 440" app can be downloaded from the Google Play Store.

If you are using an Android cell phone with app control for music playback, you have to enable the app mode in the Bluetooth® menu (see chapter "Additional functions in the Bluetooth® menu", section "Adjusting the mode for Bluetooth® streaming mode").

### Starting Bluetooth® streaming via app control

Press the SRC button (16) repeatedly until the display shows "ANDROID".

The playback starts.

During the playback, the display shows ID3 tag information, such as title, artist, album name, etc. In addition, the Android logo appears.

The "BLAUPUNKT Player Series 440" app allows not only an operation using the buttons of the car sound system, but it also subdivides the music titles in certain music categories based on the ID3 tag information. As a result, you can quickly and easily select music titles via the browse mode of the car sound system (see chapter "CD/MP3/WMA/iPod mode", section "Browse mode").

#### Notes:

- The Bluetooth® streaming mode via "BLAUPUNKT Player Series 440" app is available only for Android cell phones with operating system Android 2.3 and higher. In addition, the cell phone must be compatible with the Bluetooth® profiles SPP (Serial Port Profile) and A2DP (Advanced Audio Distribution Profile).
- A list of Android cell phones with verified compatibility is located on the Internet under www.blaupunkt.com. Blaupunkt cannot guarantee the flawless function of other Android cell phones.

 If the connection to the cell phone is lost during playback, the display briefly shows "CONNECTION LOST" and the car sound system changes to the previous audio source.

#### Phone book functions

## Transferring the phone book of the cell phone to the car sound system

You can transfer the phone book of the connected cell phone to the car sound system to call entries of the phone book using the car sound system.

#### Notes

- The car sound system accepts only entries from the memory of the telephone and not from the SIM card inserted in the telephone.
- The transfer does not delete the phone book from the cell phone.
- You can access the phone book of the master telephone only if two cell phones are simultaneously connected with the car sound system.

The car sound system can store the phone books of the paired telephones with a total of up to 1000 entries. If several numbers are stored on the telephone for one contact (e.g. landline, cell phone number, office number and similar), each number is stored as a separate entry by the car sound system.

Each entry consists of a name and a number, each up to 20 characters on digits.

#### Note:

Do not switch off the car sound system while transferring the phone book. If you do or if the power supply of the car sound system should be interrupted for any reason, you have to restart the transfer.

- In the Bluetooth® menu, select the "DOWN-LOAD P-BOOK" menu item.
- ▶ Press the rotary control 7.
  The display shows "PLEASE CONFIRM".
- ► Press the rotary control (7) again.







"PHONEBOOK DOWNLOADING - PLEASE WAIT" appears on the display.

After the download is complete, the display briefly shows "DOWNLD COMPLETE".

#### Notes:

- To cancel the transfer, press the button (12).
- If the transfer of the phone book fails, the display briefly shows "DOWNLOAD FAILED".
- If the transfer of the phone book exceeds the storage capacity of the car sound system, the display briefly shows "PHONE-BOOK FULL". The phone book entries transferred so far remain stored.
- If you supplemented or changed entries on your cell phone since the last transfer, you can update the phone book on the car sound system by transferring it again. If the storage capacity of the car sound system is exceeded in the process, first delete the already transferred phone book (see the next section) or unpair another cell phone, if necessary, so that its phone book is also deleted from the car sound system (see the chapter "Additional functions in the Bluetooth® menu", section "Managing paired devices").
- If you insert a CD during an ongoing transfer, the playback does not start until the transfer is completed.

## Deleting the phone book of the cell phone from the car sound system

You can delete the phone book of the connected cell phone.

#### Note:

The telephone remains connected.

- In the Bluetooth® menu, select the "DELETE P-BOOK" menu item.
- Press the rotary control (7).
  The display shows "PLEASE CONFIRM".
- Press the rotary control (7) again.
  The display briefly shows "EMPTY LIST".

## Additional functions in the Bluetooth® menu

#### Activating/deactivating twin connect

Activate/deactivate twin connect (two Bluetooth® devices can simultaneously be connected with the car sound system).

- In the Bluetooth® menu, select the "TWIN CONNECT" menu item.
- Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to toggle between the settings ON and OFF.
- ► Press the rotary control 7 to confirm the setting.

### Changing the Bluetooth® PIN

The factory-set Bluetooth® PIN of the car sound system is "1234"; e.g. it must be entered on the cell phone when pairing a cell phone. This PIN can be changed.

- In the Bluetooth® menu, select the "PIN EDIT" menu item.
- Press the rotary control 7 to open the entry menu.

The current PIN is shown on the display.

- ➡ Press the rotary control 7 again. You can now enter the PIN:
- Turn the rotary control (7) to select a digit for the respective position.
- Press the rotary control 7 to go to the next position.

#### Managing paired devices

In the Bluetooth® menu, you can manage the paired Bluetooth® devices (cell phones and streaming devices such as MP3 player).

In the device lists for cell phones and streaming devices, the Bluetooth® names of the paired devices are displayed. You can do the following:

- Disconnecting the connection to the currently connected Bluetooth® device
- Establishing a connection to one of the paired Bluetooth® devices





#### Bluetooth®

- Unpairing Bluetooth® devices
- · Select master telephone (for Twin Connect)
- In the Bluetooth® menu, select the menu item "PHONE LIST" or "STREAMING LIST".
- Press the rotary control 7 to open the menu.
  The first device on the list is displayed.

#### Note:

If no device is paired, "EMPTY LIST" is briefly displayed.

★ Turn the rotary control 7 to select a different device or the "DELETE ALL" option.

You have the following options:

To connect the displayed device,

- press the button (13).
  - or -
- ► Press the rotary control (7) to open the menu.

#### Note:

The "CONNECT" menu item is shown only if the device is not connected.

► Press the rotary control (7).

As soon as the device is connected, "CONNECTED" is briefly displayed and you are returned to the device list.

#### Note:

If no connection can be established, the display briefly shows "CONNECT FAILED". If the device is already connected, the display briefly shows "CONNECT EXIST".

To disconnect the connection to the displayed device.

- press the toutton 2.
  - or -
- ► Press the rotary control (7) to open the menu.
- Select the "DISCONNECT" menu item.

#### Note:

The "DISCONNECT" menu item is shown only if the device is connected.

Press the rotary control 7.

The display briefly shows "DISCONNECTED" and you are returned to the device list.

#### Note:

If the device was not connected, the display briefly shows "NO CONNECTION".

To unpair the displayed device,

- press the button 12 for approx. 2 seconds
  - or -
- ► Press the rotary control (7) to open the menu.
- ➡ Select the "DELETE" menu item.
- ► Press the rotary control (7).

The display briefly shows "DELETED" and you are returned to the device list.

#### Note:

If a telephone is unpaired, the numbers stored for this telephone and a phone book transferred from this cell phone are automatically deleted.

To select the device shown as master telephone,

- ress the rotary control 7 to open the menu.
- Select the "SET AS MASTER" menu item.

#### Note:

The "SET AS MASTER" menu item is shown only if two cell phones are simultaneously connected with the car sound system.

Press the rotary control 7.

You are returned to the device list, and an asterisk symbol (\*) is shown next to the Bluetooth\* name of the device.

To unpair all the cell phones or streaming devices,

- select the "DELETE ALL" menu item.
- Press the rotary control 7.

The display shows "PLEASE CONFIRM".

Press the rotary control (7) again.
The display briefly shows "EMPTY LIST".







You can select whether the long press of the button (3) directly opens the phone of the search function for phone book entries or activates voice dialing.

- In the Bluetooth® menu, select the "SOFTKEY" menu item.
- Press the rotary control 7 to change the setting.
- Turn the rotary control to toggle between the settings "SEARCH" (for search function), "P-BOOK" (for phone book) and "VOICE" (for voice dial).
- Press the rotary control 7 to confirm the setting.

## Adjusting the mode for Bluetooth® streaming mode

For the music playback, select between Bluetooth® streaming device or Android cell phone with app control.

- In the Bluetooth® menu, select the "BT MUSIC mode" menu item.
- Press the rotary control 7 to open the menu.
- Turn the rotary control (7) to change between the settings "STREAMING MODE" (for streaming devices) and "APP MODE" (for Android cell phones with app control).
- Press the rotary control 7 to confirm the setting.

## Activating/deactivating combined playback

Prerequisite: The cell phone must be connected with the car sound system as a streaming device.

With the setting ON, navigation announcements of the connected cell phone are played back simultaneously with the respective active internal audio source of the car sound system (e.g. radio or CD).

In the Bluetooth® menu, select the "BT NAVI MIX" menu item.

- ➡ Press the rotary control (7) to change the setting.
- Turn the rotary control 7 to toggle between the settings ON and OFF.
- Press the rotary control 7 to confirm the setting.

#### Adjusting volume

Only possible with activated combined playback (BT NAVI MIX ON): This setting allows raising or lowering the level of the navigation announcements to adjust it to the level of the other active audio source. Settings: –5 to +5.

- In the Bluetooth® menu, select the "BT NAVI GAIN" menu item.
- ► Press the rotary control 7 to change the setting.
- **★** Turn the rotary control 7 to set the level adjustment.
- Press the rotary control 7 to confirm the setting.

## External audio sources

#### Front AUX-IN socket



#### Danger!

## Increased risk of injury from

In case of an accident, the protruding connector in the front AUX-IN socket may cause injuries. The use of straight plugs or adapters leads to an increased risk of injury.

For this reason, it is recommended to use angled jack plugs.

As soon as an external audio source, such as a portable MP3 player is connected to the front AUX-IN socket (11), it can be selected with the **SRC** button (16). "AUX" then appears on the display.





#### Sound settings

## **Sound settings**

The following sound settings can be changed in the "AUDIO" menu:

- Adjusting bass and treble
- Setting the left/right volume distribution (Balance) or front/rear (Fader)
- Adjusting the increase of bass at low volume (Loudness)
- Selecting a sound profile
- Setting level and frequency of the preamplifier output (Sub-Out)
- Adjusting the time delay for switching in an external amplifier
- · Setting the 3-band equaliser

## Calling and exiting the "AUDIO" menu

- **➡** Briefly press the **MENU** button ② to open the user menu.
- Turn the rotary control 7 until the "AUDIO" menu item is selected.
- Press the rotary control 7 to open the "AUDIO" menu.
- Turn the rotary control 7 until the desired menu item is selected.
- ► Perform the setting (see the next section).
- Briefly press the MENU button ② to exit the menu.

#### Notes:

- The menu is automatically exited approx.
   15 seconds after the last button activation and you are returned to the display of the current audio source.
- To go back to the next higher-level menu, turn the rotary control (7) until the "<<<" option is selected and press the rotary control (7).

## Making settings in the "AUDIO" menu

#### **BASS**

Bass level. Settings: -7 to +7.

- ► Press the rotary control 7 to change the setting.
- Turn the rotary control 7 until the desired level is set.
- ► Press the rotary control 7 to confirm the setting.

#### **TREBLE**

Treble. Settings: -7 to +7.

- Press the rotary control 7 to change the setting.
- ★ Turn the rotary control ⑦ until the desired level is set.
- ➡ Press the rotary control 7 to confirm the setting.

#### BALANCE

Left/right volume distribution. Settings: L9 (left) to R9 (right).

- Press the rotary control 7 to change the setting.
- Turn the rotary control 7 until the desired volume distribution is set.
- Press the rotary control 7 to confirm the setting.

#### **FADER**

Front/rear volume distribution. Settings: F9 (front) to R9 (rear).

- Press the rotary control 7 to change the setting.
- ★ Turn the rotary control 7 until the desired volume distribution is set.
- Press the rotary control 7 to confirm the setting.







#### LOUDNESS

Increase of bass at low volume. Settings: ON, OFF.

- ress the rotary control (7) to change the
- ➡ Turn the rotary control (7) to change between the settings.
- ress the rotary control 7 to confirm the

#### PRESET EQ (sound profile)

Selecting equalizer presettings. Settings: POP, ROCK, CLAS (classic), OFF (no presetting).

- Press the rotary control (7) to change the setting.
- **▼** Turn the rotary control (7) to change between the settings.
- ress the rotary control 7 to confirm the setting.

#### SUB-OUT

Setting the level and frequency of the preamplifier output.

- ► Press the rotary control (7) to open the menu.
- Turn the rotary control (7) to change between the following menu items:
  - FREOUENCY (settings: 80/120/160 Hz)
  - GAIN (settings: 0 to +7)
- Press the rotary control (7) to change the setting for the selected menu item.
- Turn the rotary control (7) to set the level or frequency.
- Press the rotary control (7) to confirm the setting.

#### AMP DELAY

Setting the delay with which a connect amplifier is switched in. Settings: 0.5/1.0/1.5/2.0/2.5 seconds and OFF (no delay).

Press the rotary control (7) to change the setting.

- **▼** Turn the rotary control (7) until the desired delay is set.
- Press the rotary control (7) to confirm the

## Setting the 3-band equaliser

The radio features a 3-band equaliser. For each of the three treble, middle and bass bands, you can select a frequency as well as adjust the level. In addition dition, you can adjust the quality factor for bass and middle.

The equaliser also provides an adjustable increase of the bass at low volume (X-bass).

#### Opening the "EQUALIZER" menu

- In the "AUDIO" menu, select the "EOUALIZER" menu item.
- Press the rotary control (7) to open the menu.
- Turn the rotary control (7) to change between the following menu items:
  - EOUALIZER
  - EQTREBLE
  - **EO MIDDLE**
  - **EO BASS**
  - EO X-BASS

#### Note:

The submenus in the "EOUALIZER" menu are not automatically exited after the last key has been activated. After the setting, press the **MENU** button (2) to exit the menu.

#### **EQUALIZER**

Switching the equalizer on or off. Settings: ON,

- ress the rotary control 7 to change the
- Turn the rotary control (7) to change between the settings.
- Press the rotary control (7) to confirm the setting.





#### Sound settings

#### **EO TREBLE**

Adjusting treble frequency and level of the equalizer.

- Press the rotary control (7) to open the menu.
- Turn the rotary control 7 to change between the following menu items:
  - FREQUENCY (settings: 10/12.5/15/17.5 kHz)
  - GAIN (settings: -7 to +7)
- ▶ Press the rotary control 7 to change the setting for the selected menu item.
- Turn the rotary control 7 to set the level or frequency.
- Press the rotary control 7 to confirm the setting.

#### **EO MIDDLE**

Adjusting centre frequency and level of the equalizer.

- ▶ Press the rotary control 7 to open the menu.
- ★ Turn the rotary control 7 to change between the following menu items:
  - FREQUENCY (settings: 0.5/1.0/1.5/2.5 kHz)
  - GAIN (settings: -7 to +7)
  - Q-FACTOR (settings: 0.5/0.75/1.0/1.25)
- ► Press the rotary control 7 to change the setting for the selected menu item.
- ▼ Turn the rotary control 7 to set the level, frequency or Q-factor.
- Press the rotary control 7 to confirm the setting.

#### **EO BASS**

Adjusting bass frequency and level of the equalizer.

- ➡ Press the rotary control (7) to open the menu.
- Turn the rotary control 7 to change between the following menu items:
  - FREQUENCY (settings: 80/100/200 Hz)
  - GAIN (settings: -7 to +7)
  - Q-FACTOR (settings: 1.0/1.25/1.5/2.0)
- ► Press the rotary control 7 to change the setting for the selected menu item.
- Turn the rotary control 7 to set the level, frequency or Q-factor.
- Press the rotary control (7) to confirm the setting.

#### **EQ X-BASS**

Adjusting the frequency and level for the increase of bass at low volume.

- ► Press the rotary control (7) to open the menu.
- Turn the rotary control 7 to change between the following menu items:
  - FREQUENCY (settings: 60/80/100 Hz)
  - GAIN (settings: 0 to +3)
- ► Press the rotary control 7 to change the setting for the selected menu item.
- Turn the rotary control (7) to set the level or frequency.
- Press the rotary control (7) to confirm the setting.







## Calling the user menu and selecting a menu

■ Briefly press the **MENU** button ② to open the user menu.

In the user menu, the user settings can be found in the following menus:

- TUNER
- AUDIO (see chapter "Sound settings")
- DISPLAY
- VOLUME
- CLOCK
- VARIOUS
- BLUETOOTH (see the chapter "Bluetooth®")
- Turn the rotary control 7 until the desired menu is selected.
- ► Press the rotary control 7 to open the selected menu.
- Turn the rotary control 7 until the desired menu item is selected.
- Perform the setting (see the following sections).
- Briefly press the MENU button 2 to exit the menu.

#### Notes:

- The menu is automatically exited approx.
   15 seconds after the last button activation and you are returned to the display of the current audio source.
- To go back to the next higher-level menu, turn the rotary control (7) until the "<<<" option is selected and press the rotary control (7).

## Making settings in the "TUNER" menu

## TRAFFICINFO (traffic information) (only for reception area EUROPE)

Only possible in FM radio mode: Switching priority for traffic announcements on or off. Settings: ON, OFF.

- ➡ Press the rotary control (7) to change the setting.
- Turn the rotary control 7 to change between the settings.
- ► Press the rotary control 7 to confirm the setting.

If priority is switched on for traffic information, the display shows the icon \_\_\_\_\_\_\_.

#### BAND SELECTION

Activating or deactivating memory banks.

Memory banks that can be deactivated:

| Region        | Memory banks      |  |
|---------------|-------------------|--|
| EUROPE        | FM2, FMT, AM, LW  |  |
| ASIA          |                   |  |
| USA           |                   |  |
| SOUTH AMERICA | FM2, FMT, AM, AMT |  |
| THAILAND      |                   |  |

Settings in each case: ON, OFF.

- ➡ Press the rotary control 7 to open the menu.
- Turn the rotary control 7 until the desired memory bank is set.
- ► Press the rotary control 7 to change the setting.
- Turn the rotary control to toggle between the settings ON (activate memory bank) and OFF (deactivate memory bank).
- ► Press the rotary control 7 to confirm the setting.

Deactivated memory banks are skipped during the source selection with the **SRC** button (16).

#### Note:

If a memory bank is deactivated, the stations stored in this memory bank are retained.

#### REGIONAL

#### (only for reception area EUROPE)

Only possible in FM radio mode: Switching REGIONAL function on or off. Settings: ON, OFF.

► Press the rotary control 7 to change the setting.







65

#### User settings

- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

#### **SENSITIVITY**

Setting the sensitivity of station seek tuning. Settings: LO (low), HI (high).

- Press the rotary control 7 to change the setting.
- **★** Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

#### **RDS AF**

Switching the RDS function on or off. Settings: ON, OFF.

- ➡ Press the rotary control (7) to change the setting.
- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

#### Note:

If the reception area "ASIA", "USA", "SOUTH AMERICA" or "THAILAND" is selected, RDS is automatically switched off. The station name continues to be shown on the display.

#### PTY

Switching the PTY function on or off. Settings: ON, OFF.

- Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

#### **PTY TYPES**

Only possible with activated PTY function: Select a programme type.

#### Note:

As soon as a programme type has been selected, this programme type is shown as menu item in the menu instead of "PTY TYPES".

- ► Press the rotary control 7 to change the setting.
- **★** Turn the rotary control 7 to change between the available programme types.
- ► Press the rotary control 7 to confirm the selected programme type.

#### **PTY LANGUAGE**

### (only for reception area EUROPE)

Only possible with activated PTY function: Select a language for the display of the programme types. Settings: ENGLISH, DEUTSCH (German), FRANCAIS (French).

- ► Press the rotary control 7 to open the menu.
- Turn the rotary control 7 to change between the languages.
- ► Press the rotary control 7 to confirm the selected language.

#### **TUNER AREA (reception area)**

Select the reception area for the radio reception. Settings: EUROPE, ASIA, USA, SOUTH AMERICA, THAILAND.

 
- ► Press the rotary control (7) to open the menu.
- ★ Turn the rotary control 7 to change between the reception areas.
- ▶ Press the rotary control 7 to select a reception area.

The display shows "PLEASE CONFIRM".

 Press the rotary control 7 to confirm the selected reception area.







#### DIMMER

Select automatic or manual switching of the display brightness for day or night. Settings: AUTO (display brightness is automatically switched by switching the driving lights on or off), MANUAL (display brightness can be switched manually).

- Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

Automatic switching of the display brightness is possible only If your car sound system is installed as described in the installation instructions and your vehicle features the corresponding connection.

#### **SCROLLING**

Select the display of scrolling text (e.g. when displaying MP3 file names with more than 15 characters) either as single display or continued display. Settings: 1X (single display), ON (continued display).

- Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to change between the settings.
- ► Press the rotary control 7 to confirm the setting.

#### LANGUAGE

Select the language for the display. Settings: ENGLISH, DEUTSCH (German).

- ► Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to change between the settings.
- ► Press the rotary control 7 to confirm the setting.

## Making settings in the "VOLUME" menu

#### ON VOLUME

Setting the power-on volume. Settings: ON VOL-UME (power-on volume; 1-50) or LAST VOLUME (volume set last before switching off the car sound system).



## Danger! High volume

The power-on volume can be unexpectedly high if the LAST VOLUME setting is selected and a high volume was set the last time the radio was switched off.

Always set the device to a moderate volume.

- ► Press the rotary control (7) to open the menu.
- Turn the rotary control (7) to switch between the menu items "LAST VOLUME" and "ON VOLUME" (power-on volume).

Upon selecting "LAST VOLUME":

Press the rotary control 7 twice to confirm the setting.

Upon selecting "ON VOLUME":

- ► Press the rotary control 7 to change the setting.
- **▼** Turn the rotary control (7) to set the volume.
- ► Press the rotary control 7 to confirm the setting.

## TRAFFIC VOL (traffic information volume) (reception area EUROPE only)

Setting the minimum volume for traffic announcements. Settings: 1-50.

- Press the rotary control 7 to change the setting.
- ► Turn the rotary control (7) to set the volume.
- Press the rotary control 7 to confirm the setting.





#### User settings

#### HANDSFREE VOL

Adjusting the minimum volume for telephone calls. Settings: 1 – 50.

- Press the rotary control 7 to change the setting.
- ▼ Turn the rotary control 7 to set the volume.
- Press the rotary control 7 to confirm the setting.

#### Note:

During the phone call, you can change the volume directly by means of the volume control (4).

#### **BEEP** (button beep)

Switching the confirmation beep on or off. Settings: ON, OFF.

#### Note:

When storing radio stations, a confirmation beep sounds even if the OFF setting is selected.

- ► Press the rotary control 7 to change the setting.
- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

## Making settings in the "CLOCK" menu

#### PERM CLOCK

Switch the permanent display of the time on or off. Settings: ON, OFF.

- Press the rotary control 7 to change the setting.
- **▼** Turn the rotary control 7 to change between the settings.
- ► Press the rotary control 7 to confirm the setting.

If the permanent display of the time is switched on, the time is shown on the display. The display of the respective audio source is shown only after pressing a button. Approximately 15 seconds after the button is pressed last, the time is displayed again.

#### HOUR MODE

Selecting the 12 or 24-hour time. Settings: 12, 24.

- Press the rotary control 7 to change the setting.
- ★ Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.

### SET

Setting the time.

- ▶ Press the rotary control 7 to change the setting.
- Turn the rotary control ⑦ clockwise to set the hours.
- Turn the rotary control 7 counter-clockwise to set the minutes.
- ► Press the rotary control 7 to confirm the time set.

#### Note:

When you set the time in 12-hour mode (HOUR MODE 12), an "AM" is displayed before the time for the time before noon or a "PM" for the time after noon.

## RDS CLOCK (automatic time setting) (only for reception area EUROPE)

Switching automatic clock setting with clock data transmitted via RDS on or off. Settings: ON, OFF.

#### Note

The time set with the clock data may not be correct, even if an RDS station is being received.

- Press the rotary control (7) to change the setting.
- Turn the rotary control 7 to change between the settings.
- Press the rotary control 7 to confirm the setting.







### Making settings in the "VARIOUS" menu

#### DEMO MODE

Switching the demo mode on or off. Settings: ON, OFF.

- ress the rotary control (7) to change the settina.
- ► Turn the rotary control (7) to change between the settings.
- ress the rotary control (7) to confirm the setting.

In demo mode, the features of the radio are shown as scrolling text on the display.

#### **SCANTIME**

Setting the scan time in seconds. Settings: 4/8/12/16/60 seconds.

- ress the rotary control 7 to change the setting.
- **▼** Turn the rotary control (7) to change between the settings.
- Press the rotary control (7) to confirm the setting.

#### **SWC (Steering Wheel Control configuration)**

Configuring the buttons of a connected steering wheel control.

- Press the rotary control (7) to open the menu.
- Turn the rotary control (7) to change between the functions.
- ➡ Press the rotary control (7) to select a function.
- Press the corresponding button on the steering wheel control for approx. 1 second to program the button with the selected function.

#### VERSION

Displaying the current software version of the radio.

- Press the rotary control (7) to open the menu.
- Turn the rotary control (7) to display the version number of the current software.

#### NORMSET

Restoring the original factory settings of the car sound system.

- Press the rotary control (7).
  - The display shows "PLEASE CONFIRM".
- Press the rotary control (7) again to confirm Press the rotary control (7) again to confirm the resetting.

  The car sound system switches off and is

reset to the factory settings. If a CD has been inserted in the CD drive, the car sound system automatically switches on again.

## **Factory settings**

Important factory settings in the user menu:

| Menu item       | Factory setting                                      |
|-----------------|--|
| TUNER AREA      | 1 011 502 440 001: EUROPE<br>1 011 502 441 001: ASIA |
| FM1 / FM2 / FMT | ON   |
| AM              | 1 011 502 440 001: OFF<br>1 011 502 441 001: ON      |
| LW*             | 1 011 502 440 001: OFF<br>1 011 502 441 001: ON      |
| AMT**           | 1 011 502 440 001: OFF<br>1 011 502 441 001: ON      |
| RDS             | OFF / ON*  |
| REGIONAL*       | OFF  |
| TRAFFICINFO*    | OFF  |
| SENSITIVITY     | HI   |
| PTY             | OFF  |
| ON VOLUME       | LAST VOLUME  |
| TRAFFIC VOL*    | 20   |
| BEEP            | ON   |
| SCAN TIME       | 8 SEC  |
| DIMMER          | MANUAL   |
| HOUR MODE       | 24   |
| CLOCK SET       | 00:00  |

- Only in reception area "EUROPE"
- \*\* Only in reception areas "ASIA", "USA", "SOUTH AMERICA" and "THAILAND"







In the user menu, you can restore the original factory settings of the car sound system (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "NORMSET").

Wavebands in the US:

FM: 87.7 – 107.9 MHz AM (MW): 530 – 1.710 kHz

Wavebands in South America:

FM: 87.5 – 107.9 MHz AM (MW): 530 – 1.710 kHz

FM frequency response: 30 – 15,000 Hz

CD

Frequency range: 20 – 20,000 Hz

Pre-amp out

4 channels: 4 V

Input sensitivity

Front AUX-IN: 300 mV / 10 kΩ

Dimensions and weight

W x H x D: 178 x 50 x 160 mm

Weight: approx. 1.55 kg

## **Useful information**

## Warranty

We provide a manufacturer's warranty for products bought within the European Union. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid. The warranty terms can be called up from www.blaupunkt.com.

#### Service

In some countries, Blaupunkt offers a repair and pick-up service.

Information about the availability of this service in your country can be found at www.blaupunkt.com. If you want to take advantage of this service, you may request a pick-up service for your car sound

**Technical data** 

system via the Internet.

Voltage supply

Operating voltage: 10.5 – 14.4 V

**Current consumption** 

In operation: < 10 A 10 sec. after switch-off: < 3.5 mA

**Amplifier** 

Output power: 4 x 24 watts sine at

14.4 V at 4 ohms.

4 x 50 watts max. power

**Tuner** 

Wavebands in Europe/Asia/Thailand:

FM: 87.5 – 108 MHz
AM (MW): 531 – 1,602 kHz
LW (Europe only): 153 – 279 kHz

Subject to changes



## **DE** Einbauanleitung

achten

# Sicherheitshinweise Für die Dauer der Montage und des Anschlusses beachten Sie bitte folgende Sicherheits-

 hinweise.
 Minuspol der Batterie abklemmen! Dabei die Sicherheitshinweise des Kfz-Herstellers be-

- Beim Bohren von Löchern darauf achten, dass keine Fahrzeugteile beschädigt werden.
- Der Querschnitt des Plus- und Minuskabels darf 1.5 mm<sup>2</sup> nicht unterschreiten.
- Fahrzeugseitige Stecker nicht an das Radio anschließen!

Die für Ihren Fahrzeugtyp erforderlichen Adapterkabel erhalten Sie im BLAUPUNKT-Fachhandel.

 Je nach Bauart kann Ihr Fahrzeug von dieser Beschreibung abweichen. Für Schäden durch Einbau- oder Anschlussfehler und für Folgeschäden übernehmen wir keine Haftung.

Sollten die hier aufgeführten Hinweise für Ihren Einbau nicht passen, so wenden Sie sich bitte an Ihren Blaupunkt-Fachhändler, Ihren Fahrzeughersteller oder unsere Telefon-Hotline.

Bei Einbau eines Amplifier müssen unbedingt erst die Gerätemassen angeschlossen werden, bevor die Stecker für die Line-Out-Buchse kontaktiert werden

Fremdgerätemassen dürfen nicht an der Autoradiomasse (Gehäuse) angeschlossen werden.

## **EN Installation instructions**

## **∧** Safety instructions

When carrying out installation work and making connections please observe the following safety instructions:

- Disconnect the negative terminal of the battery! When doing so, please observe the vehicle manufacturer's safety instructions.
- Make sure you do not damage vehicle components when drilling any holes.
- The cross sections of the positive and negative cables must not be less than 1.5 mm<sup>2</sup>.
- Do not connect the vehicle's plug connectors to the radio!

You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT

 Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages.

 
If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline.

When installing an amplifier, you must first connect the device earth connections before connecting the plugs for the line-out jacks.

Earth connection of external devices may not be connected to earth of car sound system (housing).







## ★ Consignes de sécurité

Respecter les consignes de sécurité suivantes pendant la durée du montage et du branchement.

- Débrancher le pôle (-) de la batterie! Respecter les consignes de sécurité du constructeur automobile!
- Veiller à n'endommager aucune pièce du véhicule en percant des trous.
- La section du câble (+) et (-) ne doit pas dépasser 1.5 mm<sup>2</sup>.
- Ne pas brancher les connecteurs du véhicule sur la radio!

Les câbles d'adaptation nécessaires pour le type de véhicule sont disponibles auprès des revendeurs BLAUPUNKT.

 En fonction du modèle, votre véhicule peut différer de cette description. Nous déclinerons toute responsabilité en cas de dommages causés par des erreurs de montage ou de connexion et en cas de dommages consécutifs.

Si les indications décrites ici ne s'appliquent au montage que vous voulez effectuer, adressez-vous à votre revendeur Blaupunkt, votre constructeur automobile ou notre service d'assistance téléphonique.

Pour le montage d'un amplificateur, les masses d'appareil doivent être d'abord connectées avant de connecter les fiches pour les connecteurs Line Out.

Les masses des appareils externes ne doivent pas être raccordées à la masse de l'autoradio (boîtier).

## ES Instrucciones de instalación

## Normas de seguridad

Durante el montaje y la conexión es imprescindible observar las siguientes normas de seguridad.

- Desemborne el polo negativo de la batería.
   Observe las normas de seguridad dadas por el fabricante del vehículo.
- Al perforar agujeros, asegúrese de no dañar ninguna pieza del vehículo.
- La sección transversal del cable positivo y del cable negativo no debe ser menor de 1,5 mm².
- ¡No conecte a la radio los conectores ubicados en el vehículo!

Los cables adaptadores necesarios para su vehículo los encontrará en el comercio especializado en artículos de la marca BLAUPUNKT.

 Dependiendo del modelo, es posible que su vehículo varíe un poco con respecto a la descripción aquí dada. Tenga en cuenta que no asumimos ninguna responsabilidad por los daños debidos a un montaje o conexión incorrectos ni por los daños resultantes.

Si las instrucciones aquí dadas no son aptas para el montaje en su vehículo, póngase en contacto con su proveedor de artículos Blaupunkt o con el fabricante del vehículo, o llame a nuestro teléfono de atención al cliente.

En caso de montar un amplificador, es necesario conectar la puesta a tierra de las unidades antes de establecer el contacto de los conectores para las hembrillas line-Out.

No deben conectarse masas de otros equipos a la masa de la radio (carcasa).







## PT Instruções de montagem

# Instruções de segurança Durante a montagem e a ligação do aparelho, queira respeitar as seguintes instruções de

 Separar o pólo negativo da bateria! Respeitar ao mesmo tempo as instruções de segurança do fabricante do automóvel.

segurança.

- Quando se procede à furagem de buracos, prestar atenção para não serem danificadas quaisquer partes do veículo.
- As secções transversais dos cabos positivo e negativo não devem ser inferiores a 1,5 mm².
- Não ligar as fichas existentes do lado do automóvel ao auto-rádio

Os cabos adaptadores necessários para o seu automóvel podem ser adquiridos nos revendedores da BLAUPUNKT.

 O seu veículo pode divergir desta descrição em função do modelo. Não assumimos qualquer responsabilidade por erros de montagem ou de ligação nem por danos daí decorrentes.

Caso as presentes instruções não sejam adequadas para a montagem no seu veículo, dirija-se ao revendedor da Blaupunkt, ao fabricante do seu veículo ou à nossa linha verde.

No caso de montagem de um amplificador, é imprescindível ligar primeiro os aparelhos à terra antes de se conectar as fichas às tomadas l ine Out

A massa de aparelhos externos não deve ser ligada à massa do auto-rádio (caixa).

## ID Petunjuk pemasangan

## Petunjuk keselamatan

Ketika memasang dan menyambungkan perangkat, perhatikan petunjuk keselamatan berikut.

- Putuskan koneksi kutub negatif baterai! Untuk itu, perhatikan petunjuk keselamatan yang diberikan oleh pabrikan kendaraan Anda.
- Ketika melakukan pengeboran, pastikan Anda tidak merusak komponen kendaraan.
- Penampang lintang kabel positif dan negatif tidak boleh kurang dari 1,5 mm².
- Jangan sambungkan konektor steker kendaraan ke radio!

Anda dapat memperoleh kabel adaptor yang diperlukan untuk jenis kendaraan Anda dari dealer BI AUPLINKT

 Tergantung modelnya, kendaraan Anda mungkin bisa berbeda dengan penjelasan ini. Kami tidak bertanggung jawab atas kerugian yang terjadi pada kesalahan proses pemasangan atau penyambungan atau untuk kerugian-kerugian lainnya.

Jika petunjuk yang dijelaskan di sini tidak bisa diterapkan pada proses pemasangan radio mobil Anda, sebaiknya proses tersebut dilakukan oleh teknisi di dealer khusus Blaupunkt atau hubungi nomor telepon kami.

Pada saat pemasangan amplifier, Anda harus menghubungkan perangkat ke ground terlebih dahulu sebelum menghubungkan steker ke soket line-out.

Ground perangkat eksternal tidak boleh dihubungkan ke ground.







Mitgelieferte Montage- und Anschlussteile Supplied mounting hardware Materiel de montage fourni Ferretería de montaje suministrada Elementos de fixação fornecidos Komponen pemasangan dan penghubung yang disertakan

1 011 502 440 001:












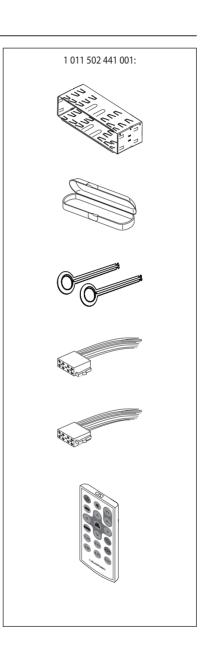

216












1.

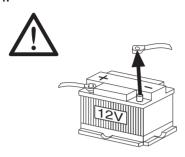


2.

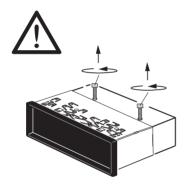

3.

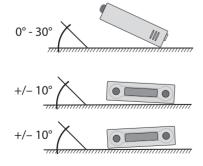


4.

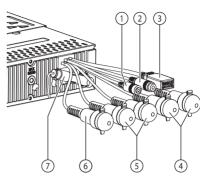

- 1 Microphone In
- 2 Steering wheel remote control
- ③ Rear USB
- 4 Preamp Out (Front)
- 5 Preamp Out (Rear)
- 6 Sub Out (Subwoofer)
- (7) Radio antenna

5.

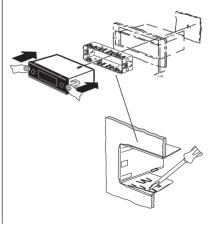






## 6.


## Ausbau • Removal • Démontage • Desmontaje • Desmontagem • Pelepasan

1.



 2.



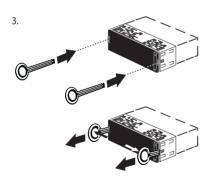


 7.










| Α |                | В |                 |
|---|----------------|---|-----------------|
| 1 | NC             | 1 | Speaker out RR+ |
| 2 | Telephone Mute | 2 | Speaker out RR– |
| 3 | NC             | 3 | Speaker out RF+ |
| 4 | Permanent +12V | 4 | Speaker out RF– |
| 5 | Auto antenna*  | 5 | Speaker out LF+ |
| 6 | Illumination   | 6 | Speaker out LF– |
| 7 | Kl.15/Ignition | 7 | Speaker out LR+ |
| 8 | Ground         | 8 | Speaker out LR- |

imes Switched power supply +12 V / max. 150 mA





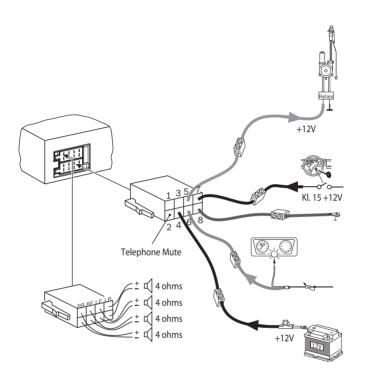

Änderungen vorbehalten! • Subject to changes! • Sous réserve de modifications ! • ¡Modificaciones reservadas! • Sob reserva de alterações! • Informasi dapat berubah sewaktu-waktu!





### Supported iPod/iPhone devices

Our product can support below listed iPod/iPhone generations:

- iPod touch (5th generation)
- iPod touch (4th generation)
- iPod classic
- iPod nano (6th generation)
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPhone 4s

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone may affect wireless performance.

iPhone, iPod are trademarks of Apple Inc., registered in the U.S. and other countries.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Android is a trademark of Google Inc.

© 2015 All rights reserved by Blaupunkt. This material may be reproduced, copied or distributed for personal use only.





Bitte den ausgefüllten Gerätepass sicher aufbewahren! Please keep the filled-in radio pass in a safe place! Prière de conserver soigneusement la carte d'autoradio remplie! ¡Favor guardar el documento del aparato debidamente llenado en un lugar seguro!

Por favor, guardar o cartão preenchido do aparelho num lugar seguro! Simpan dengan baik dokumen perangkat Anda yang sudah terisi!







**Passport** 

Name:

**TORONTO 440** 

Type:

1 011 502 \_ \_ \_ 001

Serial no.:



**Blaupunkt Technology GmbH** Robert-Bosch-Straße 200 D-31139 Hildesheim http://www.blaupunkt.com 5 101 020 021

05/15 450 314 - de, en, fr, es, pt, id ( (

07\_EA\_Toronto440.indd 224

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.