

## ● TV MODE

### ■ Time

- Press MENU button to enter the OSD menu. Then press ▼ button to select TIME menu.
- After TIME is highlighted, you can press ► button to select Sleep Timer, and then press ▲/▼ buttons to select the following sub menus, and then press ◀/▶ buttons to change the value of the corresponding option.



1



2

Sleep Timer	Select a period of time after which the TV automatically switches to standby mode: OFF/5/10/15/30/60/90/120/180/240 min. Alternatively: you may press the SLEEP button repeatedly on the remote control to select the number of minutes directly.
Time Zone	Select a time zone: Pacific/Alaska/Hawaii/Atlantic/Eastern/Central/Mountain.
DST	Daylight Saving Time: Select to turn ON/OFF.
Time Format	Select time format: 12-hour/24-hour
Auto Sync	When Auto Sync is set On, DST, the modes of Clock and Wake Up can not be changed.
Clock	When Auto Sync is set Off, clock can be changed by pressing ►/ENTER to select Year/Month/Day/Hour/Minute.
Wake Up	When Auto Sync is set Off, clock can be changed by pressing ►/ENTER to select Year/Month/Day/Hour/Minute.

## ● TV MODE

### ■ SETUP

- Press the MENU button to enter the OSD menu. Then press ▼ button to select SETUP menu.
- After SETUP is highlighted, you can press ► button to select Menu Language, and then press ▲/▼ buttons to select the following sub menus, and then press ◀/▶ buttons to change the value/mode of the corresponding option.



1




2

Menu Language	Select menu language: English/French/Spanish. The default on screen menu language is set as Spanish.
Transparency	Select a transparent proportion: 0%/25%/50%/75%/100%
CC Mode	CC On/ CC Off/CC On Mute
Basic Selection	CC 1/CC 2/CC 3/CC 4/TEXT 1/TEXT 2/TEXT 3/TEXT 4/Off.
Closed Caption	Select among 6 modes: Service 1, Service 2, Service 3, Service 4, Service 5 and Service 6.
Service	Options: Mode, Front Style, Front Size, Front Edge Style, Front Edge Color, FG Color, BG Color, FG Opacity, BG Opacity.
Option	Options: Mode, Front Style, Front Size, Front Edge Style, Front Edge Color, FG Color, BG Color, FG Opacity, BG Opacity.
Restore Default	Restore the TV to factory default settings.
Setup Wizard	To select Language, Time Zone, Time Format before auto scanning.


## ● TV MODE

### ■ LOCK

- Press the MENU button on the TV or the remote control to enter the OSD menu. Then press ▼ button to select LOCK menu.
- After LOCK is highlighted, you can press ► button to select Enter Password, and select digit button to enter.  
NOTE: the default password is 0000.
- After press 0000, you will enter a new interface. Then you can select Change Password, and press ENTER/► button to adjust the value.  
NOTE: If the password is changed, all of the password in the menu will be changed at the same time; if you forgot your password, you can use 8899 to enter any menu locked.
- After pressing 0000 and entering to a new interface, you can press ▲/▼ buttons to select the following sub menus, then press ◀/► buttons to change the value/mode of the corresponding option.

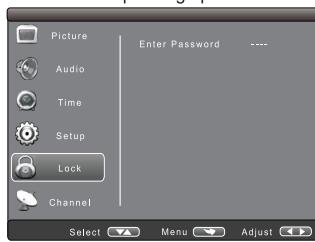

1

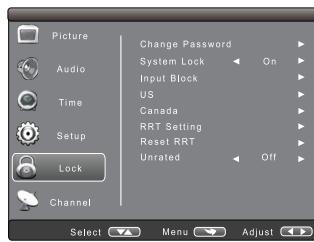

2

Change Password	Use digit buttons to input the old password and then input the new 4-digit password, then re-enter the new one for conformation.								
System Lock	Select to turn On/Off the system lock. The following option such as Input Block, US,Canada, and Unrated will only be accessible when you turn the system lock on.								
Input Block	<table border="1"> <tr> <td>TV</td> <td>To Unblocked/ Blocked the TV.</td> </tr> <tr> <td>AV</td> <td>To Unblocked/ Blocked the AV.</td> </tr> </table>	TV	To Unblocked/ Blocked the TV.	AV	To Unblocked/ Blocked the AV.				
TV	To Unblocked/ Blocked the TV.								
AV	To Unblocked/ Blocked the AV.								
US	<table border="1"> <tr> <td>TV</td> <td>Press ENTER button to block or unblock the TV.</td> </tr> <tr> <td>MPAA</td> <td>Select MPAA rating: G, PG, PG-13, R, NC-17, X or N/A.</td> </tr> </table>	TV	Press ENTER button to block or unblock the TV.	MPAA	Select MPAA rating: G, PG, PG-13, R, NC-17, X or N/A.				
TV	Press ENTER button to block or unblock the TV.								
MPAA	Select MPAA rating: G, PG, PG-13, R, NC-17, X or N/A.								
Canada	<table border="1"> <tr> <td>Canada</td> <td>Select MPAA rating for English-speaking Canada: C, C8+, G, PG, 14+, 18+ or E.</td> </tr> <tr> <td>English</td> <td></td> </tr> <tr> <td>Canada</td> <td>Select MPAA rating for Quebec Canada: G, 8 ans+, 13 ans+, 16 ans+, 18 ans+ or E.</td> </tr> <tr> <td>French</td> <td></td> </tr> </table>	Canada	Select MPAA rating for English-speaking Canada: C, C8+, G, PG, 14+, 18+ or E.	English		Canada	Select MPAA rating for Quebec Canada: G, 8 ans+, 13 ans+, 16 ans+, 18 ans+ or E.	French	
Canada	Select MPAA rating for English-speaking Canada: C, C8+, G, PG, 14+, 18+ or E.								
English									
Canada	Select MPAA rating for Quebec Canada: G, 8 ans+, 13 ans+, 16 ans+, 18 ans+ or E.								
French									
RRT Setting	Set Rating Region Table.								
Reset RRT	Select to reset the RRT setting.								
Unrated	Cycle between On and Off.								


## ● TV MODE

### ■ Channel

- Press the MENU button on the TV or the remote control to enter the OSD menu. Then press ▼ button to select Channel menu.
- After Channel is highlighted, you can press ENTER/► to select Air/Cable, and then press ▲/▼ buttons to select the following sub menus. then press ENTER/► buttons to enter to the corresponding option and then change the value.



1

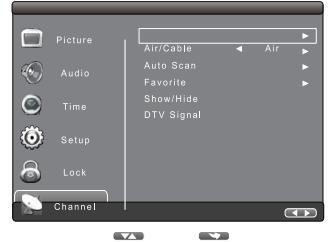


2

Air/Cable	Select antenna between Air and Cable.
Auto Scan	Select the Auto Scan feature to scan your available cable channels, it will perform the auto scan if the Air antenna is selected.
Favorite	Set the selected channel as favorite channels.
Show/Hide	Show/ Hide the selected channel.
DTV Signal	Display the quality of current DTV signal.


## ● TV MODE

### ■ CUSTOMIZING TV SETTINGS


The first time you turn on the TV, it will go straight into Setup Wizard menu. Press buttons to navigate the menu and change the settings.

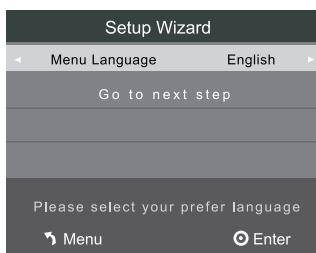

①

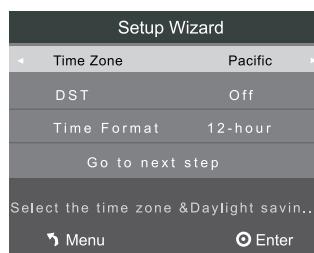

②

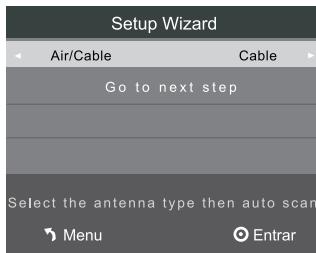

③



④

## ● DVD MODE

The unit has a separate menu system to set up the DVD playback. When in DVD Mode, press the key D>SETUP on the remote control to enter the main menu of the system setup.

1. When you have entered the menu setup system press the direction key marked **◀** or **▶** to move the cursor. When in this system you need to set up the following three sections:

- General Setup Page
- AUDIO Setup
- Preference Page

2. Press the direction key **▼** or **▲** on the System Setup page and move the cursor to the selected item.. Press OK to confirm the item selected. Use **▼** or **▲** to adjust and use **◀** to return to the previous item.

3. On the System Setup page press either D.SETUP or MENU to exit.

### ● 1. General Setup

a) **OSD Language** - Choose the language for the operating system. Select from: English • French • Spanish.



b) **TV Display**

3PS: The screen will display the picture in 4:3 ratio leaving a black border to either side of the picture.

3LB: The screen will display the picture in a more suitable 16:9 ratio which is more appropriate for this model.



c) **Last Memory**: Press to change Memory Played from On to Off.