

70mm

The Basics

Congratulations on your new GitUp Action camera!

This Quick Start Guide will show you the basic instructions, please read it carefully, we hope enjoy using your new action camera.

FCC Warning:

 
 
 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

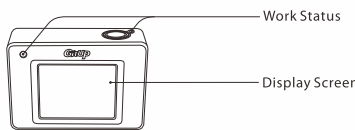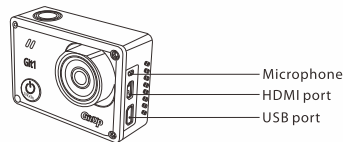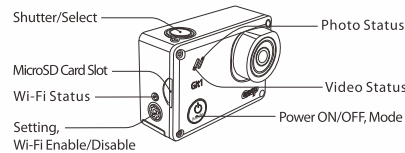


Getting Started

CHARGING THE BATTERY

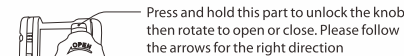

 Press and hold this part to unlock the knob, then rotate to open or close. Please follow the arrows for the right direction

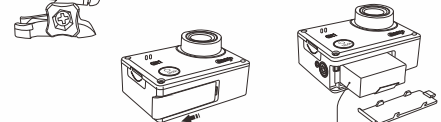

Press to unlock the battery cover, then push it out. Rechargeable Battery

1. Remove the camera from the waterproof housing (if it's in the waterproof housing)
2. Insert a MicroSD card (sold separately). Class 6 or above required, or a UHS-I card
3. Open the battery cover and insert the battery (normally a battery is already installed)
4. Charge the battery by connecting the camera to a computer or other USB charging adapter using the included USB cable. The camera status light turns on during charging

NOTICE: Use wall chargers marked: output 5V 1A. If you don't know the voltage and current of your charger use the included USB cable to charge the camera from your computer or a power bank.

POWERING CAMERA ON AND OFF

To Power On: Press the Power/Mode button [🔘] for two seconds.

To Power Off: Press and hold the Power/Mode button [🔘] for four seconds.

Selecting Camera Modes

1. Press the Power/Mode button [🔘] repeatedly to cycle through the camera modes.

Camera Modes	Description
📺 Video	Video, Time Lapse Video, Video + Photo, Video Looping
📷 Photo	Single, Time Lapse Photo
📺 Playback	Play content on the camera or a TV
⚙️ Setup	Adjust general camera settings

2. If necessary, select a different capture mode:

- a) Press the Setting/Wi-Fi button [⚙️] to open the settings menu.
- b) Press the Shutter/Select button [🔘] repeatedly until you get to the desired capture mode.
- c) Press the Setting/Wi-Fi button [⚙️] to close the settings menu.

Capturing Video and Photos

Select your camera mode, then press the Shutter/Select button to start/stop recording or take a photo.

Take photo while recording

 
When the camera is recording, you can press the Power/Mode button [🔘] to take a photo.

Adjusting Camera Settings

1. Press the Power/Mode button [🔘] to cycle to your desired mode.
2. Press the Setting/Wi-Fi button [⚙️] to enter the Settings menu for that mode.
3. Press the Power/Mode button [🔘] to cycle through the options.
4. Press the Shutter/Select button [🔘] to select your desired option.
5. Press the Setting/Wi-Fi button [⚙️] to exit the settings menu.

Connecting to the GitUp APP

The GitUp App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and video/photo download.

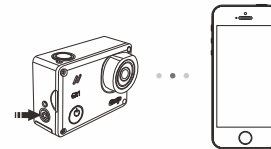

1.Enable the Wi-Fi

If the camera is powered on and ready to capture videos or photos, you can press and hold the Settings/Wi-Fi button [⚙️] for three seconds to turn Wi-Fi on/off. When Wi-Fi is on, a Wi-Fi status icon appears on the camera status screen and the blue Wi-Fi light blinks intermittently. The Wi-Fi SSID and password is shown on the camera screen, default password is 12345678.

Notice: When the Wi-Fi is enabled, the camera is waiting for the Wi-Fi connection with smartphone or tablet, you can not take video or photo until the connection established.

2.To Connect your camera to the GitUp APP:


- a). Download and install to your smartphone/tablet the supported GitUp application from the Apple App Store or Google Play
- b). Power on the camera and enable the Wireless
- c). Connect to the Wi-Fi connection named Gitup**** (the stars are different for each camera)
- d). Open the application, click the [+] to add the camera, the application will automatically search for a camera and show "Add device succeeded" on the screen if connected successfully.
- e). Click the [🔘] icon to live preview the video.



Action Camera

Git1

 QUICK START GUIDE

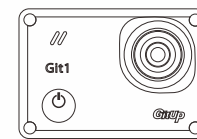

100mm

01

02

03

04

05

06