

STREAMER X

FRONT PANEL

- ① Mic volume control/source selector
- ② Headphone volume control/mute button
- ③ Mic mute button
- ④ Video cut button
- ⑤ Phantom power/mic input indicators
- ⑥ Four SMART pads with bank switch buttons



BACK PANEL

- ⑦ Power input
- ⑧ USB inputs
- ⑨ HDMI thru
- ⑩ HDMI in
- ⑪ 3.5mm headphone output
- ⑫ 1/4-inch headphone output
- ⑬ Neutrik® combo jack
- ⑭ P48 phantom power on/off



POWERING THE UNIT ON AND OFF

To turn the unit on, simply connect to a power source (5V, 3A required) using the included power supply or by connecting to a computer using the included USB cable

To turn the unit off, simply disconnect from power source

CONNECTING A MICROPHONE AND HEADPHONES

Plug any XLR microphone into the Neutrik® combo jack at the back of the unit

If your microphone requires phantom power, press the P48 switch on the back of the unit

Press the mic gain control to select the analog input as the audio source (LED will turn purple)

Connect headphones to the 1/4-inch or 3.5mm input on the back of the unit (note: ensure mic level is down before connecting headphones to avoid sudden loud noises)

Ensure mic and headphones are turned up to a comfortable level before recording

RØDE