

Light Up Pumpkin with Bluetooth® Speaker



Model No. GI-BT2300
FCC ID: 2AEASGI-BT2300
SKU# 493755
PATENT PENDING

SPECIFICATIONS:


Speaker : 1.5" (40mm)
Total Output : 3 watt full-range amplifier
Battery / Voltage : Three AA size Alkaline Batteries / 4.5V
Playback Time : Approx. 7 hours at 70% volume
Compatibility : Bluetooth® 2.0 or above
Operating Range : Up to 33 feet (10 meters)

This product requires 3 "AA" size Alkaline Batteries (INCLUDED). Batteries included are for store demonstration so replacement batteries should be purchased for best performance.

The 'TRY ME' wire is connected to the bottom of the product during in packaging demonstration only. 'TRY ME' wire can be removed during normal operation.


TO INSTALL/REPLACE BATTERIES:

1. Locate battery compartment on the bottom of the product.
2. Turn the 3-way switch to "OFF (TRY ME)" position.
3. Open battery compartment cover by removing screw with a Phillips head screwdriver.
4. Insert / replace 3 "AA" batteries - follow polarity diagrams inside the battery compartment.
5. Replace the cover and turn 3-way switch back to "ON" to activate the Bluetooth® function or turn switch to "LIGHTS ONLY" position to use the product as a light-up decoration.

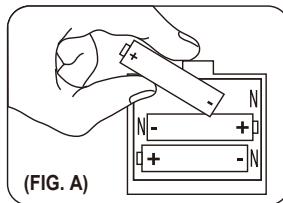

TO OPERATE:

1. Locate 3-way switch (FIG. B) on the bottom of the product.
2. Default setting of 3-way switch is set to "OFF (TRY ME)" for store demonstration. Bluetooth® function is disabled in this setting.
3. To turn on the Bluetooth® function, slide 3-way switch to "ON" position to pair your device with this product.
(See pairing instruction below under "PAIRING YOUR DEVICE".)
4. To operate this product as a light-up decoration, turn 3-way switch to "LIGHTS ONLY" position.
Product is equipped with a two hour automatic timer (2 hours on / 22 hours off).
* Lights will operate for 2 hours and will automatically turn off for 22 hours. If "LIGHTS ONLY" switch is left on, the lights will turn on for two hours 24 hours after initial activation of "LIGHTS ONLY" setting.

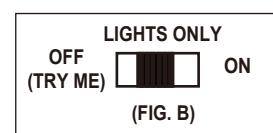

PAIRING YOUR DEVICE:

1. Turn on the Bluetooth® on your device.
(Refer to your device's user manual for details if necessary.)
2. Make sure your device is within the operating range (25-30 feet) of the speaker.
3. Slide 3-way switch to "ON" position. The light-up face will flash and the speaker will make a beeping sound which indicates the product is in AUTO-PAIRING mode.
4. The product will go into SLEEPING mode automatically if it does not pair with any device after 10 minutes. To reactivate the AUTO-PAIRING mode, simply turn 3-way switch OFF and turn it back ON.
5. Once the product is in AUTO-PAIRING mode, look for "Pumpkin SPK" on your device and connect.
Once the product is connected with your device, it will make another beeping sound.

PLAY YOUR MUSIC (after the product is successfully paired with your device):

1. Activate your audio device as you normally do.
2. Turn 3-way switch to "OFF (TRY ME)" position to preserve battery life if not in use.

Please retain this information for future reference.

PRECAUTIONS:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Batteries should only be changed under adult supervision.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Batteries are harmful if swallowed, so keep away from young children.
- Only batteries of the same or equivalent type as recommended are to be used.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove battery if product left unused for a long time.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

The product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

TROUBLESHOOTING:

PROBLEM	SOLUTION
Can't Pair With Device	Make sure the pumpkin speaker is on and the device has its Bluetooth® turned on. Make sure the device is within 3 feet from the product to detect the Bluetooth® stream. Check if the pumpkin speaker is paired with another device. Unpair it from any current existing device if necessary to make the pumpkin speaker available for your desired device.
No Sound	Check if the pumpkin speaker is turned on; check batteries and replace with fresh batteries if batteries are low. Check if the pumpkin speaker is successfully paired with the device or not. Check the sound volume on your device and try to turn up the volume.
Sound Distortion	Check and make sure your pumpkin speaker is within 33 feet from your device. Try to turn off the WIFI on your device

CARE AND STORAGE: Store the product in a cool, dry place.

Bluetooth® and the Bluetooth® logo are registered trademarks of Bluetooth SIG, Inc. and any use of such marks by WOW! Creations is under license.

© 2014 WOW! Creations HK Ltd. All Rights Reserved. Patent Pending.

If you have any questions about this product, pls contact us at info@wowcreations.net

Made in China Printed in China