



Model No. 7STR4-181B1 15STR5-181B1
10STR4-181B1 4R4-1701B1/T
6STR4-181B1 8R5-181B1

ASSEMBLY INSTRUCTIONS

(We recommend wearing proper clothing in order to prevent scratches that may occur during the assembly process.)

Carefully unpack the contents from the tree's carton (Fig 1); including the contents of the poly-bag that is adhered to the interior flap of the tree's carton.

Contained in the poly-bag is the remote control which operates your tree's 10 function lighting capability.

Your tree should include the following components:

A folding metal tree stand with (3) eyebolts.

An on/off push button foot pedal with cord and plug (Fig 6); which is pre-attached at the lowest section of your tree (Fig 5).

The 7.5' tree will have (3) tree sections; ("A", "B" and "C"; as shown in Fig 5).



ASSEMBLY OF THE TREE STAND

1. Remove the tree stand from the plastic bag, loosen the eye bolt and open the tree stand to form an "X".

2. Align the holes for the insertion of the remaining (2) eyebolts.

3. Insert each eyebolt and begin threading in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section "A" to be inserted into the assembled stand (Fig 2).

4. Place the tree stand in its desired location; as once the tree is fully assembled, it may be too difficult to move and relocate.



ASSEMBLY OF THE TREE

1. Locate the bottom section of the tree which is identified by a label on the outer branches marked "A" (Fig 5).

2. Remove the protective plastic cap from the end of the pole, (that is pinched to a point), and place that end into the tree stand. Be sure that the pointed end of the pole extends to the bottom of the stand.

3. Now tighten the eyebolts evenly on the tree stand; being careful not to over-tighten (Fig 3).



CCT18

- Carefully cut the nylon strapping bounding the branches upright.
- CAUTION:** Be extremely careful not to cut any of the exposed light set wires.
- Now gently guide the branches downward into place.
- Beneath the canopy of section "A", contains an on/off push button foot pedal with cord and plug (Fig 6).
- Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet.
- On/off push button foot pedal operation:**
The on/off push button foot pedal is intended to provide basic manual on/off operation only; and therefore cannot provide the remote control's 10 function lighting capability.

NOTE: If the tree is powered off by the use of the push button foot pedal, remote control or by unplugging it from the electrical outlet; when powered back on the tree will resume the memory of the last lighting function selected with the remote control.


EZ-POWER™ TECHNOLOGY

NOTE: Your tree has been designed with EZ-Power™ technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section (Fig 5).


- Locate the next section of the tree which is identified by a label on the outer branches marked "B" (Fig 5).
- Remove the protective plastic cap from the end of the pole on section "B"; insert that end onto the top of the pole of section "A" (Fig 4).



- Once section "B" is fully inserted downward into section "A"; both section "A" and section "B" will now be lit.
- Again, carefully cut the nylon strapping bounding the branches upright; being extremely careful not to cut any of the exposed light set wires.
- Now gently guide the branches of section "B" downward into place.
- Depending on the height of the tree you have purchased, you will continue to build your tree upwards, section by section, following the above steps until the tree is completely assembled. Each section of the tree is labeled in alphabetical order beginning from the bottom to the top.

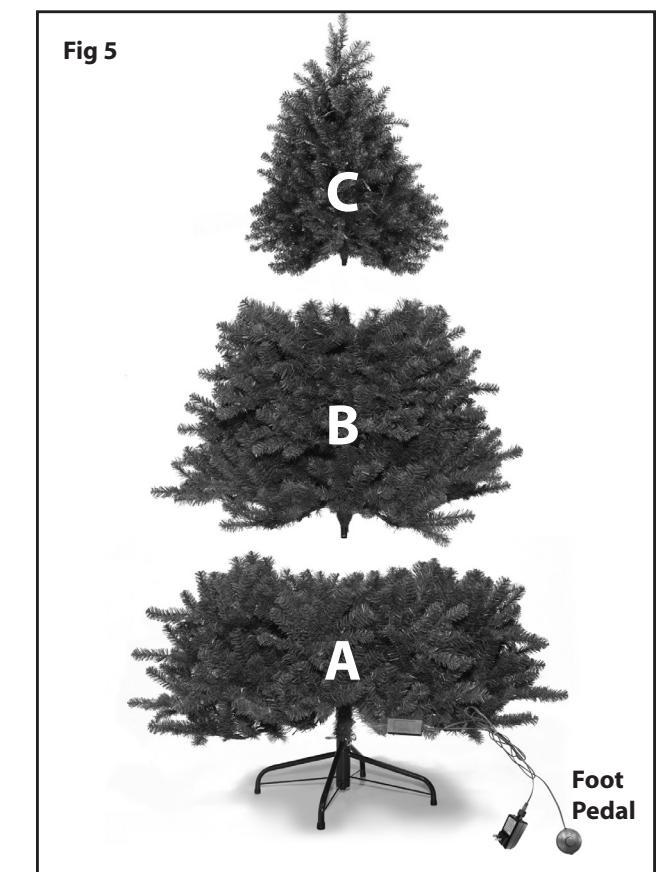

18"

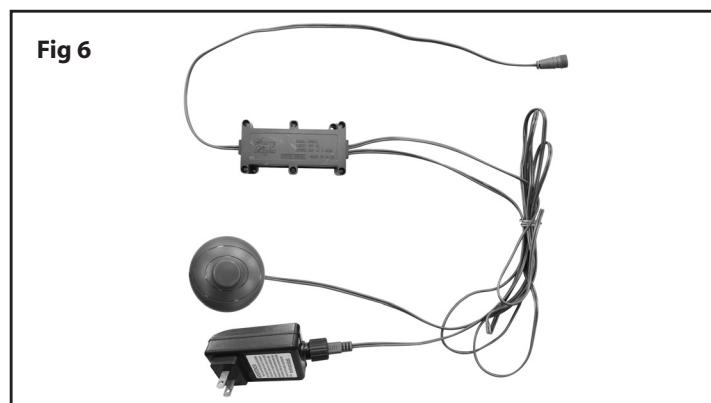

REMOTE CONTROL OPERATION

Included is the remote control that operates the colors and functions of your LED pre-lit and pre-shaped Christmas tree (Fig 7).



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Before operation; three standard AAA batteries (R03 or LR03) must be installed into the remote control; by simply removing the slide plate located on the back of the remote control.

The LED pre-lit and pre-shaped Christmas tree's 10 lighting function capability is controlled solely by the use of the remote control provided.

NOTE: By reducing the distance from your tree; you may achieve better remote control reception.

By pressing the Function or ON/OFF button on the remote control; indicator lights will keep you on track as to the exact color and function that you are currently on.

By pressing your function buttons up or down on your remote you can choose between the following 10 Functions:

Demo

Steady Warm White

Steady Icy Multi

Slow Fade Warm White

Slow Fade Icy Multi

Twinkle Warm White

Twinkle Icy Multi

Fast Flip Warm White to Icy Multi

Slow Flip Warm White to Icy Multi

Slow Fade Warm White to Icy Multi

6H Timer:

The timer button is located on the right side of the remote. When set to the "on" mode, the lights will flash Warm White 3 times indicating that the 6 hour timer has been activated. The tree will now remain on for 6 hours and will automatically resume the last function 18 hours after shut off. To turn off the timer, simply set to "off" mode. The lights will flash Warm White 1 time.

If the tree is manually turned off while the timer is set, the timer will shut off. If the tree is powered back on and the timer button is still set to on, the timer will reactivate at that point and remain on for 6 hours.

TROUBLESHOOTING

1. If the tree does not illuminate press the on/off button on your remote control. If failure to light persists, the battery may need to be replaced. Insert three standard AAA type batteries (R03 or LR03); aligning the appropriate (+/-) markings accordingly.

NOTE: The tree's 10 function lighting capability is controlled solely by the use of the remote control provided.

If the tree fails to light due to a damaged or defective remote control; please resort to manual on/off push button foot pedal operation until a new remote control can be provided through our customer service center.

2. If failure to light persists, press the on/off push button foot pedal; as it may be in the "Off" mode.

3. If the top of the tree or another individual lettered section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.

NOTE: The tree's top is designed specifically for a secure and firm connection point. Downward force will be needed to ensure that the electrical connection occurs.

NOTE: A SPECIAL NON-REPLACEABLE LED HAS BEEN APPLIED TO YOUR PRE-LIT TREE; IN THE CASE THAT A INDIVIDUAL LED BULB BURNS OUT, THE REMAINING LED BULBS WILL CONTINUE TO STAY LIT.

DISASSEMBLY & STORAGE

1. Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the on/off push button foot pedal and plug.

2. Beginning with the tree's top section; lift each section straight up from the section below, and continue working downward.

NOTE: You may have to slightly wiggle each section as you lift each section upward.

3. To remove the bottom and final section; loosen the eyebolts by turning in a counter-clockwise direction and lift section "A" from the support collar of the tree stand.

4. Gently fold the branches of each section upward, towards the center, and position in the storage container.

NOTE: With the exception of the tree's "top" section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage container.

5. Fully unthread the eyebolts from the tree's stand and fold together; placing in the storage container.

6. It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.

Store your remote control in a SAFE & DRY location and remove the battery from remote control before storage.

NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.

FLOCKING OR GLITTER DISCLAIMER

Notice: Your pre-lit tree has been professionally flocked or glittered.

Upon the tree sections being removed from its carton, you will notice an accumulation of flocking or glitter at the base of the carton.

Do not be alarmed.

This loose flocking or glitter material was accounted for and planned in the packing and manufacturing process of this tree.

In no way has the appearance or the integrity of the tree's quality been compromised.

During future Holiday seasons you can expect a light dusting of flocking or glitter to loosen from your tree during the packing and unpacking process. Extra flocking or glitter has been adhered to your tree to account for this minor annual loss.

The overall beauty of your tree will not be diminished.

Simply sweep or vacuum up the loose flocking or glitter upon the assembly completion. During the flocking or glitter process the light bulbs themselves have been flocked or glittered. This was purposely done for the overall lighting effect of the tree.

PLEASE NOTE: Your flocked tree must NOT be stored in a plastic bag or bags as moisture and condensation may occur, causing for the discoloration of the flocking material.

Your flocked or glittered tree must be stored in a cool and dry location protected from excessive exposure to moisture, heat or sunlight.

With proper care and proper storage location, you will experience many years of enjoyment.

This product was pre-tested before shipment and date coded. In keeping with the National Electric Code, this product is intended for seasonal (90 days max.) installation and use. For problems or questions on this product call our customer service toll-free at 1-877-527-0313.

Made in China

Printed in China

This is not a toy, for decorative use only.

DISTRIBUTED BY HOME DEPOT U.S.A., INC. 2455

PACES FERRY RD., N.W. Atlanta, GA 30339 All rights reserved.

15"