

Karaoke Speaker

User Manual



INSTRUCTIONS FOR USER AND CARE

Dear Customer,


Thank you for purchasing this product. We kindly ask you to read and save this instruction manual for future reference. Please read all the instructions before using this speaker.

Charging:

Plug the charging cable into the speaker and connect to another USB power source such as a PC/MAC,etc.

Product Overview:

1. MIC VOL Knob
2. MIC ECHO VOL Knob
3. Power ON-OFF(Main VOL) Knob
4. AUX (in) Jack
5. Charging Indicator
6. USB Port
7. TF (Micro SD) Slot
8. MIC Jack
9. DC5V Charging Port
10. LED Display Screen
11. **◀◀** (Previous Track) Button
12. **▶⏸** (Play/Pause) Button
13. **▶▶** (Next Track) Button
14. Side Chain/Music Only Button
15. EQ Button
16. Mode (LED lights ON/OFF) Button

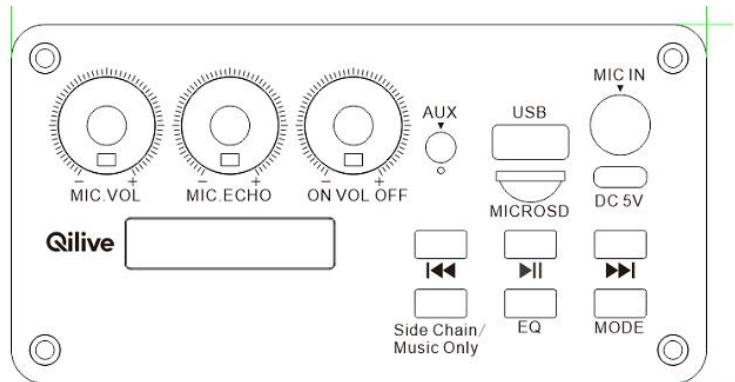

Functions:

BLUETOOTH

FM Radio

USB (only for playing music, no output function)

TF (Micro SD)

AUX-IN

Karaoke

Bluetooth Connection:

Turn the Power ON/OFF knob clockwise to power on the unit.

Search for "**MW-618**" on your cell phone or other external Bluetooth device and select it once found. The speaker will issue a indication tone after the speaker has connected successfully.

TWS connection (under Bluetooth Mode only)

Power on any two speakers at the same time (same model, same Bluetooth pair name).

Double-click one of the speaker's **▶⏸** button, after hearing a BEEP tone means two speakers connected successful, then use the external Bluetooth device to search "**MW-618**" and connect to play together.

During playback,

1. Turn the Power ON-OFF/Volume Control Knob to adjust volume to your desired level, or adjust volume from the source device (in Bluetooth mode only).
2. Short press the **◀◀** or **▶▶** button to the previous track and next track.

3. Short press the **▶||** button once to pause the music, press again to playback.

FM Radio

Power on the unit and press the Mode button to switch to FM mode.

Press and hold **▶||** Play/Pause button for a few seconds, the unit will automatically search and store all available FM stations then play the first store FM station.

During playback,

1. Turn the Power ON-OFF/Volume Control Knob to adjust volume to your desired level.
2. Short press the **◀◀** or **▶▶** button to select and plays the stored radio station.
3. Short press the **▶||** button once to mute the music, press again to resume the music.

USB/Micro SD(TF) Card Slot

Power on the unit, insert USB flash or TF(Micro SD) Card into the USB/Micro SD (TF) Card Slot. Music would be played automatically.

During playback,

1. Turn the Power ON-OFF/Volume Control Knob to adjust volume to your desired level.
2. Short press the **◀◀** or **▶▶** button to the previous track and next track.
3. Short press the **▶||** button once to pause the music, press again to playback.

Tips,

Support max capacity 16GB for the USB/TF (Micro SD) card devices.

AUX IN Connection:

Power on the unit and press the Mode button to switch to AUX IN mode.

Plug one end of the audio cable into the speaker and the other end into the audio devices (such as Cellphone/MP3 player/computer/table, etc.)

During playback, turn the Power ON-OFF/Volume Control Knob to adjust volume to your desired level.

Colour Changing lights of speaker

Long press the Mode (LED lights) ON/OFF button to turn on/off the colour changing lights and change the lights mode.

Karaoke

Power on the unit, insert the plug of the Microphone (included) into the MIC jack on the unit.

During playback,

1. Turn the MIC Volume Control Knob to adjust the MIC volume to your desired level.

2. Turn the MIC Echo Volume Control Knob to adjust the Echo volume to your desired level.
3. Long press the Side Chain/Music Only Button to mute the original singing sound or resume it. (Only BT/USB/TF mode)
4. Short press the Side Chain/Music Only Button to make the Microphone input priority.

Specification

Speaker Power: 15W

Input: DC 5V

Driver: 6.5" speaker

Battery capacity: 2*1800mAh

Transmission Distance: 10M

Dimension: 271*160*350mm

Accessories:

Please check if all the items below are included in your package:

1*Unit

1*USB Charging Cable

1*3.5mm AUX IN Cable

1*Wired Microphone

1*Instruction Manual

IMPORTANT SAFEGUARDS:

1. Do not allow water to spill onto the surface or into the product.
2. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or given instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure they do not play with the unit.
4. If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact the authorized service center immediately.
5. Do not shake the unit.
6. Do not place the unit in water.
7. Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
8. Do not place heavy objects on the unit.
9. If the battery is completely flat, connect the USB charging cable to charge the unit. Please note the unit may not work properly for the first couple of minutes of charging.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.