

SIZE: 70x158mm

MAGNAVOX

STEREO PORTABLE SPEAKER with Bluetooth® Wireless Technology

OWNER'S MANUAL

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

 
- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

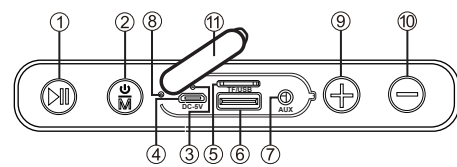


- 1. Play/Pause Button
2. Power On/Off & Mode Selection Button
3. Indicators
4. Micro USB Port (For charging only)
5. TF (Micro SD) Card Slot
6. USB Port
7. AUX (Aux/Line in) Jack
8. Microphone
9. Volume Up Button
10. Volume Down Button
11. Rubber Cover (This cover is to ensure water and dusts protection; always make sure it is completely closed.)

OPERATION:

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 - 1. Open the Rubber Cover on the unit.
2. Connect the small plug from the supplied USB Connection Cable to the Micro USB Port on the unit.
3. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
4. When charging, the Red Charging Indicator on the top of unit will illuminate.
5. When charging is complete, the Red Charging Indicator will turn off.
6. Close the Rubber Cover completely to reduce water and dusts entering.

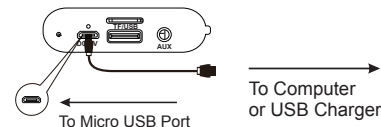

Notes:

- 1. When charging, you can also play and listen to music at the same time.
2. Your battery will last longer if you following these simple guidelines for caring and storing:

- A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

- 1. Recharge the built-in Li-ion battery as previously instructed.
2. Press and hold the Power On/Off & Mode Selection Button on the top of unit approximately 1 second to power on the unit. The Blue Indicator and control buttons on the top of unit will illuminate.
3. Press the Play/Pause Button repeatedly to switch to desired playback mode. The unit will sound a prompt with your selection (see list below):

Table with 2 columns: Playback Modes and Voice Prompt. Rows include BT (Bluetooth), AUX (Aux/Line in), USB, and TF (Micro SD) Card.

Note:

If the Audio Connection Cable; TF (Micro SD) Card and/or USB Device have NOT been inserted into the unit, the corresponding selection will not be available.

- 4. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback. In AUX (Aux /Line in) mode, press it to mute the sound, press again to turn the sound back on.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
- Press and hold the + or - buttons repeatedly to skip tracks.
Notes: It will not function in AUX (Aux /Line in) mode.
5. When finished listening, press and hold the Power On/Off & Mode Selection Button approximately 1 second to shut off the unit.

BT Mode:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

- 1. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the top of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer the phone with your external BT Device.
4. During playback:
- Press the Play/Pause Button on the unit to pause; press again to resume to normal playback.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
- Press and hold the + or - buttons repeatedly to skip tracks.

BT Mode:

- 4. Power on the unit and enter to AUX mode as previously instructed, you will hear an audible prompt say "Aux in".
5. Play the music on the connected Audio Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
6. During playback:
- Press the Play/Pause Button on the unit to mute the sound, press again to turn the sound back on.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
7. When finished listening, press and hold the Power On/Off & Mode Selection Button approximately 1 second to shut off the unit.

Notes:

- When the external BT Device searches for the unit, our model number "MMA3762" will appear on the display of external BT Device.
If while pairing you are asked for a code, please try "0000" or "1234".

Normal operation after pairing:

 
- 1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the top of unit will illuminate and blink.

- 3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

Line In (Aux/Line in):

To listen from an external Audio Player such as MP3 Player, Discman...etc.

- 1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out / Line Out /Phone Jack on the external Audio Player.
2. Open the Rubber Cover on the unit.
3. Connect the other end of the cable to the AUX (Aux/ Line in) Jack as illustrated below:

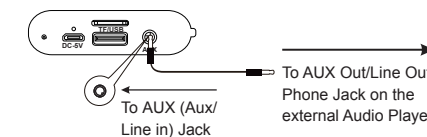


- 4. Power on the unit and enter to AUX mode as previously instructed, you will hear an audible prompt say "Aux in".
5. Play the music on the connected Audio Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
6. During playback:
- Press the Play/Pause Button on the unit to mute the sound, press again to turn the sound back on.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
7. When finished listening, press and hold the Power On/Off & Mode Selection Button approximately 1 second to shut off the unit.

USB:

To play music in a USB Device:

 - 1. In power off mode, open the Rubber Cover on the unit then connect the USB Device (not included) into the USB Port on the unit as illustrated below:

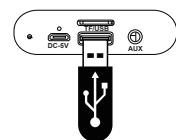


- 2. Power on the unit and enter to USB mode as previously instructed:
- You will hear an audible prompt say "USB".
- Music in the USB Device will be played back.
3. During playback:
- Press the Play/Pause Button on the unit to pause; press again to resume to normal playback.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
- Press and hold the + or - buttons repeatedly to skip tracks.
4. When finished listening, press and hold the Power On/Off & Mode Selection Button approximately 1 second to shut off the unit.

TF (Micro SD) Card:

To play the music in TF (Micro SD) Card:

 - 1. In power off mode, open the Rubber Cover on the unit then insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit with contacts facing down as illustrated below:

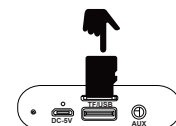

- 2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed:
- You will hear an audible prompt say "Memory Card".
- Music in the card will be played back automatically.
3. During playback:
- Press the Play/Pause Button on the unit to pause; press again to resume to normal playback.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
- Press and hold the + or - buttons repeatedly to skip tracks.
4. When finished listening, press and hold the Power On/Off & Mode Selection Button approximately 1 second to shut off the unit.

Notes:

- Up to 16 GB TF (Micro SD) Card/USB Device supported.
When inserting the TF (Micro SD) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
Before replacing TF (Micro SD) Card/USB Device, make sure the unit has been powered off.

- You also need to download the desired music in MP3 format into the TF (Micro SD) Card/USB Device before insert into the unit.

TROUBLESHOOTING:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, and POSSIBLE SOLUTION. Rows include issues like 'Can't power on', 'No sound or sound weak', 'Sound distortion', and 'BT not functioning'.

SPECIFICATIONS:

Table with 2 columns: Specification Name and Value. Rows include Power Source, Impedance of Speakers, Audio Power, BT Version, and BT Operation Distance.

PACKAGE INCLUDES:

- 1 x Owner's Manual
1 x USB Connection Cable (For Charging only)
1 x Audio Connection Cable with 3.5 mm Stereo Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:magnavox@craigelectronics.com

Printed in China

MMA3762_WC_E0FK1_B0US

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3762