

OPERATING TEST

1. Place the buoy in a place with good coverage.
2. Remove the magnet. **Do not deploy the buoy with the magnet on**
3. Check the flash.
4. Check buoy window and code in the software. Every buoy must have its own window.
5. Check at least one reception in the software before deploying the buoy. **The first message can take up to 20 minutes.**



! SWITCH THE BUOY OFF when it is not being used to avoid battery damage due to deep-discharge.



FLOAT TUBE MUST BE PIERCED to obtain a reliable temperature value.




THE FLOAT IS NOT ROUND. See image. Pump pressure: 0.15 bar at 25°C.



ANTENNA

- ☛ Screw the antenna **BY HAND** with the supplied o-ring
- ☛ **DO NOT TIE ANYTHING** to the antenna. Use the hole in the cover.
- ☛ **DO NOT DEPLOY OR RETRIEVE THE BUOY BY TAKING IT BY THE ANTENNA.**

BATTERIES

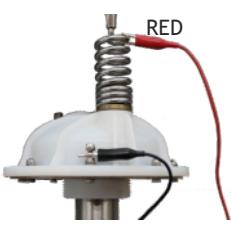

- ☛ Recharge when the charge symbol appears in the software.
- ☛ **SWITCH THE BUOY OFF (Place the magnet on) /**
- ☛ Connect the red clip in the antenna spring
- ☛ Connect the black clip to the prominent screw



- ☛ Fixed green LED: charged. Flashing green led: charging. /
- ☛ **Regardless the charger leds, the buoy will be charged when its green led remains fixed.**