



Model: M10G1BA01

## User Guide

Android™ 4.2

You can find the electronic version of this user guide at [www.minnotablet.com](http://www.minnotablet.com). Viewing the electronic version requires you to install Adobe Reader, downloadable for free from [www.adobe.com](http://www.adobe.com). This manual contains important safety and product information for your MINNO tablet. Please read carefully before use.

MINNO reserves the right to improve the product, product specifications and design without prior notice.

**Note:** All pictures in this manual are for reference only. Product specifications and design are subject to change without notice.

# Contents

<b>Getting Started</b> .....	<b>4</b>
Device Overview.....	4
Turning your device on/off.....	6
Using the touch screen.....	6
Getting to know the Home screen... ..	8
Status Bar .....	8
Access Applications .....	10
Customize your device.....	11
<b>Tools and Applications</b> .....	<b>12</b>
Email.....	12
Home screen applications.....	12
Battery management .....	13
<b>Operational tips</b> .....	<b>14</b>
<b>Safety Notices</b> .....	<b>15</b>

# Getting Started: Device Overview



---

1	Front camera lens
2	Google search/voice search
3	Status bar
4	Lock/unlock screen
5	Applications menu bar



<b>6</b>	Speakers	<b>12</b>	Micro SD Card slot
<b>7</b>	Earphone jack	<b>13</b>	Power button
<b>8</b>	Microphone	<b>14</b>	Rear camera lens
<b>9</b>	Adapter port	<b>15</b>	Back button
<b>10</b>	Micro USB port	<b>16</b>	Volume + / - button
<b>11</b>	Mini HDMI port		

# Getting Started: Turning Your Device On/Off

To turn on your device, press and hold the **Power button** until the Minno logo appears (5-6 seconds); release the button and the system will complete startup.

**Note:** 'Top-off' your battery charge if it is not charged to 100% when first powered on.

To turn off your device, press and hold the **Power button**, then select **Power off →OK**.

# Getting Started: Using the Touch Screen

**Note:** For optimal use of the touch screen, remove the screen protection film before using your device.

## Lock or unlock the touch screen

When first powering on or after not being used for a specified period the device will go to sleep and lock (touch screen will be turned off to prevent unintended operations).

To **lock** the touch screen,  
manually press the  
**Power button**.

To **unlock** the touch screen,  
turn on the screen by pressing the  
**Power button**,

then press the **lock icon** and drag it to the right.



To manage screen lock preferences go to **Settings → Security → Screen Security → Screen lock**

# Getting Started: Using the Touch Screen (continued)

## Touch Screen Control

Your device is equipped with a multi-touch display allowing you to perform multiple finger gestures, such as pinching the screen for zooming out, or spreading the screen for zooming in.

### Pressing

---

Pressing the touch screen allows you to select a desired item or activate an application.

### Long pressing

---

Long-pressing, or holding, an application allows you to drag and drop the application to another Home screen or to remove it from the screen. *\*Holding your finger on an application icon causes the icon to pop up slightly allowing you to drag it.*

### Pinching

---

Pinch or spread two fingers to zoom in or out of images on screen in **Gallery, Maps, or Places**.

### Swiping

---

Use one finger to swipe back and forth between Home screens, through different images in the **Gallery**, or pages in open applications.

#### **Note:**

*To avoid scratching the touch screen, do not tap it with sharp objects.*

*Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.*

*Do not allow the touch screen to come into contact with liquids. The touch screen may malfunction in humid conditions or when exposed to liquids.*

# Getting Started:

## Getting to Know the Home Screen



Once the device has been turned on and the touch screen unlocked, you will see the **Home screen**.

From the **Home screen** you can view your device's status and access applications. The Home screen has multiple panels that can be used to organize your programs and applications. Swipe left or right to view other panels.

See Pg 12 for more information on **Home screen** applications.

# Getting Started: Status Bar



- 1 Return to previous screen
- 2 Return to the Home screen
- 3 Open list of active applications
- 4 Indicator Icons/Notifications/Quick Settings

# Getting Started: Status Bar (continued)


## Indicator Icons

View current battery charge, time, and status of system settings.

*Icons shown do not represent all possible options and may vary depending on your region or service provider.*


	<b>USB on</b>		<b>Airplane mode on</b>
	<b>WIFI signal indicator</b>		<b>Bluetooth on</b>
	<b>Battery charge indicator</b>		<b>Error indicator</b>

## Notifications

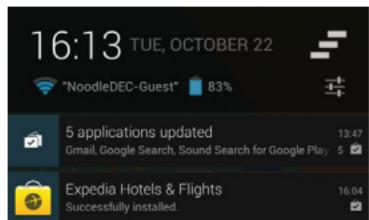

Icons on the right side of the Status Bar alert you to application and system **Notifications** (e.g. when you receive an email or download an app a notification icon will appear). To access Notifications, open the **Notifications menu** by touching and swiping your finger up on the right side of the Status bar. Select a Notification from the menu to view update information.

## Quick Settings

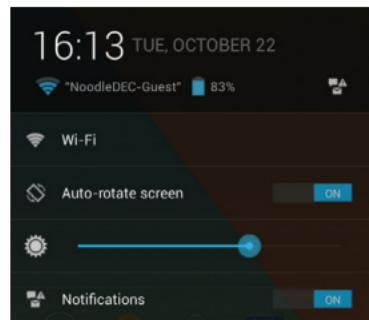

Touch the right side of the Status Bar and swipe your finger up, then press the settings icon  to open the **Quick Settings menu**. From here you can view and quickly change system settings displayed on the menu (e.g. turn on/off Notifications, adjust screen brightness, etc.).

# Getting Started: Access Applications

On the Home screen press the Applications icon  to open the Applications menu.



## Manage Applications

**Open** – Press any application icon to launch the application.

**Grab** – Long-press any icon in the Applications menu to drag it to the Home screen.

**Move** – Long-press any icon on the Home screen to drag and place it anywhere on the screen. Drag icons to other tablet screens by long-pressing the icon and dragging it to the left or right of the Home screen until you see a new screen appear. When you reach the desired screen let go of the icon to set it on that screen.

**Delete** – On the Home Screen, Long-press the application icon you wish to remove, drag it to “X Remove” at the top of the screen, and release your finger to delete it. (*this only deletes the icon from the screen, it does not remove the application from your system*)

**Uninstall** – In the Applications menu, long-press the application you wish to completely remove from your system and drag it to “Uninstall” at the top of the screen. (*some applications are part of the Android system and cannot be uninstalled*).

**Download** – Press the **Google Play Store**  application to search and download Android™ applications for your device.

**\*You must sign in to Google or create a Google account to access the Play Store and to use applications that interact with the Google server.**

# Getting Started: Customize Your Device



## Wallpaper

To change the Wallpaper, press and hold your finger on the Home screen to bring up the Wallpaper dialog box. Choose Wallpaper from available options.

## Settings



Press the Settings icon to enter the Settings menu and customize your device.

Gently press your finger on the Settings list and move it up or down to scroll through Settings options.

### Change the display language

1. Go to **Settings → Language & Input → Language**
2. Select a language

### Adjust the device's volume

1. Go to **Settings → Sound → Volumes**
2. Drag the sliders to adjust the volume lever for each sound.
3. You can also adjust the volume by pressing and holding the Volume up and Volume down buttons on the tablet case (see Pg 5 for button locations).

### Adjust the brightness of the display

1. Go to **Settings → Display → Brightness**
2. Drag the slider to the adjust the screen brightness.

### Turn on Wi-Fi


1. Go to **Settings → Wi-Fi**
2. Press On/Off bar to turn Wi-Fi on or off.

## Tools and Applications: Email

To set up or sign up for a Gmail account open the **Gmail**  **application** on the Home screen, choose **Existing** if you already have a Gmail account or **New** to create a new account and follow the instructions on the screen to complete set up.

To set up a personal or company email account open the **Email**  **application** in the **Applications menu**, enter the email address and password for the email account you wish to add and follow the instructions on the screen to complete set up.

## Tools and Applications: Home Screen Applications

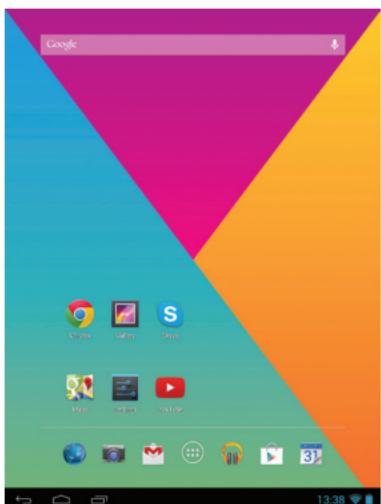

Press any **Home screen** application icon to start taking advantage of features on your device. You can reorganize the applications on the screen to match your preferences, move applications to other **Home screen** panels, add new application icons from the **Applications menu**, or **Download** applications from the Internet to enhance your device's functionality.

*See 'Manage Applications' on Pg 10 for more information.*

# Tools and Applications:

## Battery Management

During charging the device will be powered on (*the system will power on even when charging begins from a powered down state*).

When charging while the device is in use the battery icon will have a white lightening bolt in the center.  When fully charged the battery icon will turn solid blue.

Disconnect the power charger from the device when the device is fully charged.

To maintain optimum battery life, wait until the battery is low before charging.

**Note:**

*When the battery is very low the system will show an alert and automatically shut down when the battery charge has completely run down. If your tablet shuts down due to a low battery, connect the adaptor to recharge.*

*You can continue to use the device while it is charging, but charging time will be longer due to battery drain while the system is working.*

# Operational Tips

## Toggle Between Open Applications

Press  to display the list of active applications and select the application you wish to access. By doing this you can toggle between active applications without going back to the Home screen and/or closing the application that you are using.

## End Application Operation

Press  to display the list of active applications. Press and hold your finger on any application to open a drop down menu. Select **Remove from list** to end the operation of the application. *You can also lightly touch an application on the list and swipe your finger to the left to remove it.*

## Locating a Downloaded File

Press  to access the **Applications menu** then press **Downloads**  to see downloaded files.

## FAQs

For more Operational Tips and a list of Frequently Asked Questions please visit our website: [www.minnotablet.com](http://www.minnotablet.com).

## Android™

For more information about the Android™ 4.2 Jelly Bean operating system visit: [www.android.com](http://www.android.com).

# Safety Notices

- Keep device away from high temperatures, moisture and dust. Device is not waterproof and exposure to water could cause permanent damage to hardware.
- Keep device away from strong magnetic fields to avoid damage.
- Do not drop. Dropping can cause damage to the screen and device hardware.
- Choose appropriate volume when using headphones. If you experience discomfort or ringing in your ears lower the volume or stop using the device.
- Charge the device under the following conditions.
  - The Battery icon shows that the battery is run down.
  - The system automatically shuts down or powers off quickly after Startup.
  - There is no response from the Power button or other operation buttons.
- Do not suddenly turn off or disconnect the tablet from the power adaptor when formatting, uploading or downloading files as this could cause data loss and application or system errors.
- Do not disassemble the device.
- Do not use alcohol, paint thinner or benzene to clean the device.
- Do not use the device in places where the use of electronic devices is prohibited. Comply with any restrictions placed on the use of wireless equipment.
- The performance of the wireless reception of the device could be influenced by the wireless equipment and networks.
- Only allow qualified maintenance personnel to repair or service the device.
- Only use the original accessories and battery. Incompatible accessories may cause damage to the device.
- To keep your data safe and secure back up all important information on your device or keep a handwritten record of its contents.

## Support

If you have any questions about your MINNO that aren't answered in this user manual please contact us for support:

**[support@minnotablet.com](mailto:support@minnotablet.com) • [www.minnotablet.com](http://www.minnotablet.com)**

### **FCC Part 15.19 Warning Statement**

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

### **FCC Part 15.21 Warning Statement**

NOTE: **MINNO** IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### **FCC Part 15.105(b) Warning Statement**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

All rights reserved, MINNO ©2013.

This guide and/or any information and/or any portion thereof may not be photocopied, reproduced or used in any other way without prior written approval from MINNO.

### **CE Statement**

Battery caution:

Risk of explosion if battery is replaced by an incorrect type

Dispose of used batteries according to the instructions.

The product shall only be connected to a USB interface of version USB2.0

Adapter shall be installed near the equipment and shall be easily accessible.

Use the Mobile Phone in the environment with the temperature between -10° and 50°

The plug considered as disconnect device of adapter

Adapter Model: KSA29B0500210HE

Input: 100~240V, 50/60Hz, 0.5A

Output: 5.0V, 2.1A

Manufacturer: Kuantech (Beihai) Co., Ltd.

Hereby, Minno LLC declares that this Tablet, M10G1BA01, A10G1BA01  
is in compliance with the essential requirements and other relevant  
provisions of Directive 1999/5/EC

**CE0681**

approval from MINNO.