

Rock User Manual



Dear customer,

Thank you for purchasing our Bluetooth speaker Rock. To ensure correct operation, please read this user manual carefully before operation.

Important Safety Instructions

- ◆ Keep speaker away from water and any other liquids. It's not waterproof.
- ◆ Keep speaker away from any source of extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places.
- ◆ Do not drop, crush, bend or apply excessive force to the device.
- ◆ Adjust the volume to a suitable level so as to avoid damaging your hearing, or the unit itself.
- ◆ If does not use this speaker for long time, please charge at lease once within three month, in order to prevent the lithium battery from causing and damaging because of excessive consumption.

一. Product Features:

1. Bluetooth version: V2.1+EDR
2. Operation range: up to 10 meters
3. Compatible to Iphone, Ipad, and other Bluetooth devices
4. Built-in Microphone, handsfree call
5. Touch Screen operation
6. Micro SD card playing
7. Support FM radio
8. Built-in Lithium battery
9. Aux in, Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.

二. Product Technical data:


Bluetooth version: V2.1+EDR	Working Voltage: DC3.5V-4.2V
Output power: 3W*2	Frequency range: 100Hz-18KHz
Distortion: <1%	S/N: >85dB
Sensitive: 600mV	Speaker driver: 2 Inch
Battery capacity: 1500mAh	Product net weight: 363g
Product dimension: 178*65*67mm	

三. Package Contents:

Speaker*1, USB cable*1, 3.5mm Audio Cable*1, Manual*1

四. SLOT AND KEYS

一. Keys

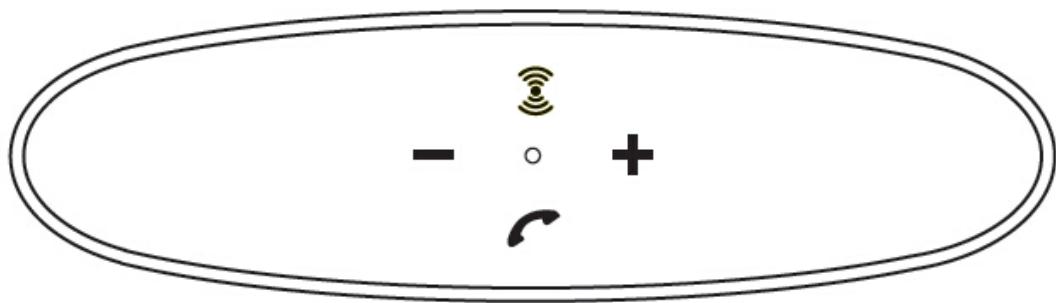

1. 

Short Press: previous song, FM previous station under FM mode

Long Press: Volume decrease

2. 

Short Press: Next song, FM next station under FM mode

Long Press: Volume increase

3. 

Short press: Pause/Play/Hang off/Answer the Call

Double click: Dial Back the last call

4. 

Bluetooth status indication


Short press: Bluetooth disconnection; Mode change for Bluetooth, FM radio, Micro SD card

playing

5. 

LED indication for charging

二. Slot

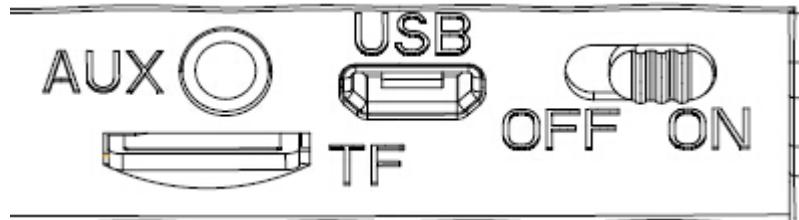

1. Aux in slot

insert 3.5mm audio cable, come to “Aux in mode”, work as the external speaker of audio source of computer,PSP/MP4 Etc.

2. Micro SD (TF) Slot:: insert the Micro SD card to play the music.

3. Micro USB Slot: Connect with computer or adaptor (5V/1A) to charge the speaker

4. ON/OFF: Power on/off.

五. Instructions

(一) 、 Power on/off

Switch the button to power on/off the speaker.

(二) Bluetooth connection

Pairing Rock to your Smart phone (smart phone should be away from your speaker within 10 meters)

1. Activate pairing mode on Rock by switching “ON/OFF” button to “ON”. The Bluetooth LED light will flash in blue.
2. On your smart phone, navigate to the Bluetooth function (refer to the smart phone owner’s manual to locate Bluetooth function).
3. Select “Set Up” Bluetooth or turn “ON” Bluetooth.
4. Select “Search” or “Discover” devices. Select “A32”. You will hear the voice “the Bluetooth device is connected successfully”.
6. If requested type the password 0000
7. Press the Enter key.

After completing the steps above, a message on your smart phone will appear to confirming that your device is now paired/connected.

In case of unsuccessful pairing, Push to “OFF” and restart it to “ON”.

If you turn off the device, but the Bluetooth on your smart phone remains open, when you restart the device, the Bluetooth will be connected automatically.

Remarks:

In Bluetooth mode, the consumer can use the Bluetooth device or speaker to control music playing, it is easy and convenient. When the speaker is in low power, you will hear a voice “low power, pls re-charge it”, and the buttons will be not workable due to the low voltage. The buttons control will turn to work again after charging.

Note: Some Bluetooth devices are in very low Bluetooth version, and can't support the button control, it's not due to the quality of the speaker.

(三) Mobile Hands-free call

Under Bluetooth pairing mode:

1. Answer the call

Short Press  Answer the call.

2. Hang off the call

Short Press  again to hang off the call

3. Dial Back the call

Double click  ,Dial the last call back

(四) Micro SD Card Music Playing

Inserting the Micro SD Card into the speaker to enter the memory card mode, the speaker will play the Micro SD card music directly. (Speaker will voice “music play mode”).

The speaker support music format at WAV,MP3,WMA.

(五) AUX in

Use the 3.5mm audio cable included to connect the speaker to an audio source (PC, MP3/MP4,

mobile phone). Short press the **Wireless icon**  to enter “AUX IN” mode (the speaker will voice “Aux input” mode). The speaker will play the music from the audio source.

Please note: Low battery will affect the music sound quality, please charge the speaker by adaptor (5V 1A) soon.

(六) Data download

In power on mode, connect the computer and speaker by the USB cable, the speaker can enter download mode, click USB flash for data download directly.

(Note: Please format the Micro SD card which used for the first time.)

六. LED Display status and Voice indication in Bluetooth mode

Power on: Voice prompt and Touch screen LED indicator is on, the LED light will be off in 5 seconds automatically.

	LED Display	Light indication
Wireless LED light	Flash slowly	It's ready to pair
	Stay solid	It's paired
Red LED Light	Flash quickly	Low battery
	Stay solid	Charging
	off	Fully charged

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.