 
 
 


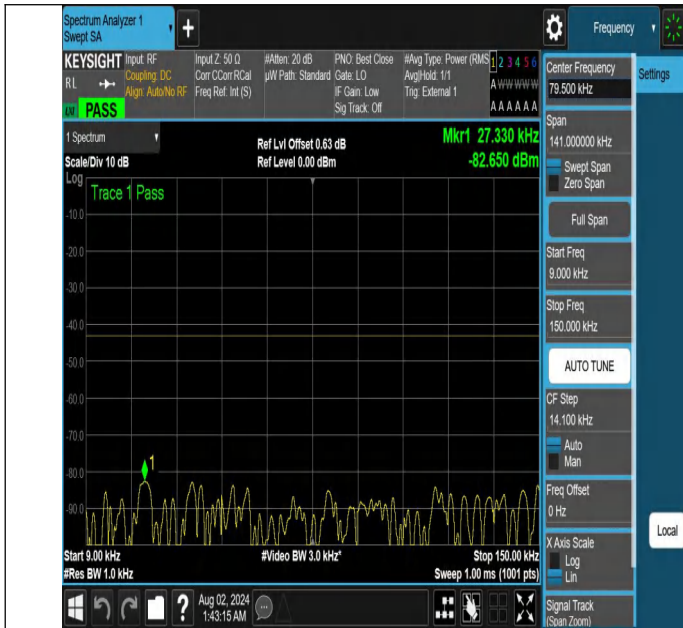


NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant1-PASS

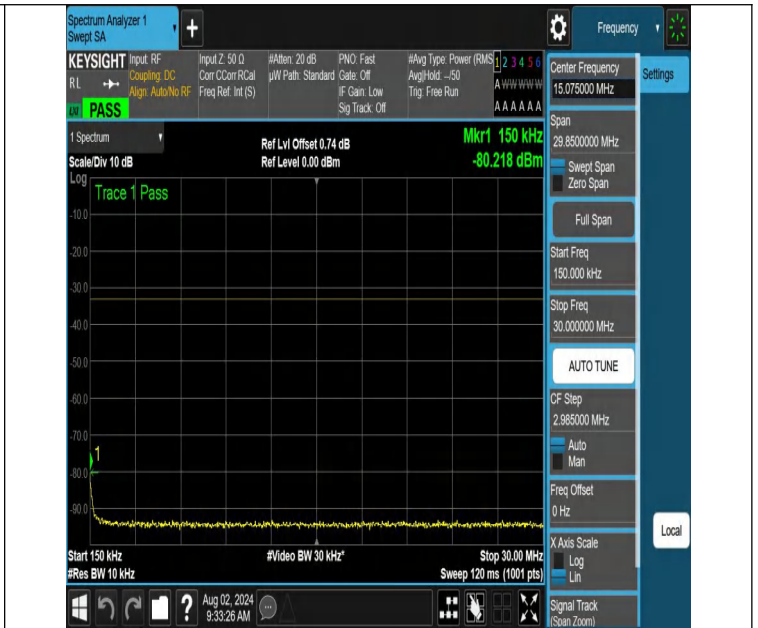


NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

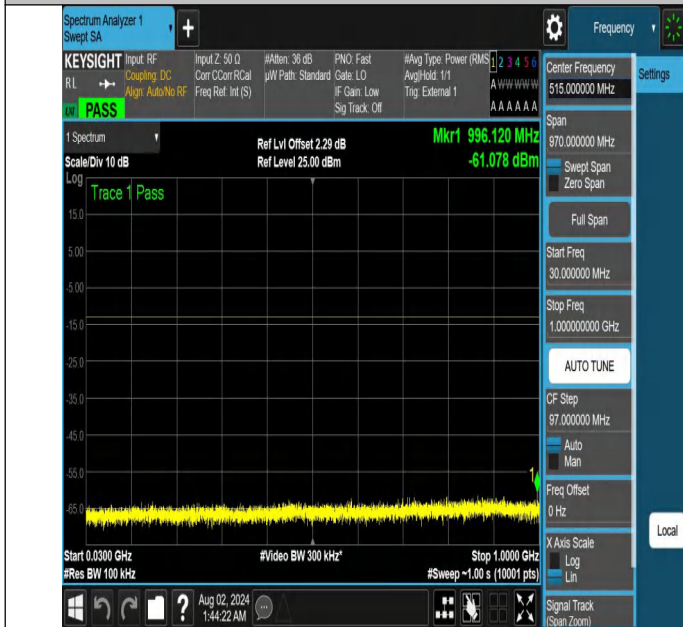

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS

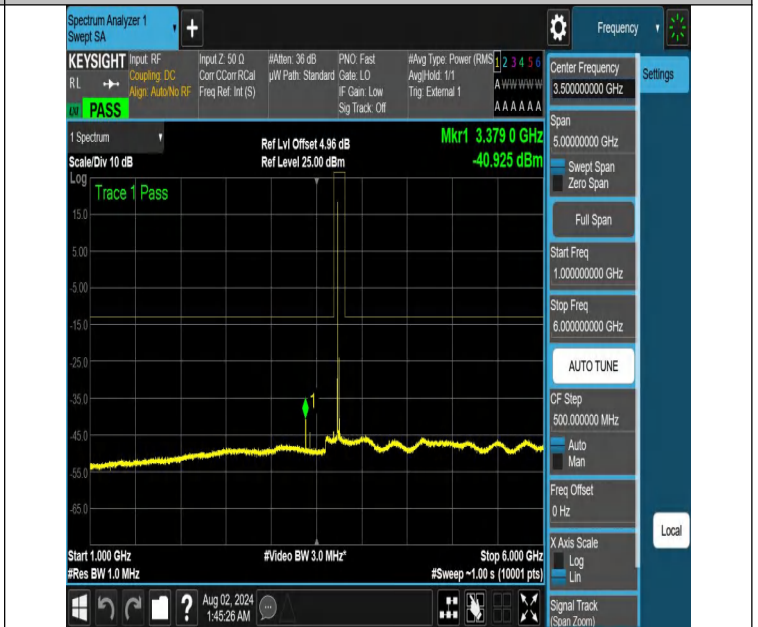

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant1-PASS

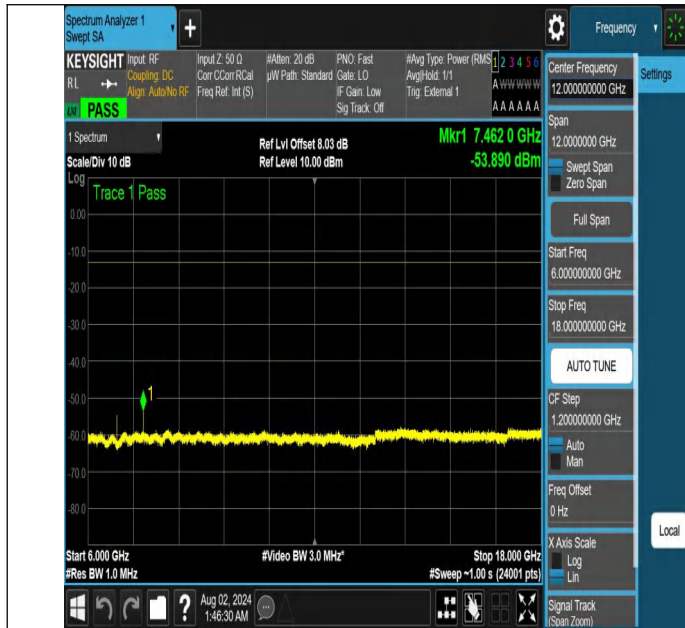

 NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

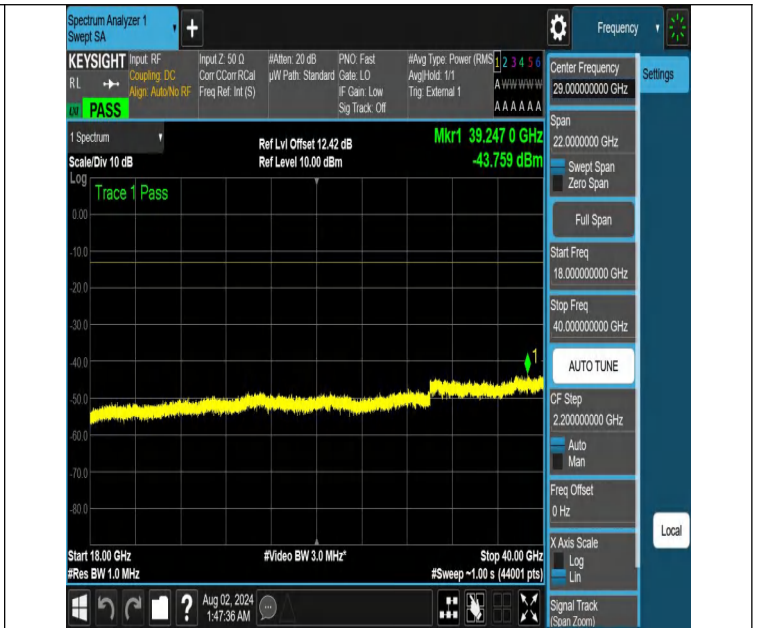

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant1-PASS

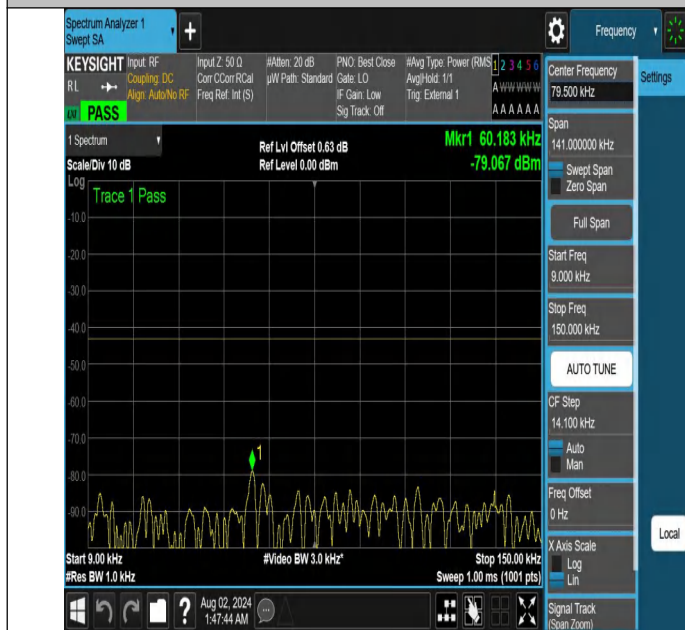


NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant1-PASS

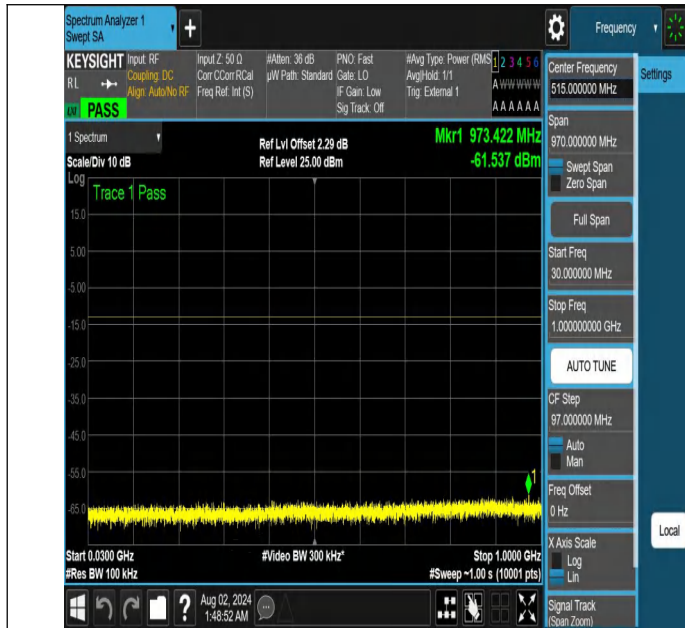

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS

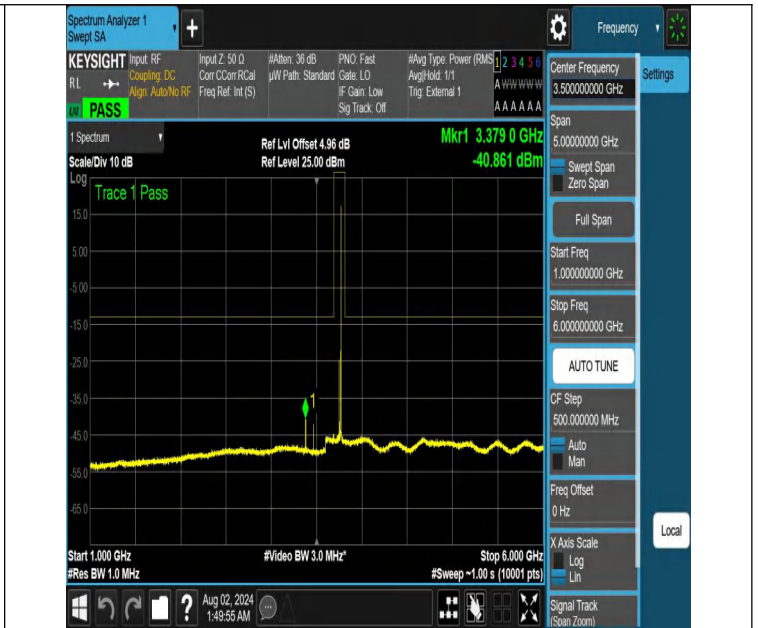

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

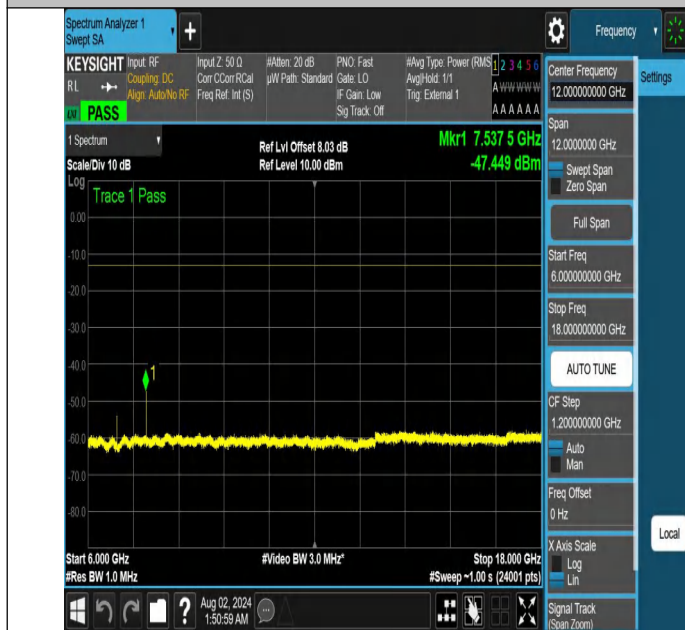

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

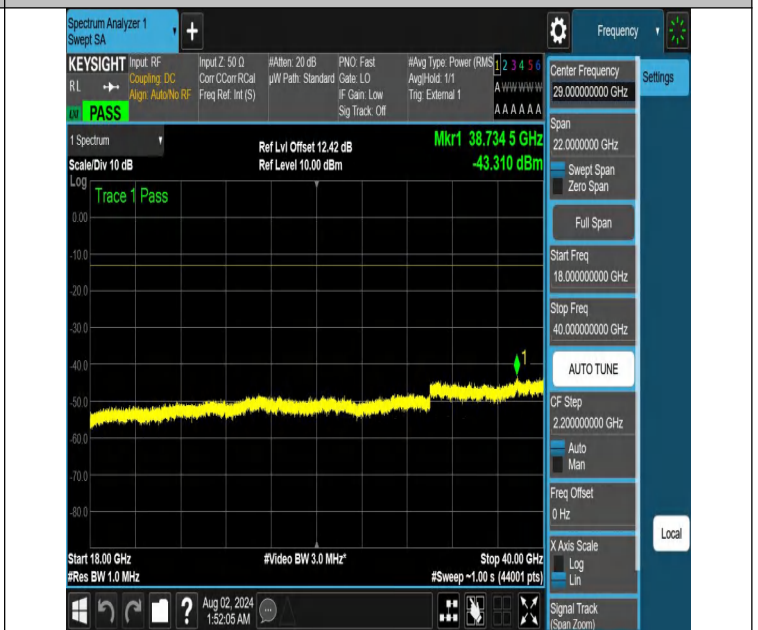

 
NTNV-N78-3700-3800-PC2-30-40-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

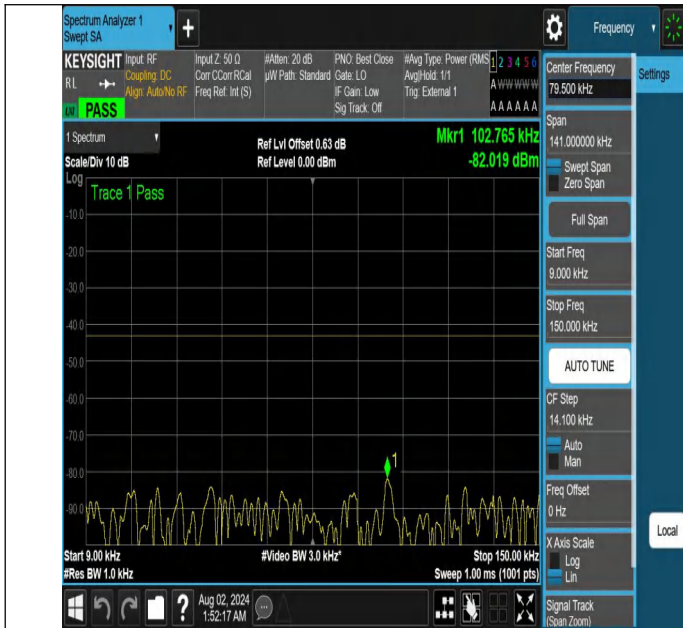

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant1-PASS

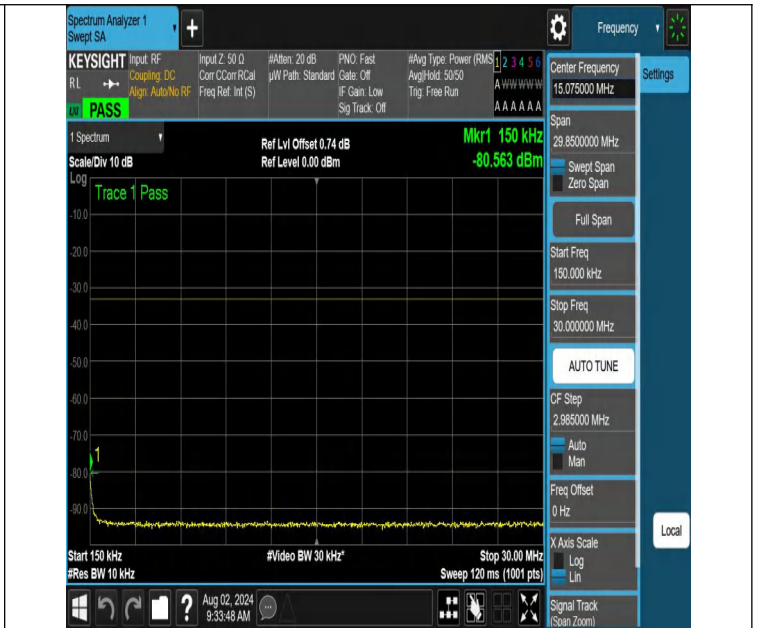

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

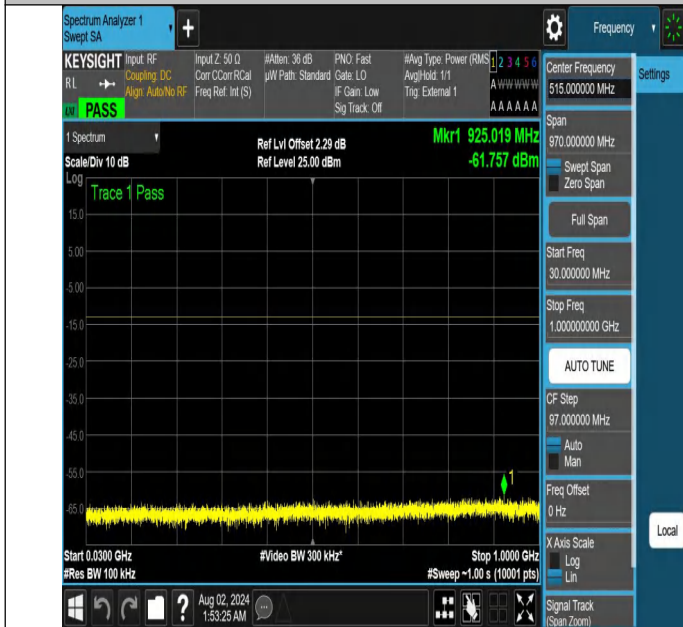

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS

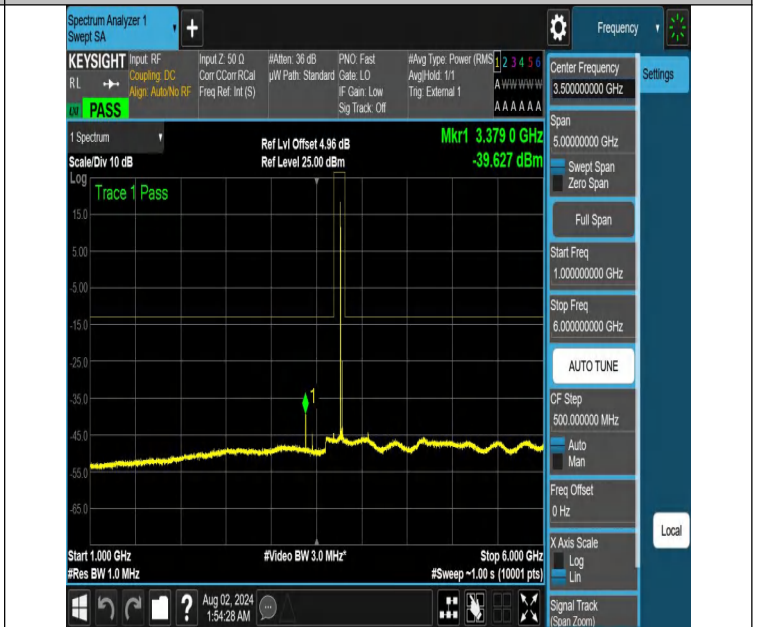

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant1-PASS

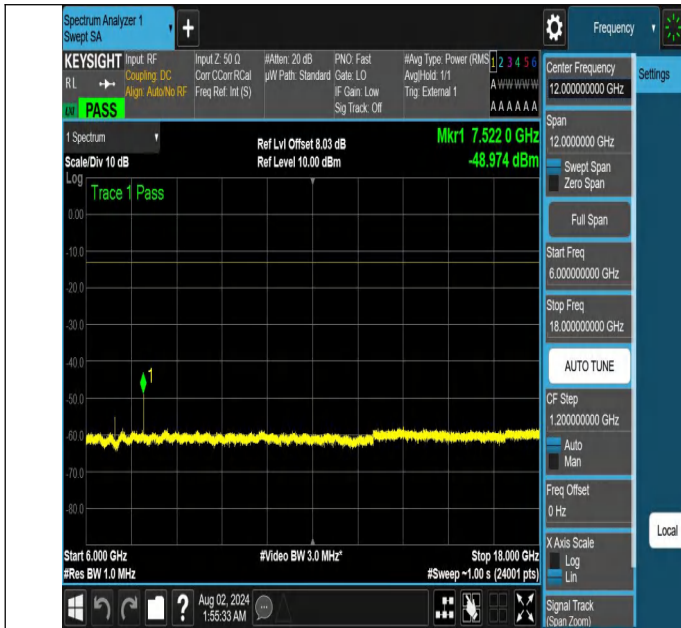

 NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

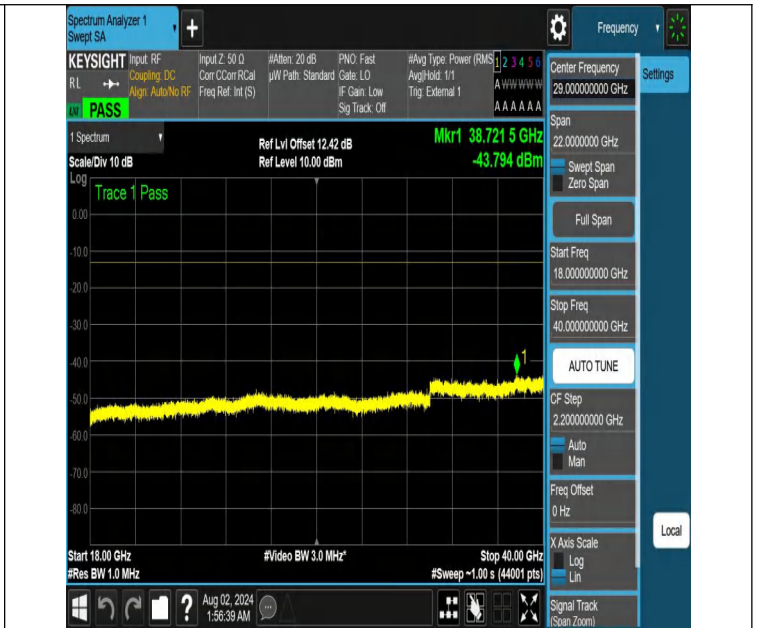

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant1-PASS

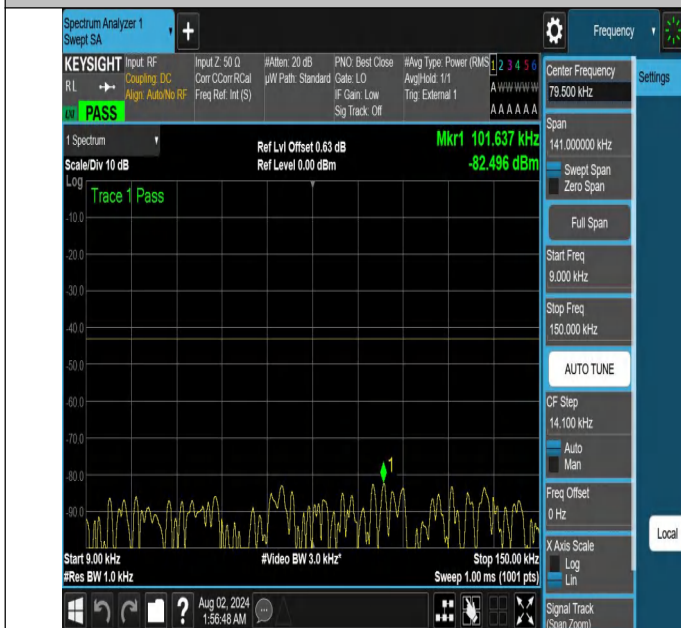


NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant1-PASS

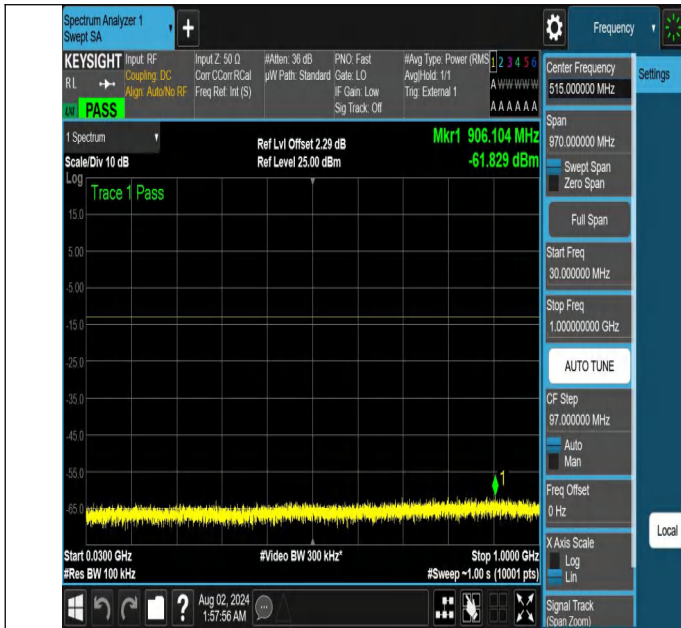

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS

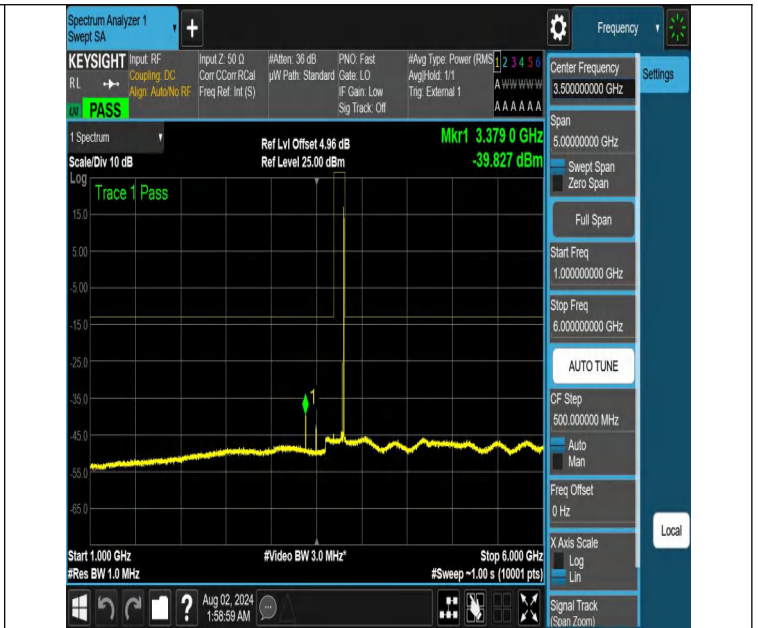

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

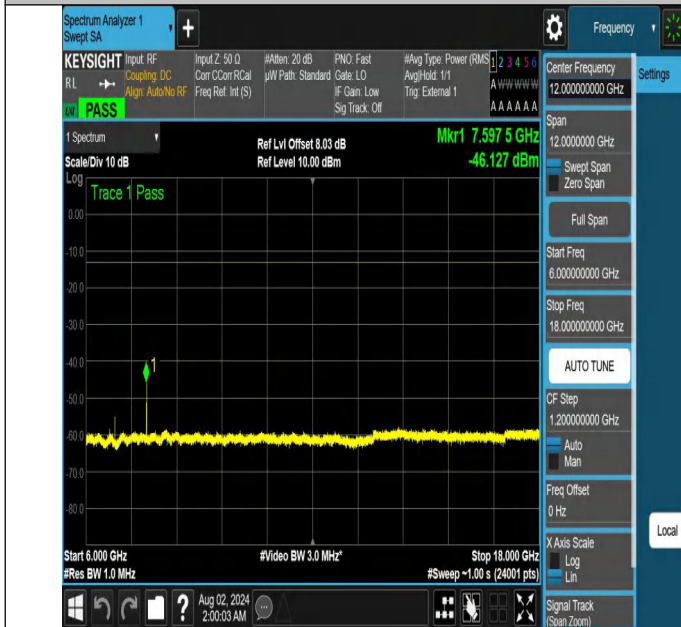

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

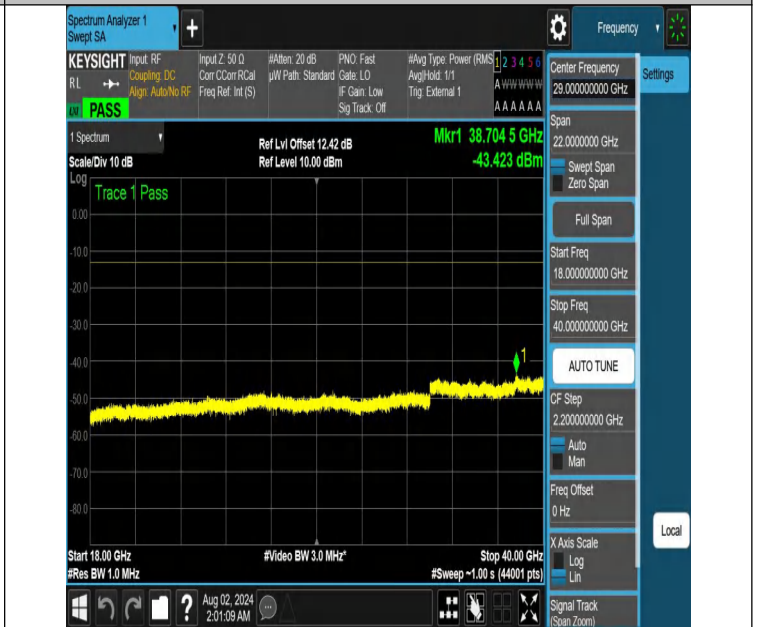

 
NTNV-N78-3700-3800-PC2-30-40-H-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

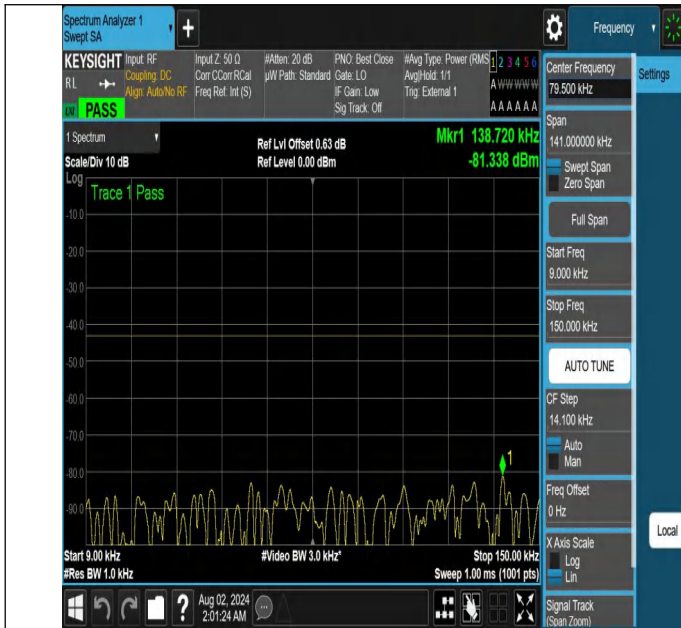

 NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant1-PASS

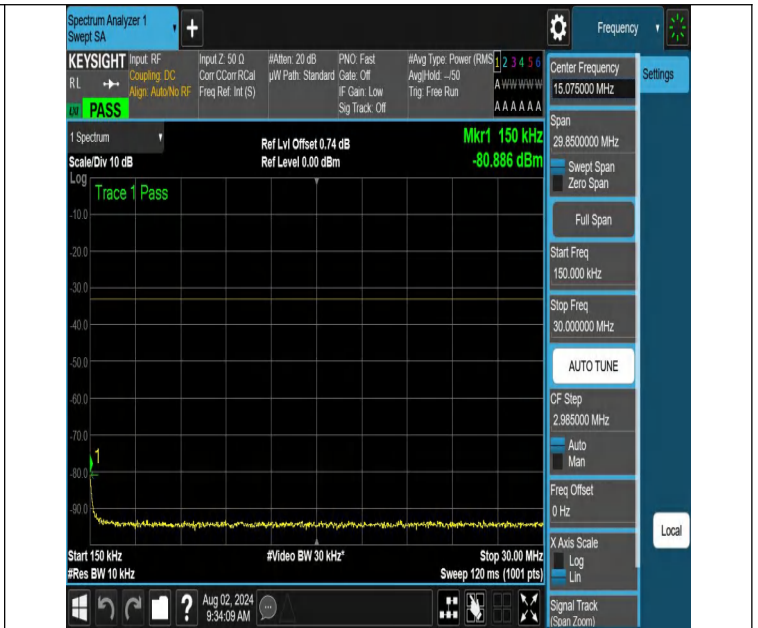

 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

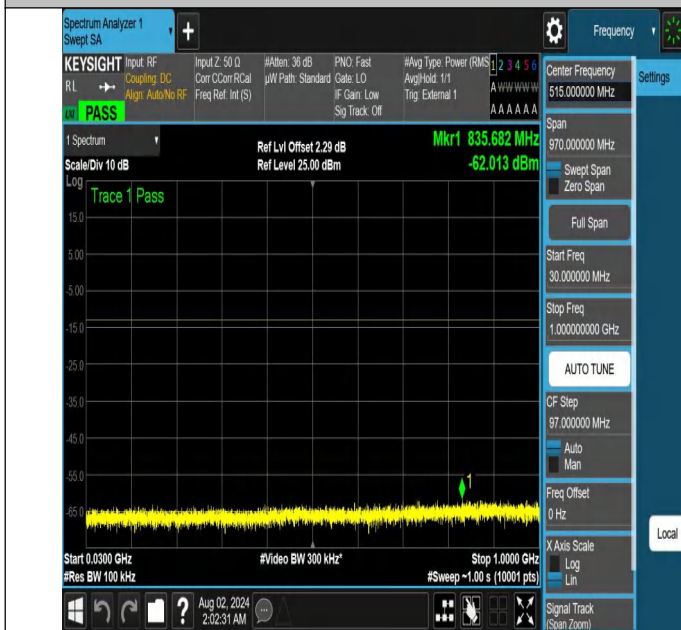

NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant1-PASS

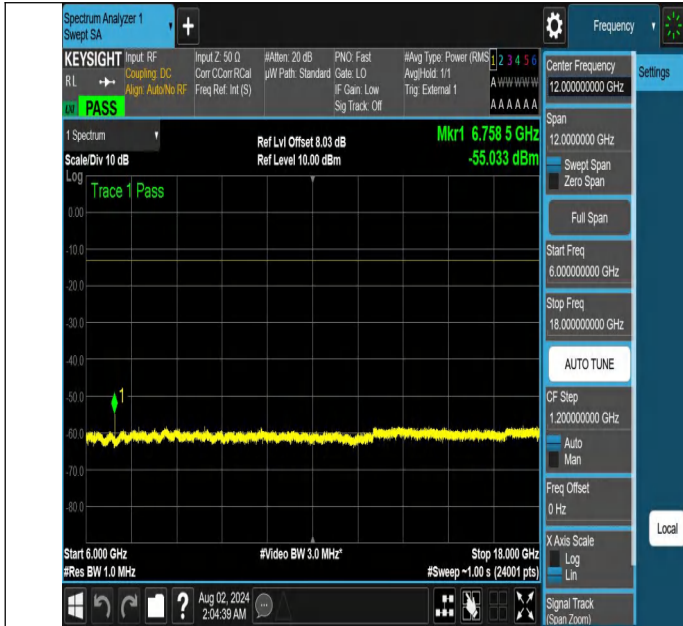


NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant1-PASS

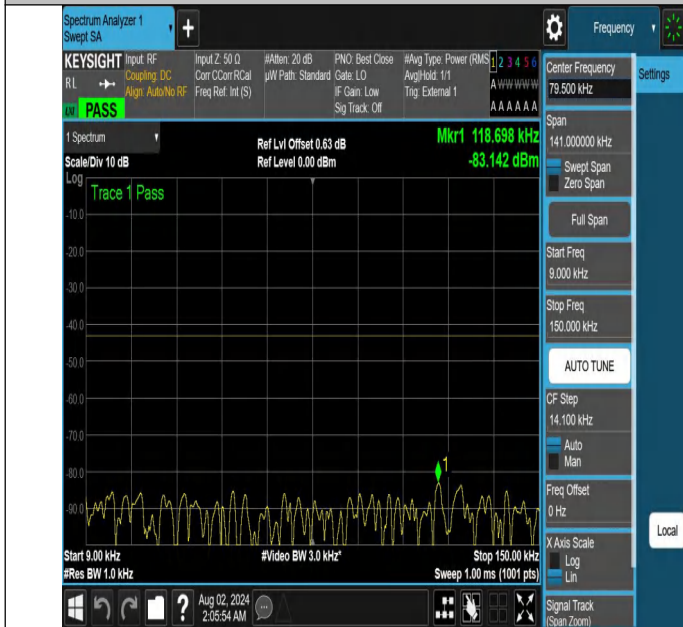

 NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS

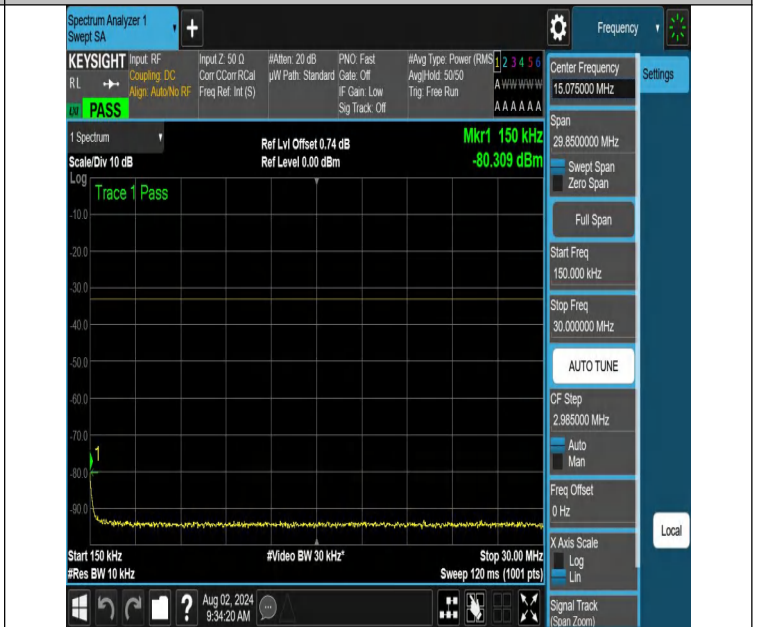

 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant1-PASS

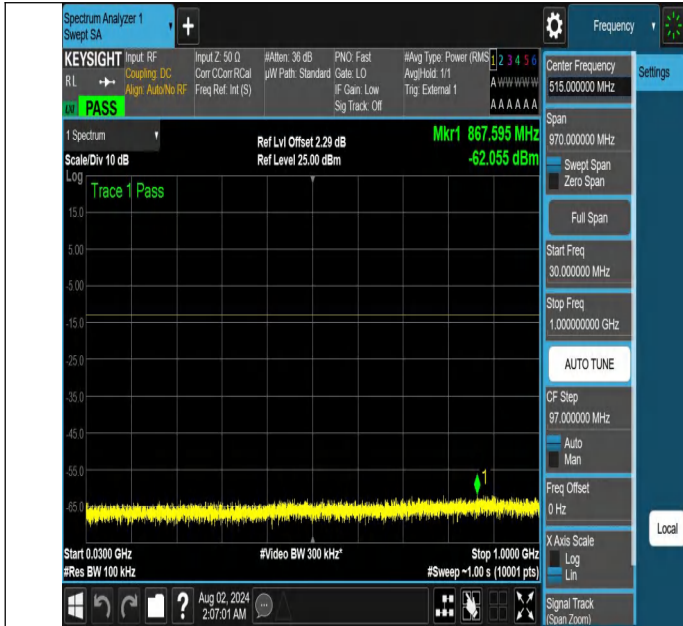


NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

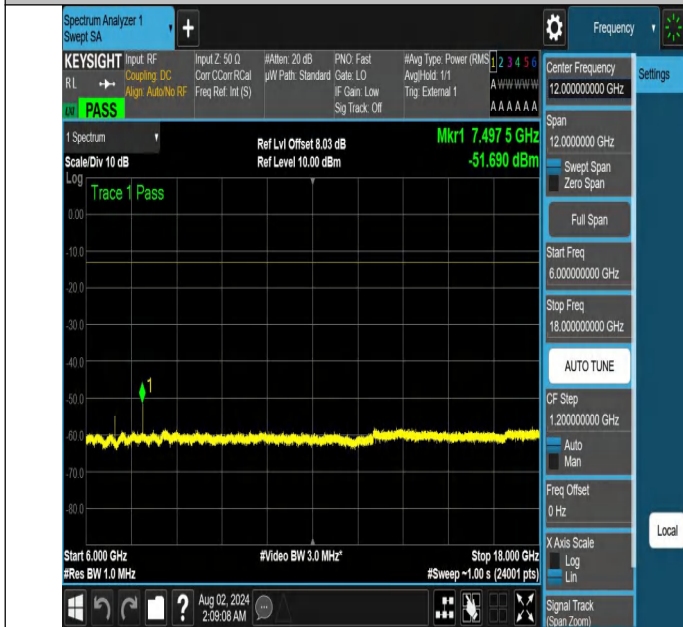

 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

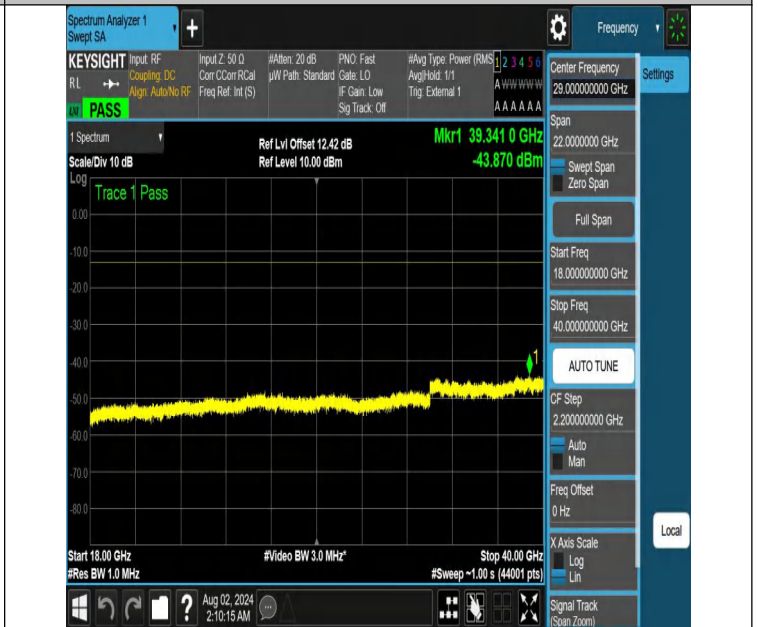

 
NTNV-N78-3700-3800-PC2-30-50-L-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

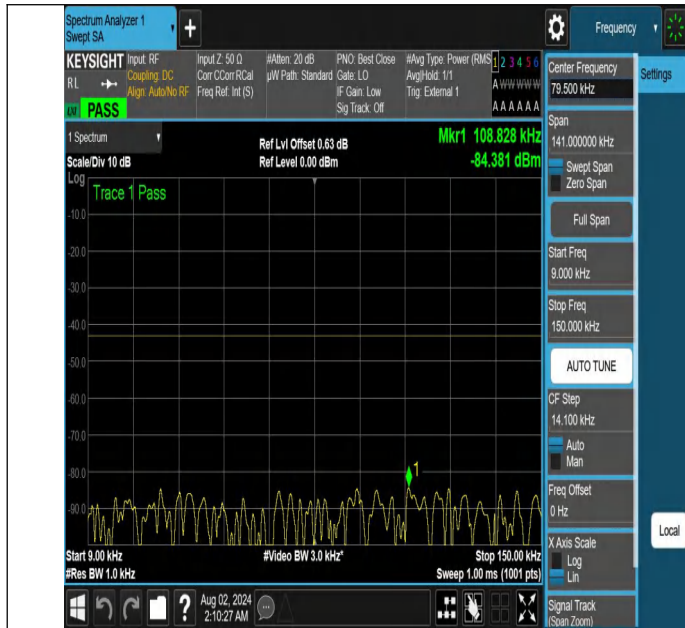

 NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant1-PASS

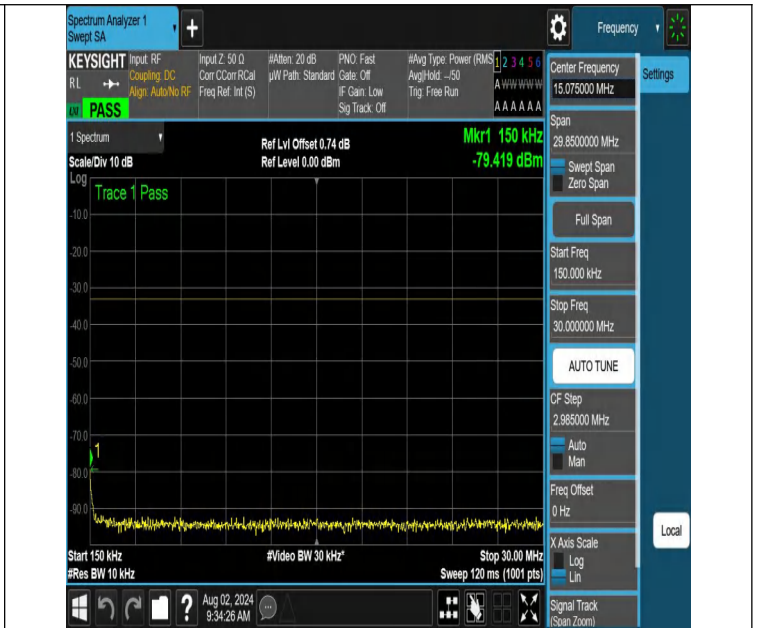

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

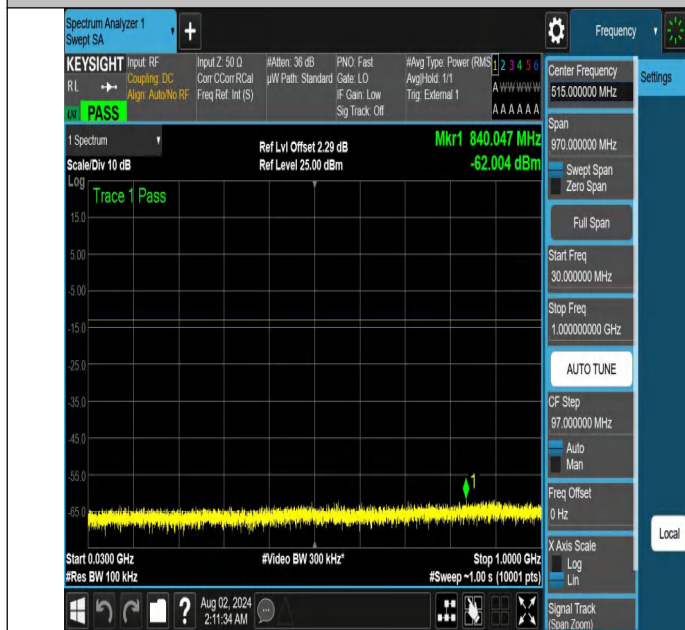


NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant1-PASS

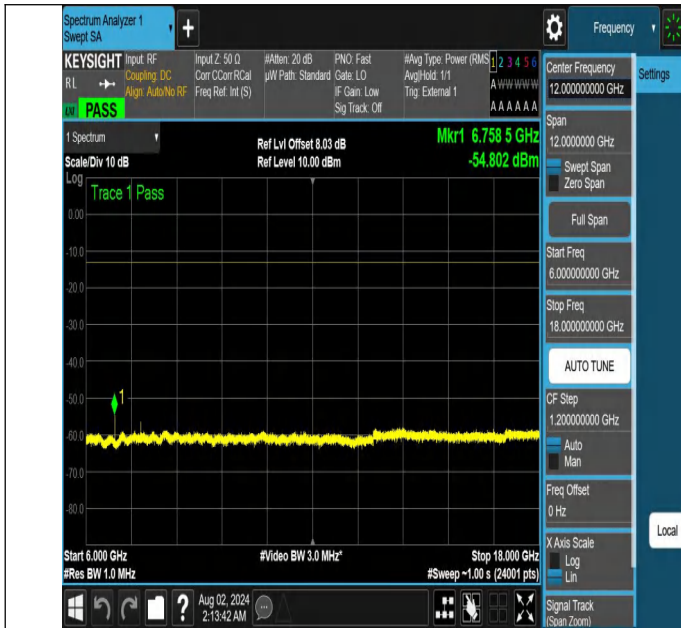

 NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

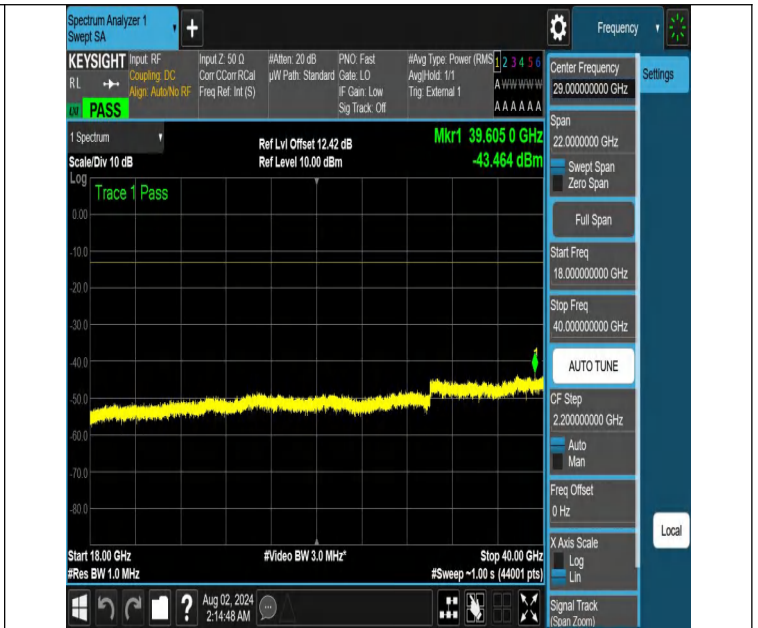

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant1-PASS

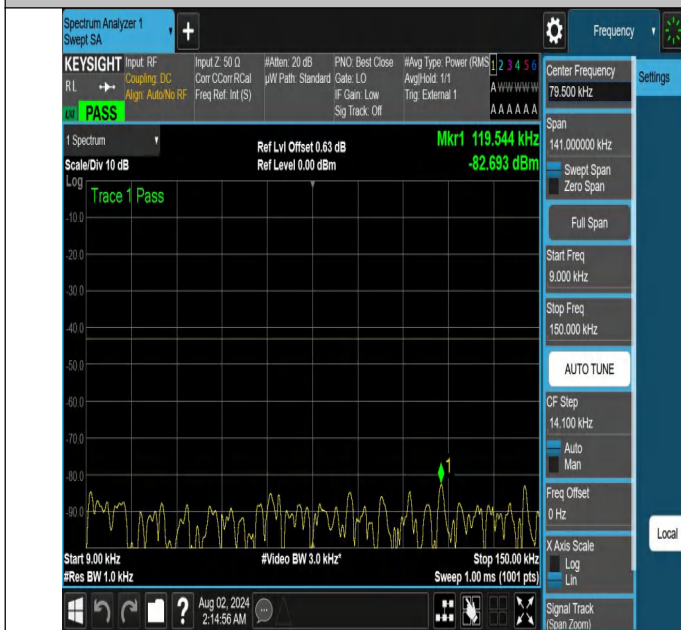


NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant1-PASS

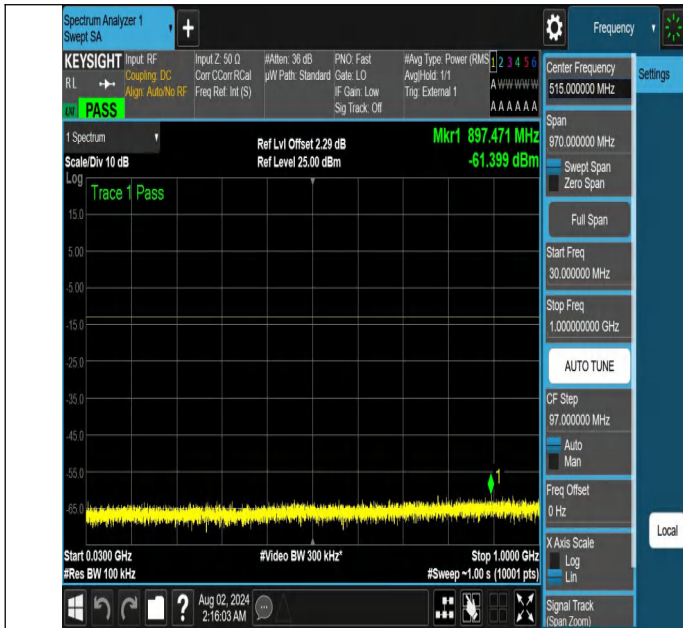

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS

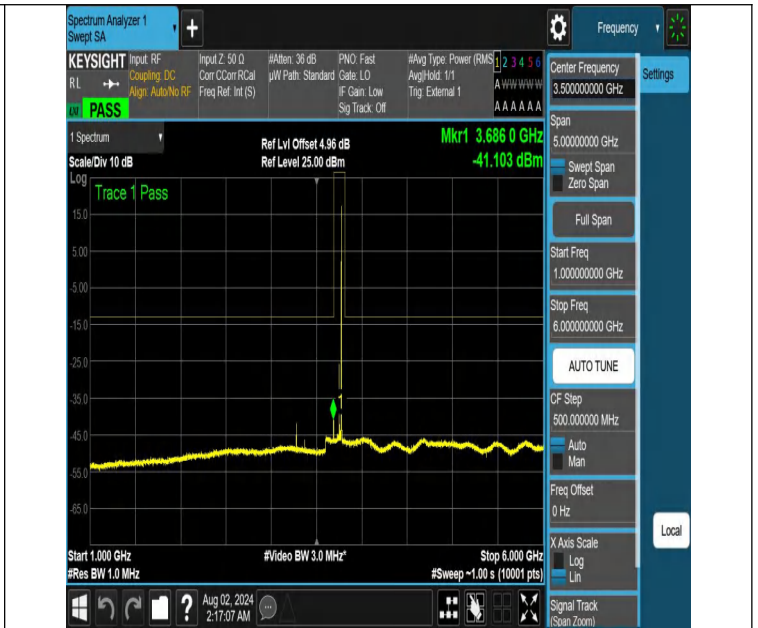

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

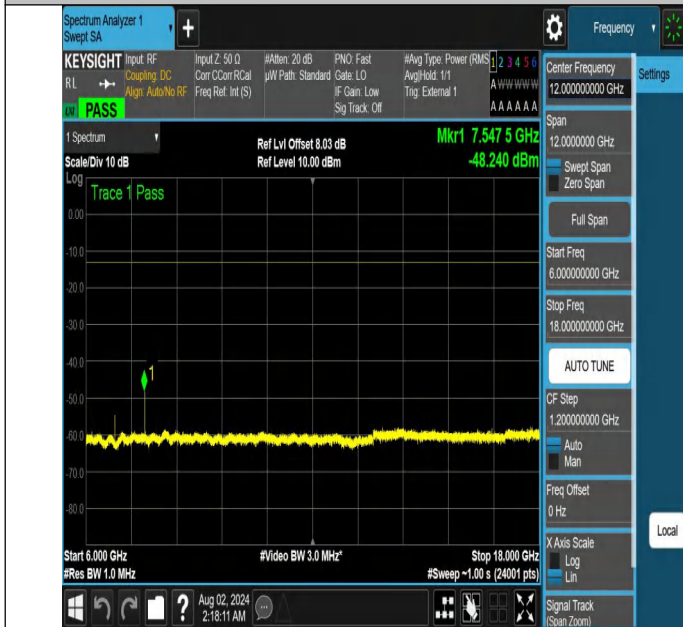

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

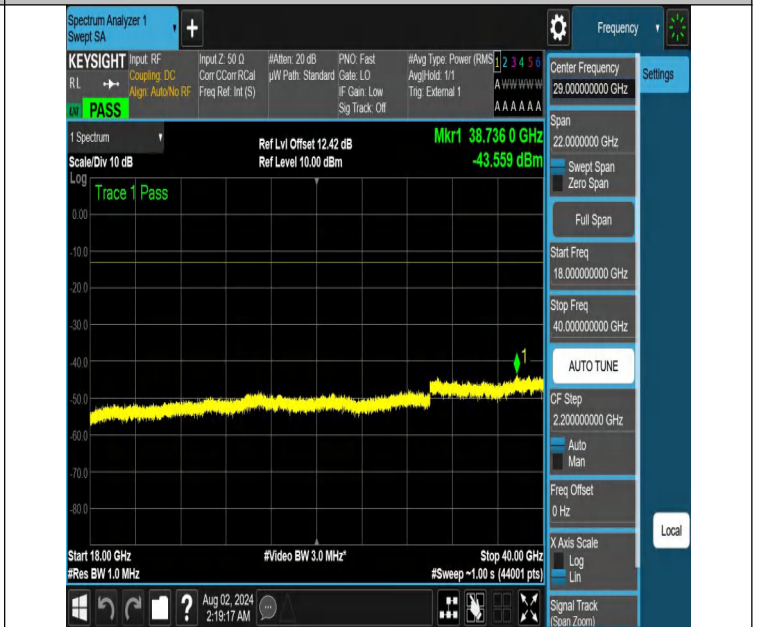

 
NTNV-N78-3700-3800-PC2-30-50-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

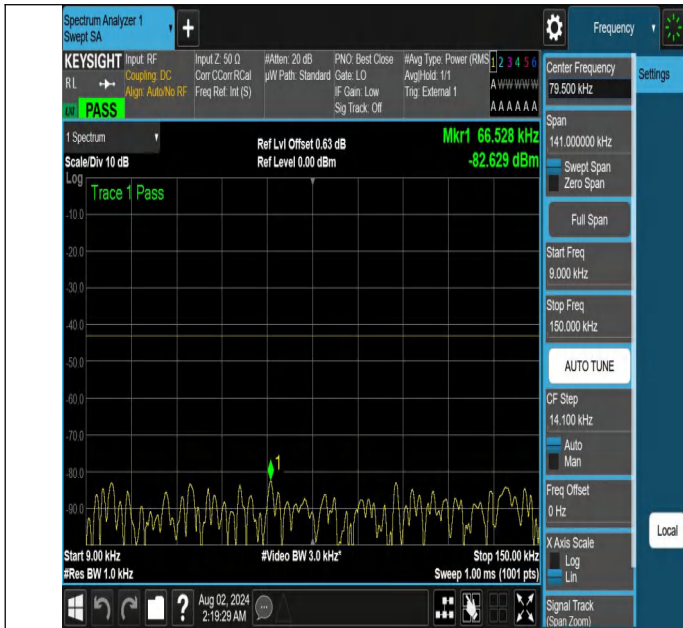

 NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant1-PASS

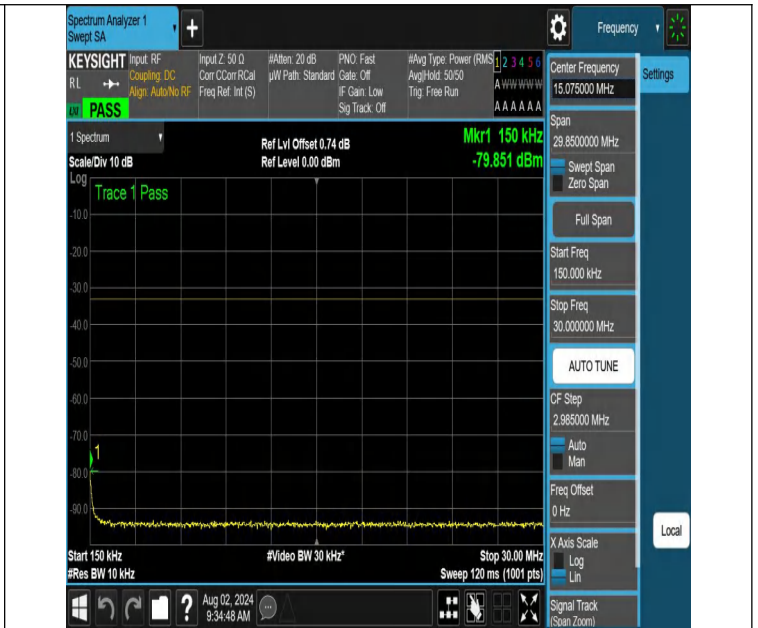

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

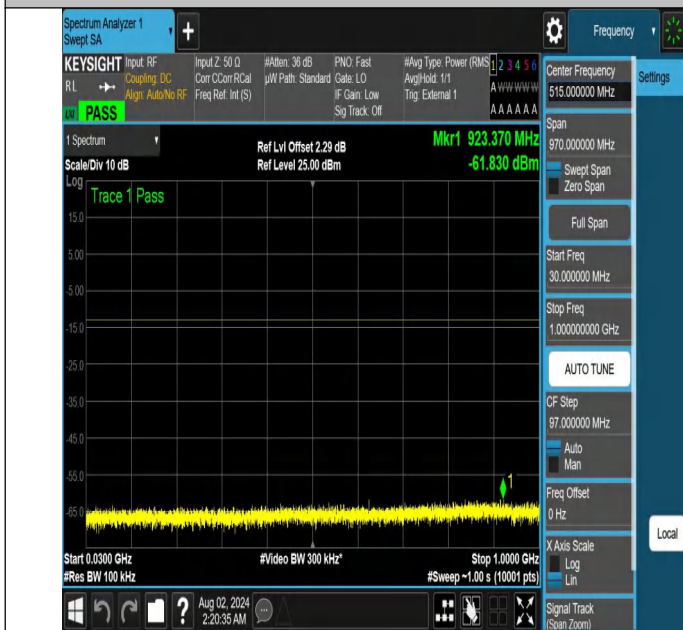


NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant1-PASS

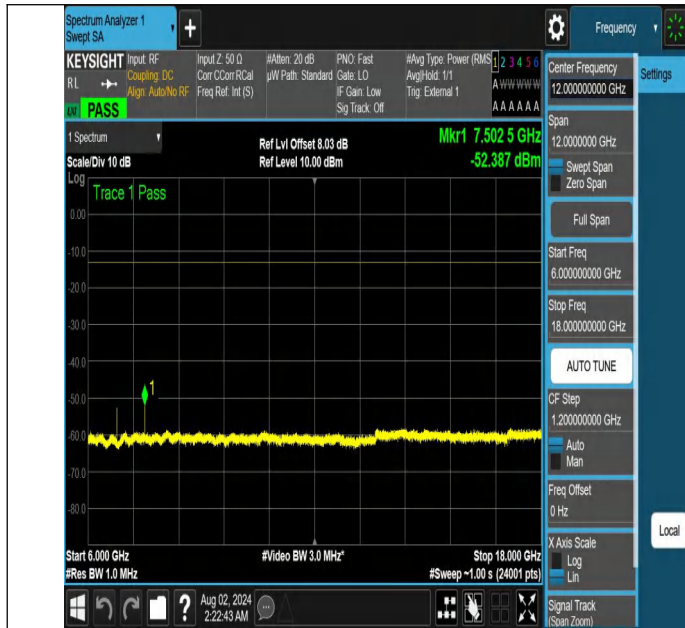

 NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

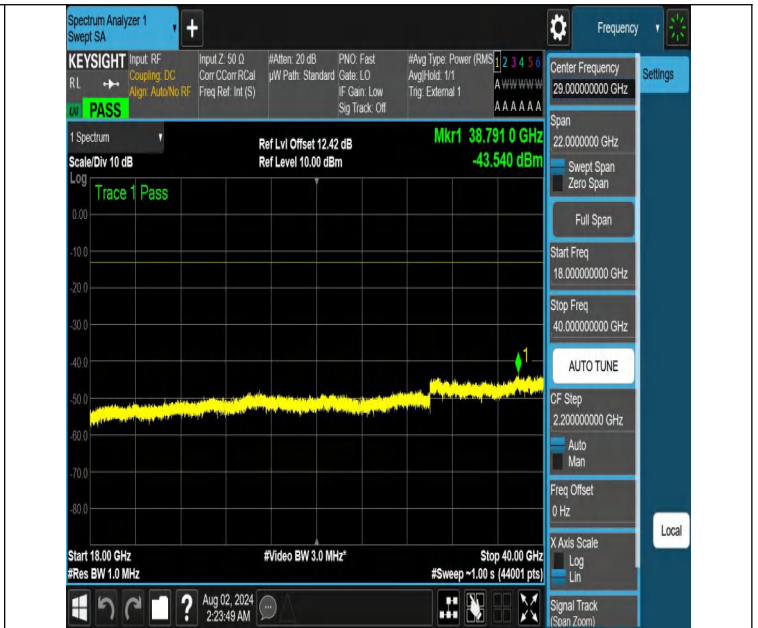

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant1-PASS

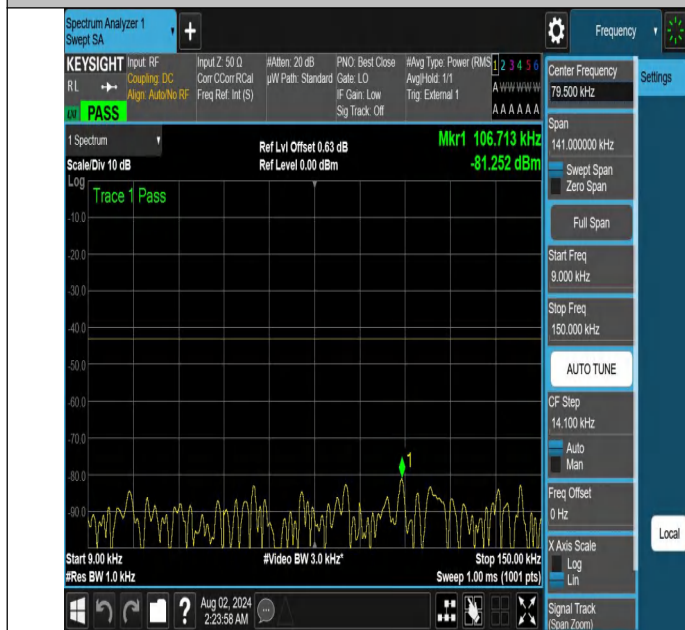


NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant1-PASS

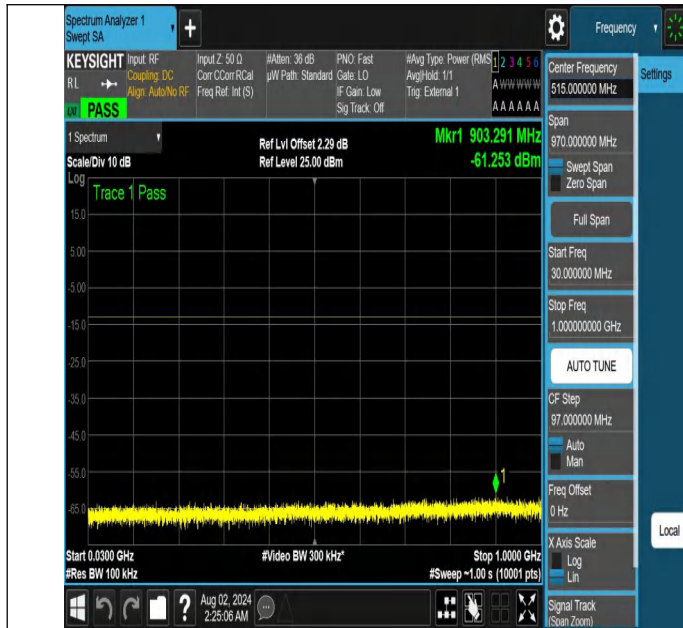

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS

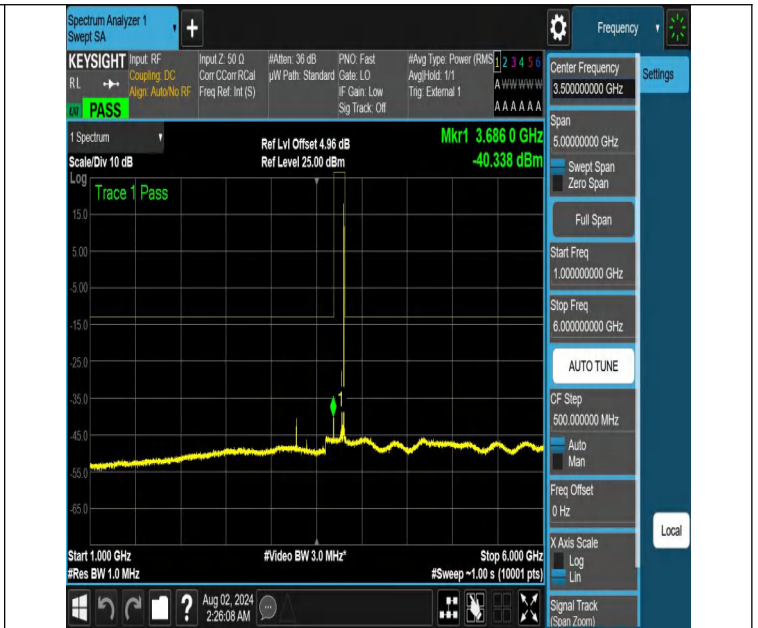

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

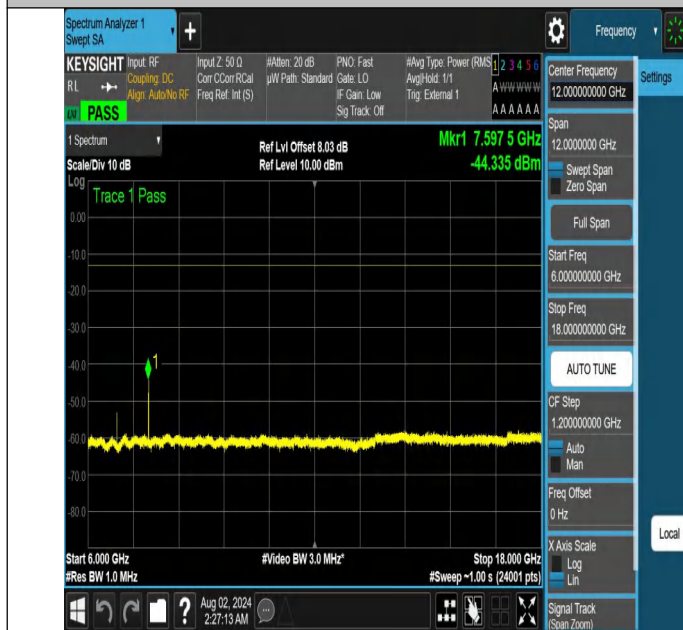

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

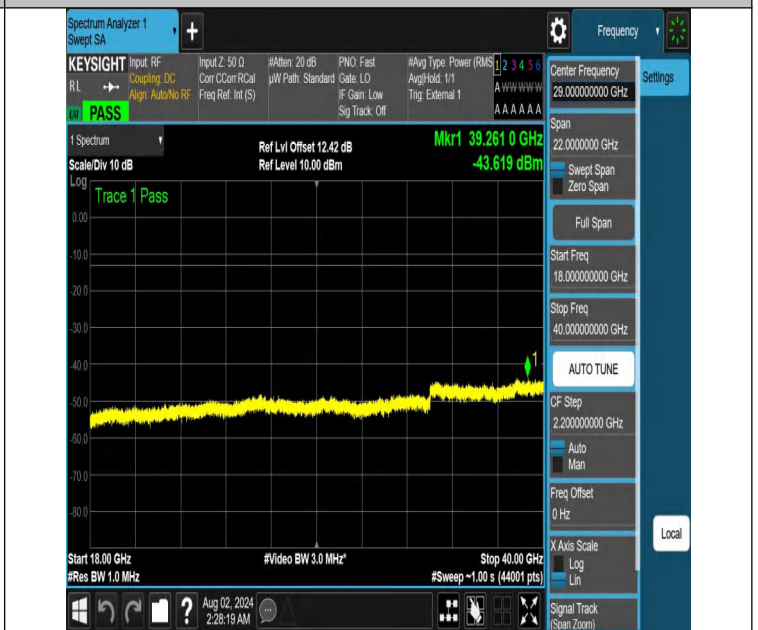

 
NTNV-N78-3700-3800-PC2-30-50-H-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

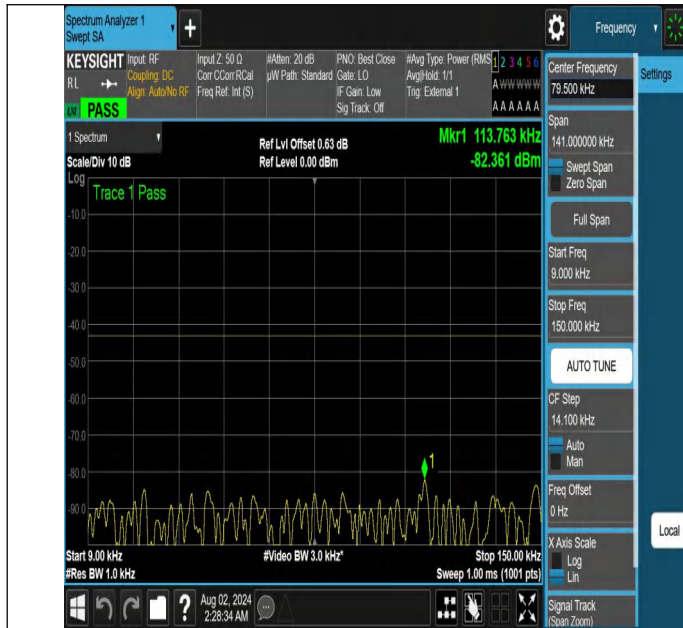

 NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant1-PASS

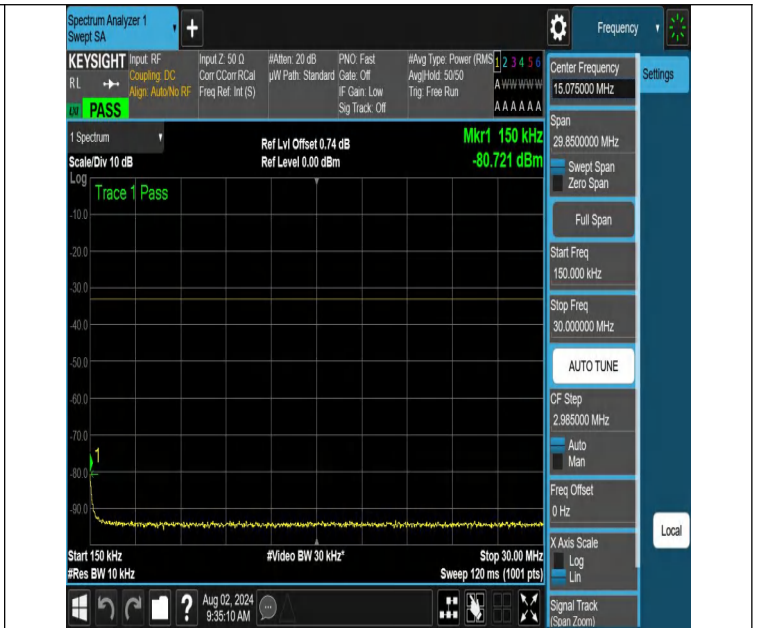

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

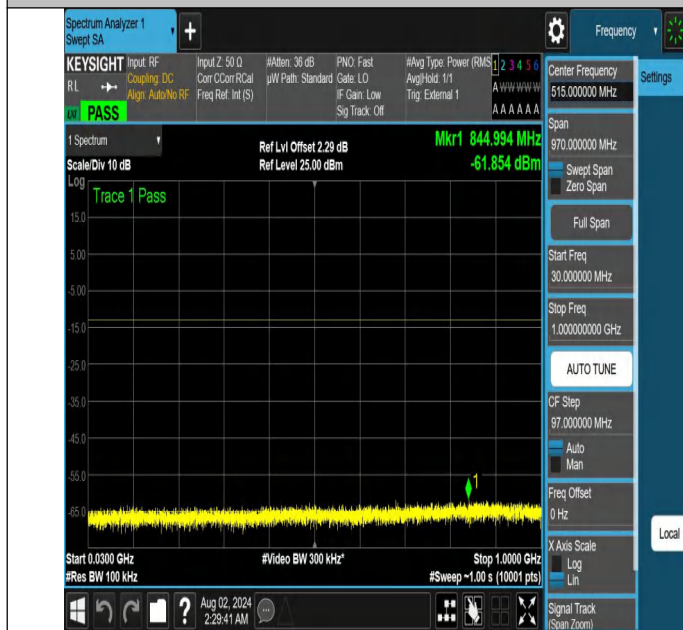


NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant1-PASS

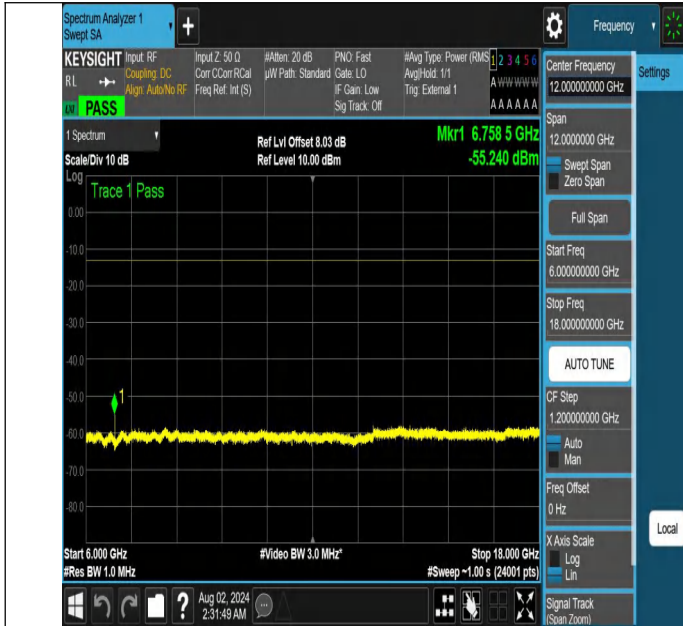

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

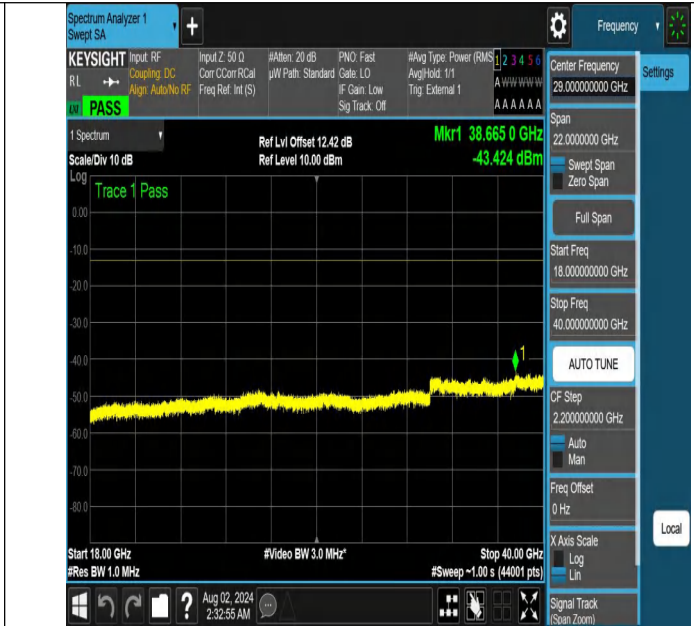

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant1-PASS

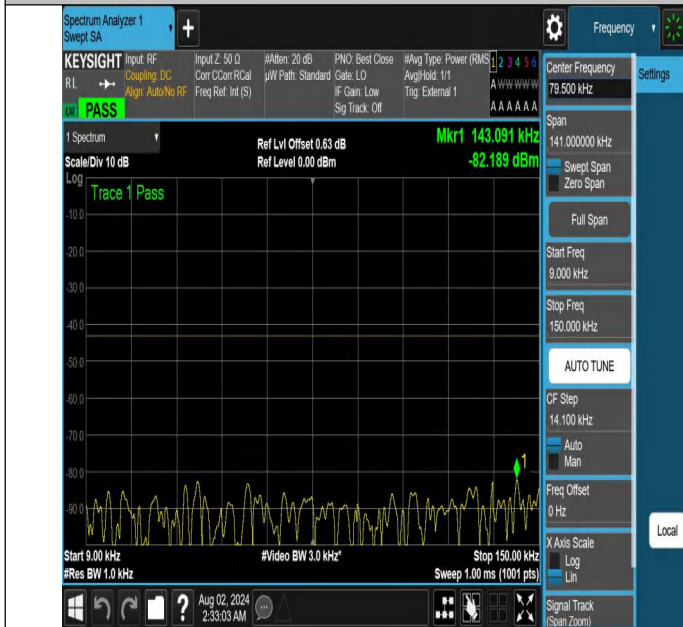

 NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS

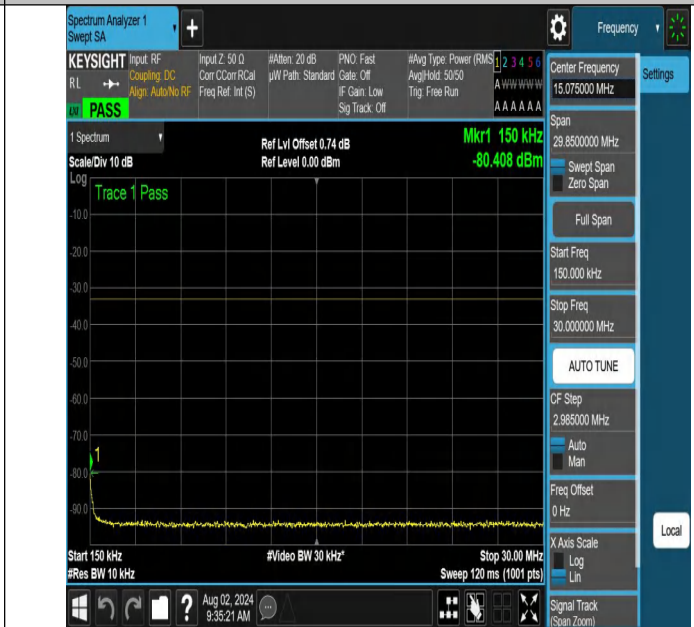

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant1-PASS

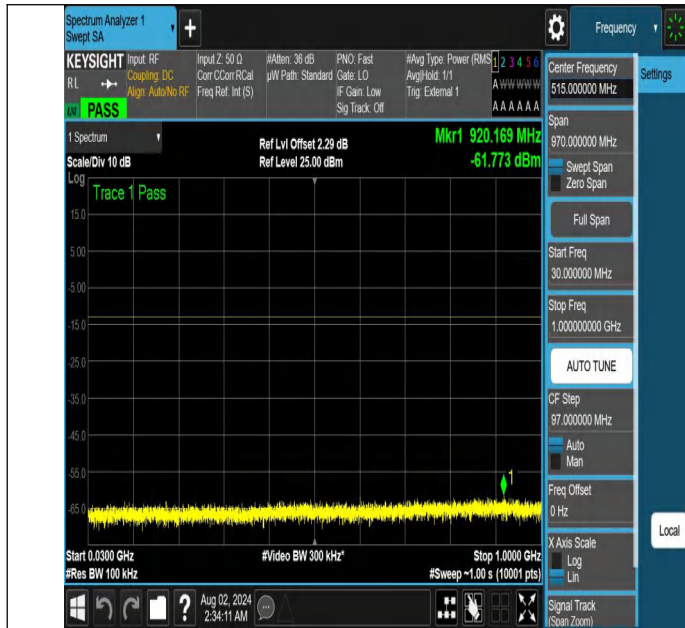


NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-30-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-1000-6000-Ant1-PASS

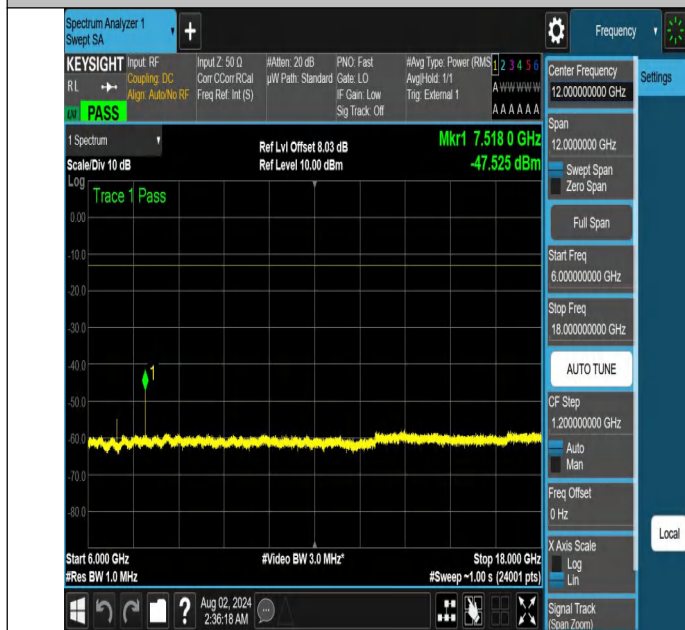

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-6000-18000-Ant1-PASS

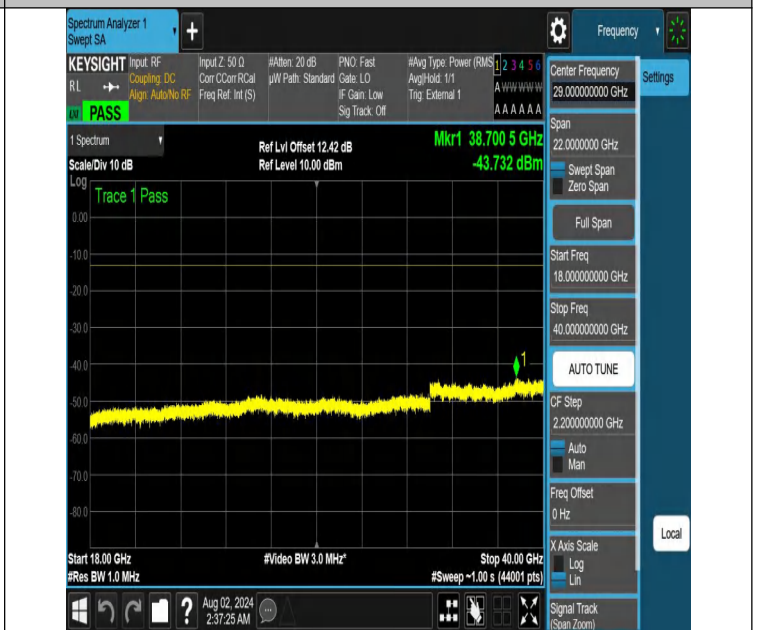

 
NTNV-N78-3700-3800-PC2-30-60-L-CP-QPSK-Edge_1RB_Right-18000-40000-Ant1-PASS

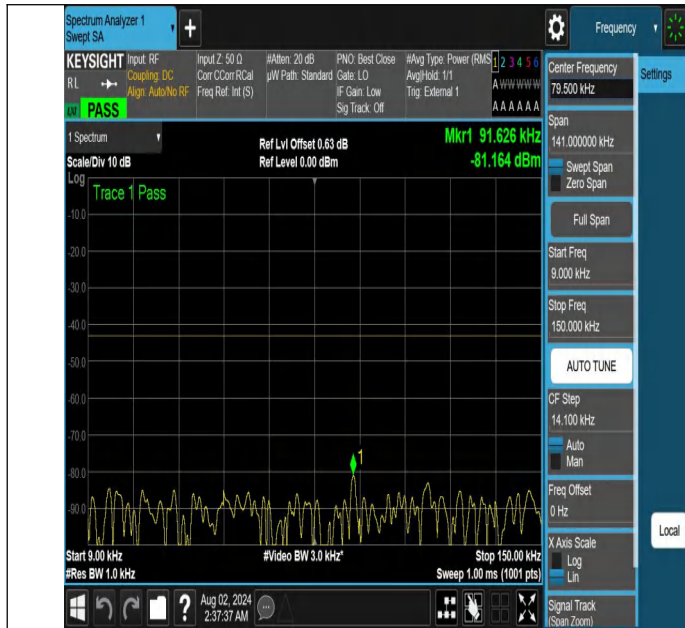

 NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant1-PASS

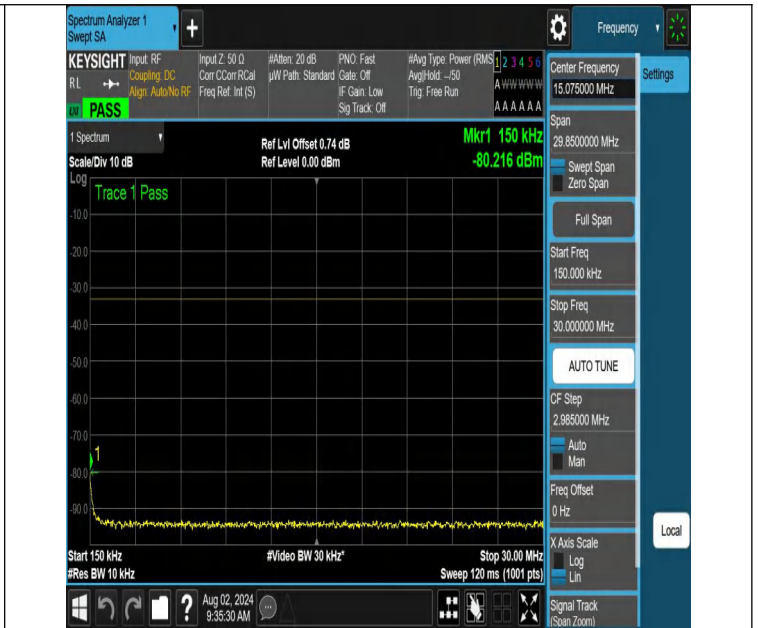

 
NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant1-PASS

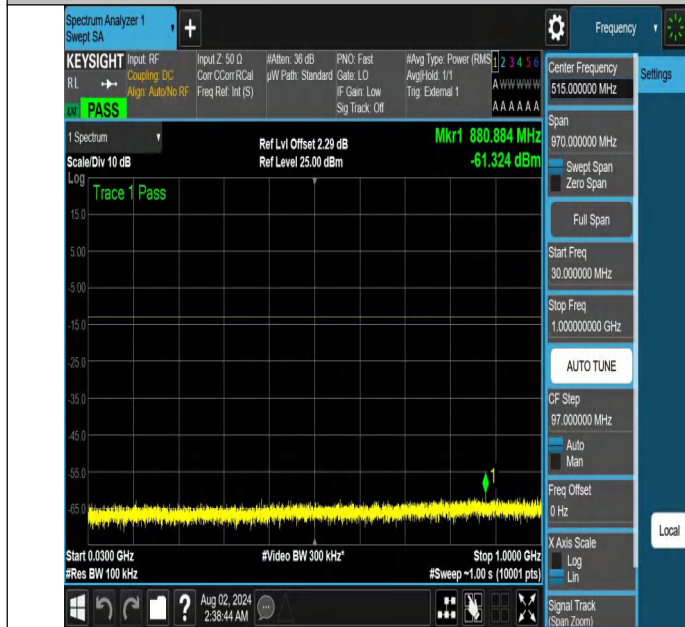


NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant1-PASS



 
NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant1-PASS

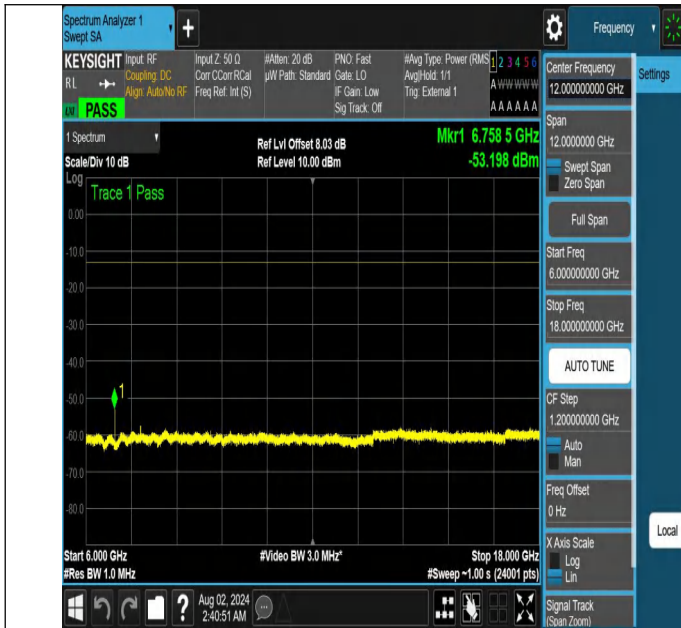

 NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant1-PASS

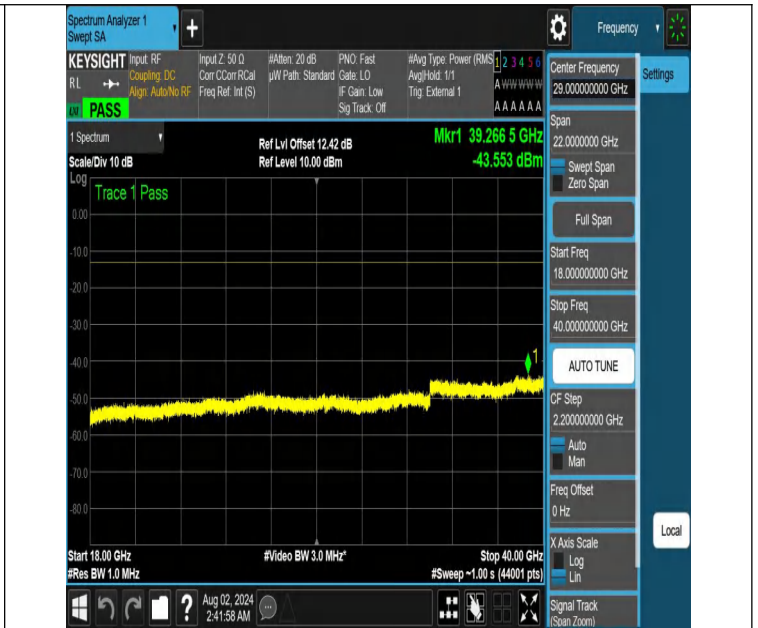

 NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant1-PASS

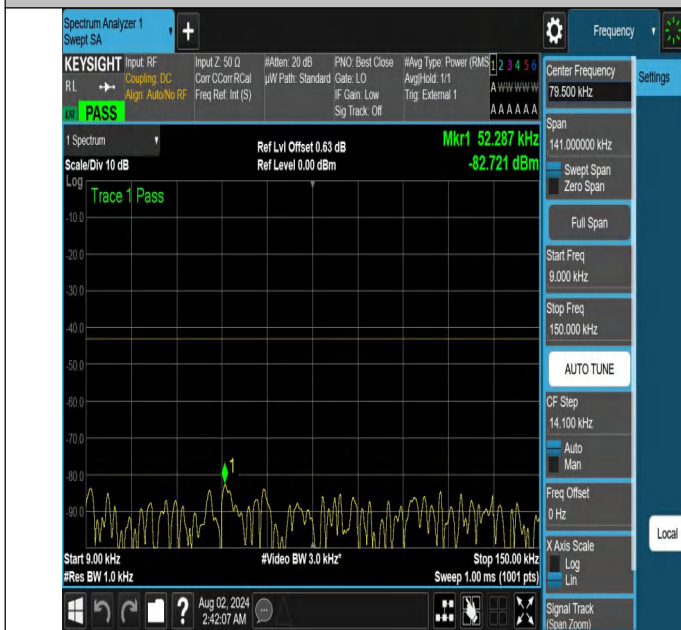

NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant1-PASS



NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant1-PASS