 


Conducted Spurious Emission for MIMO ANT2

 
Test Graphs

Note: For UL MIMO mode, the conducted BE/Spurious are tested at single antenna port and add $10 \cdot \log(\text{NANT})$ according to KDB 662911 D01. The result of the single antenna port test is below the limit by more than 3dB margin, so the results of Ant1+Ant2 also meet the limit requirements.

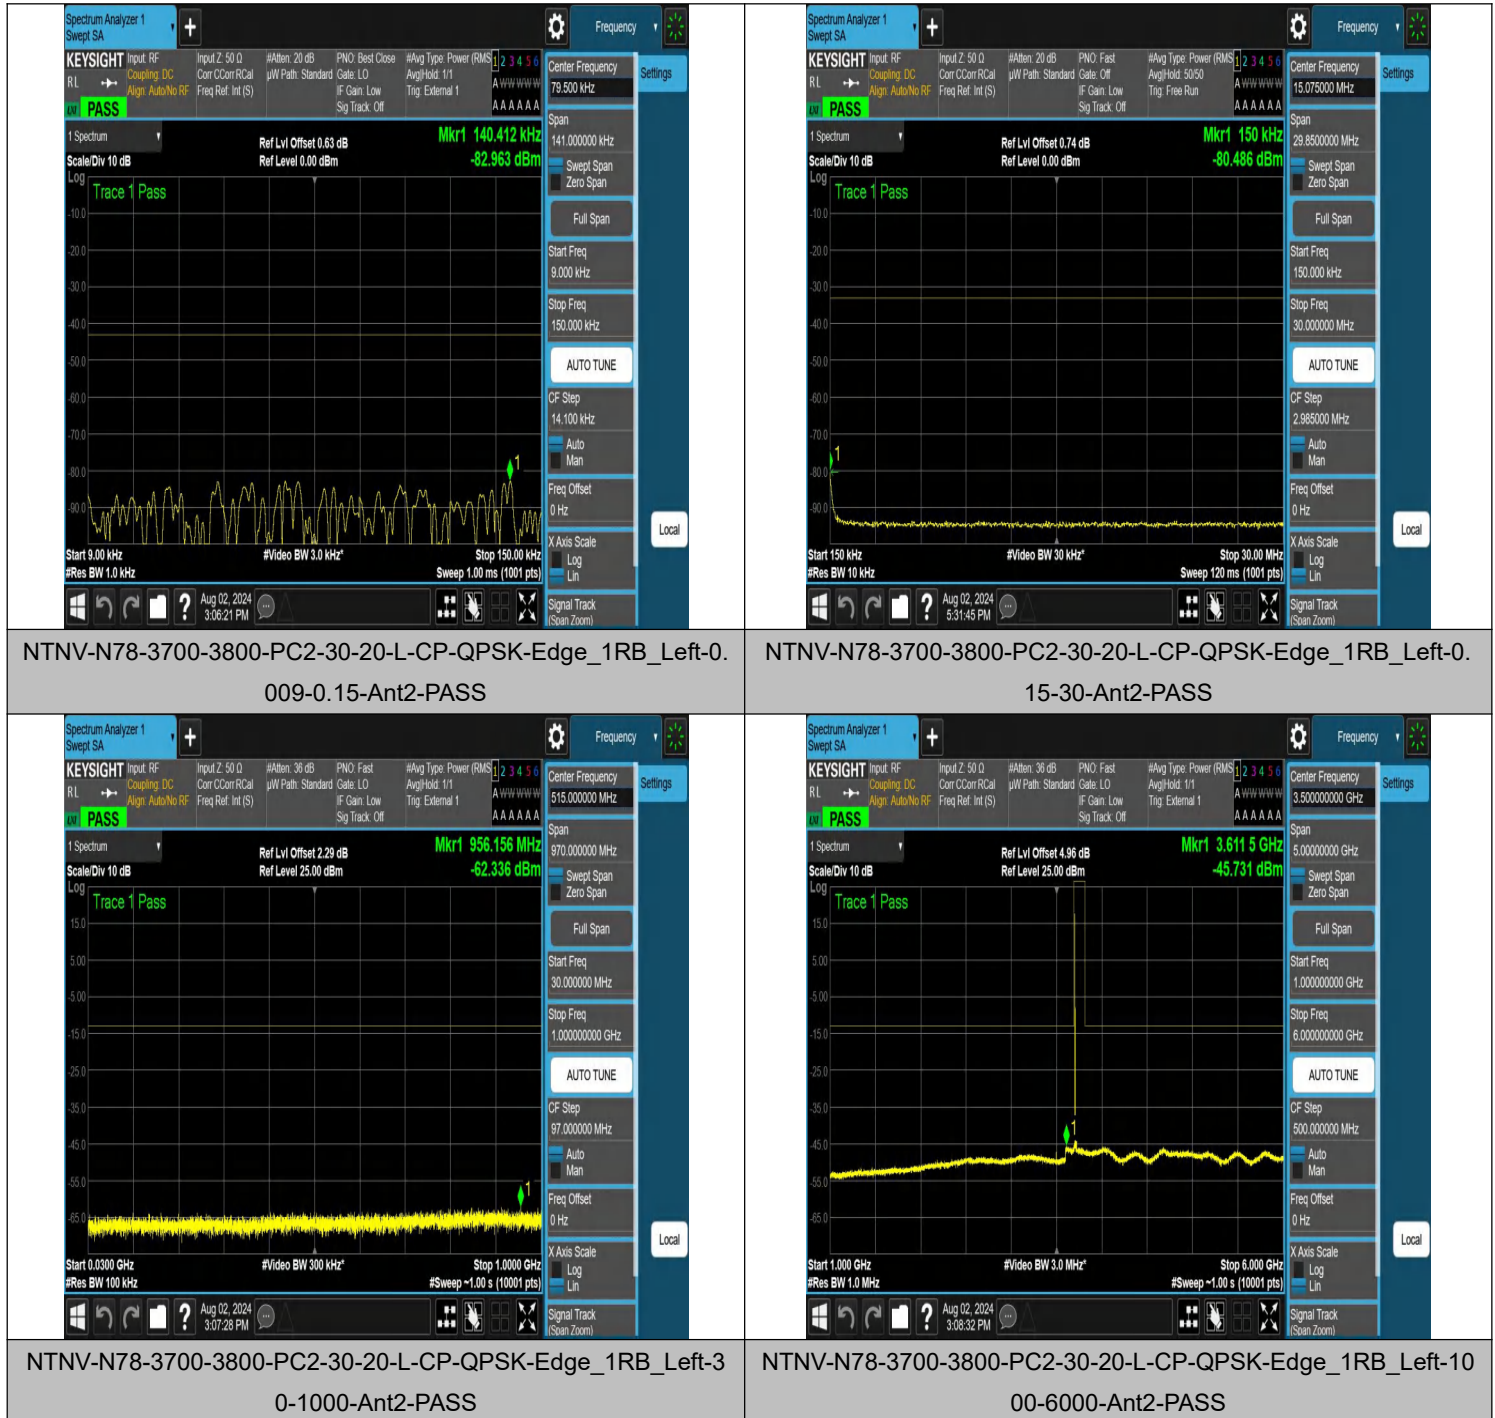




NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

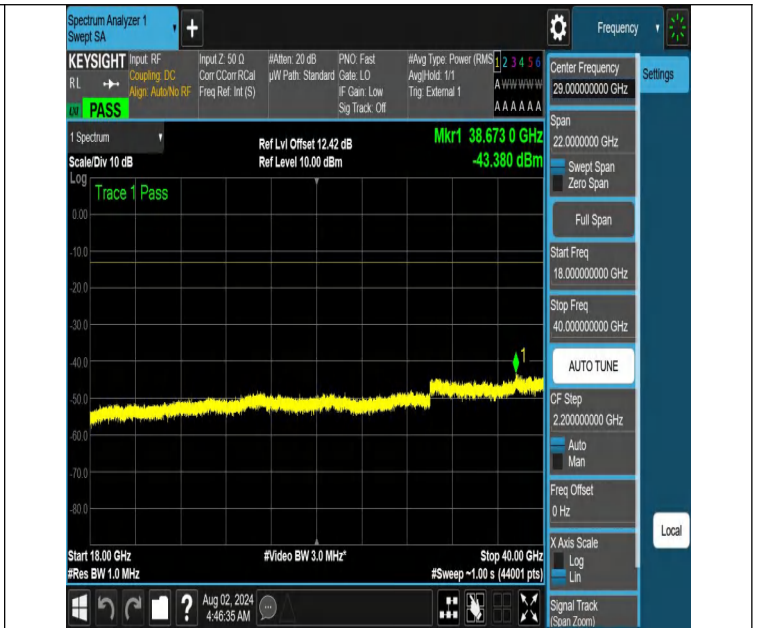

 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

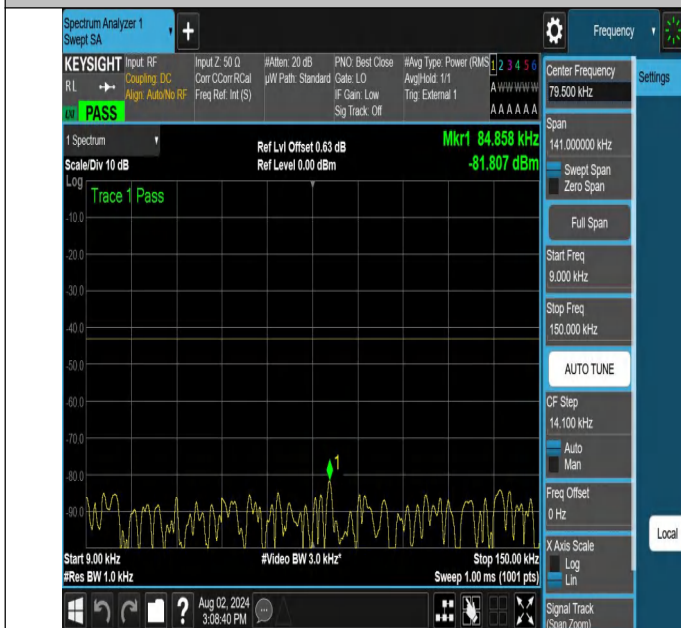


NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant2-PASS

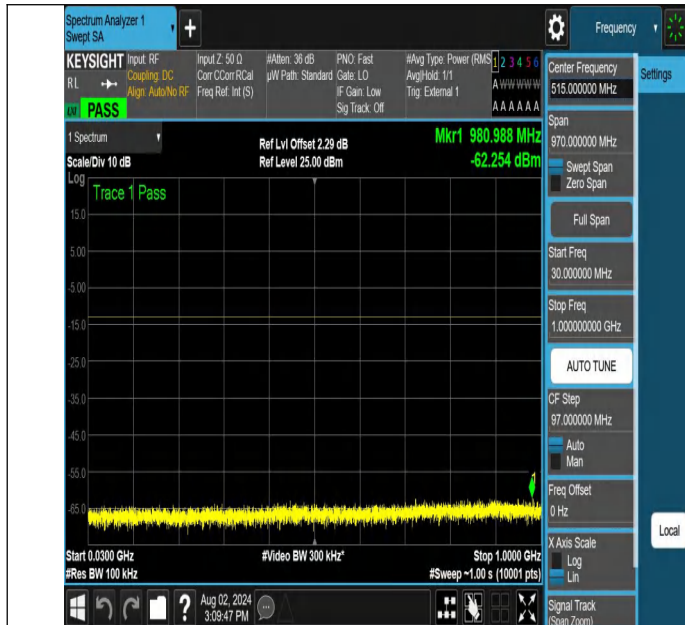

 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

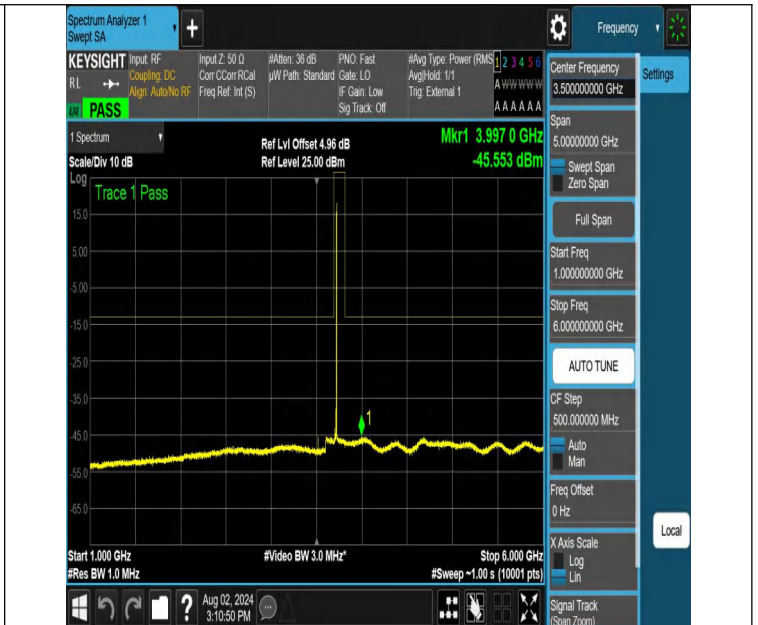

 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

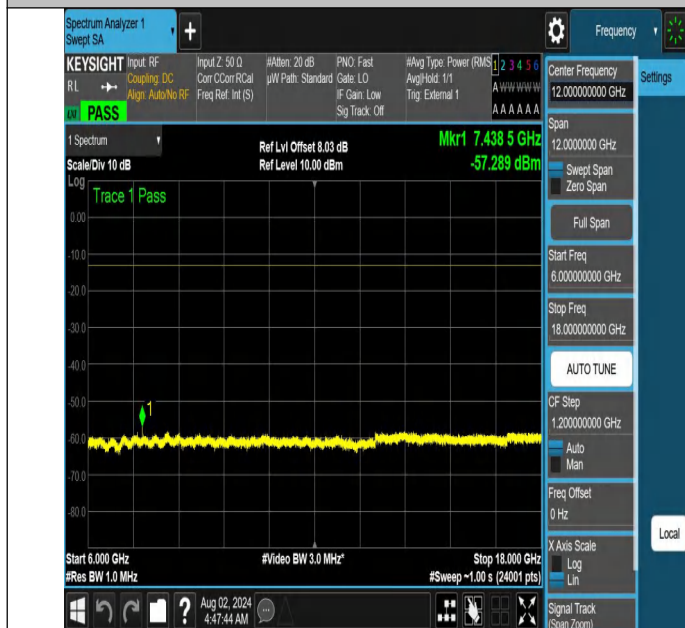

 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

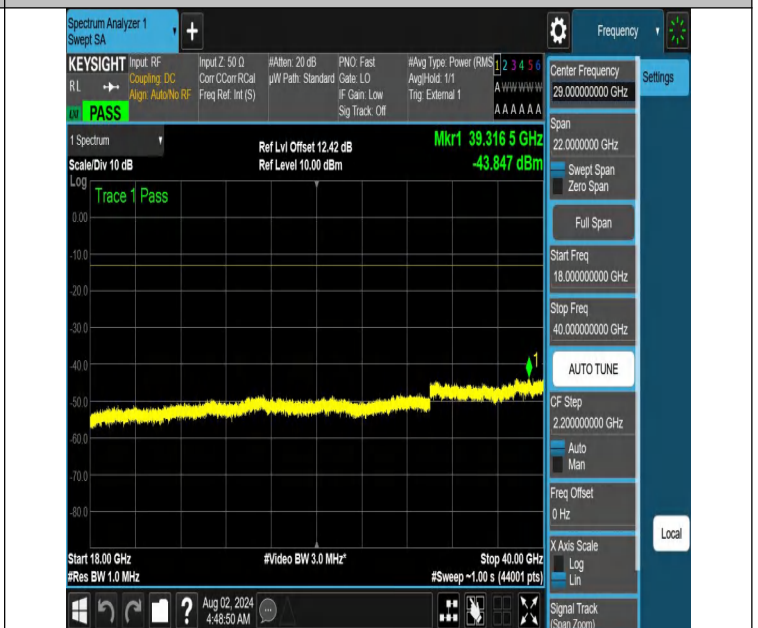

 
NTNV-N78-3700-3800-PC2-30-20-L-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

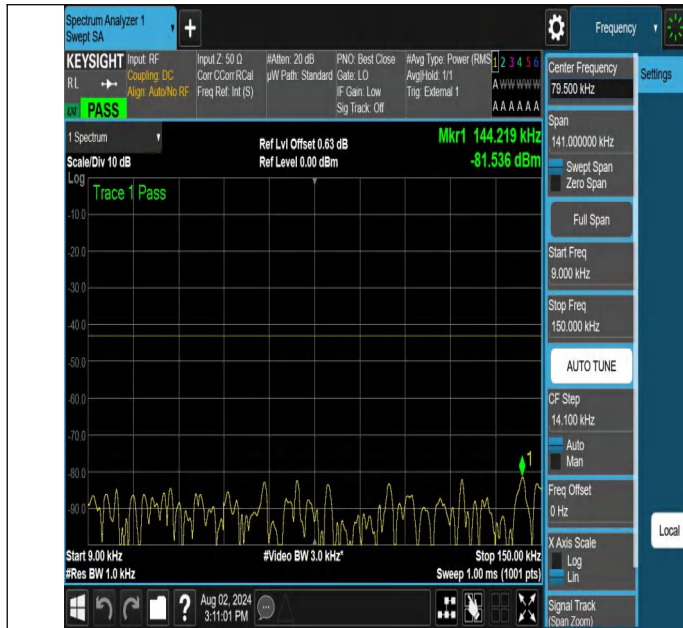

 NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

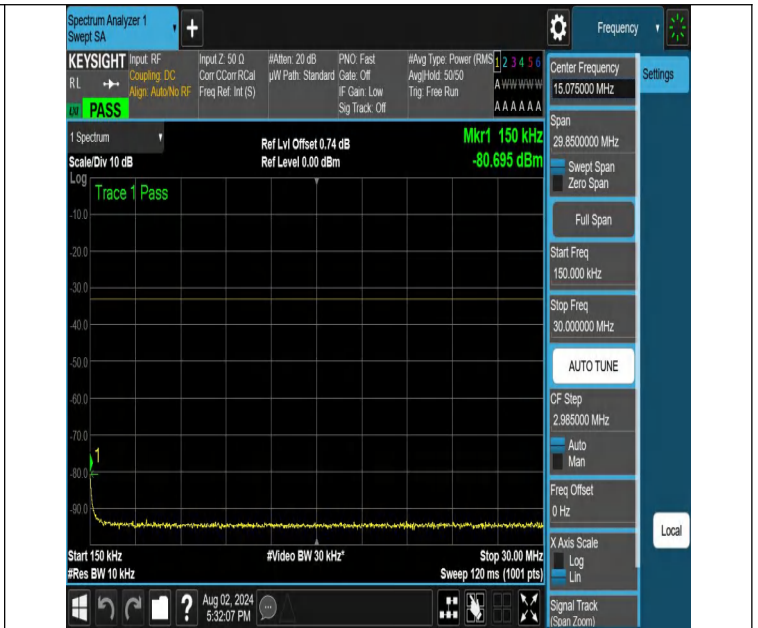

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

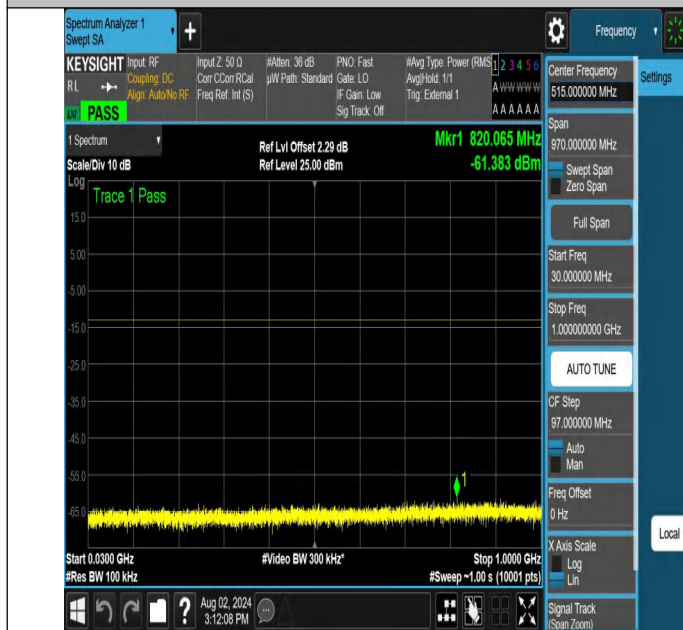


NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant2-PASS

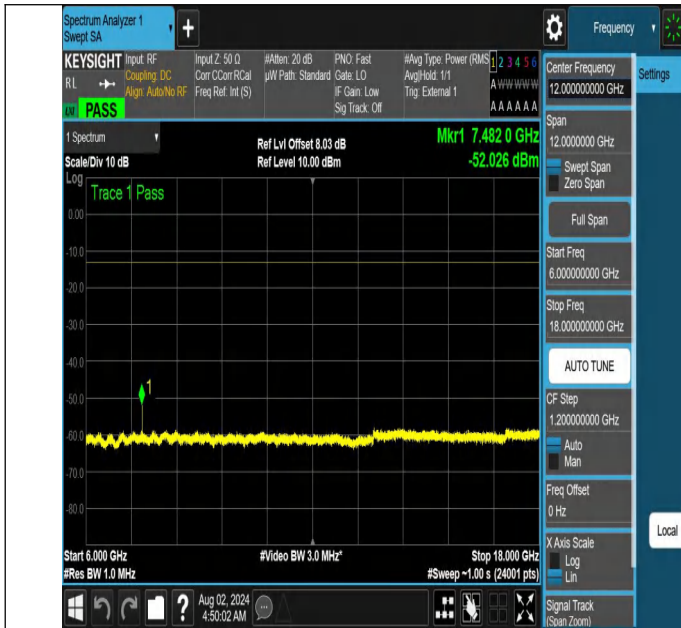

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

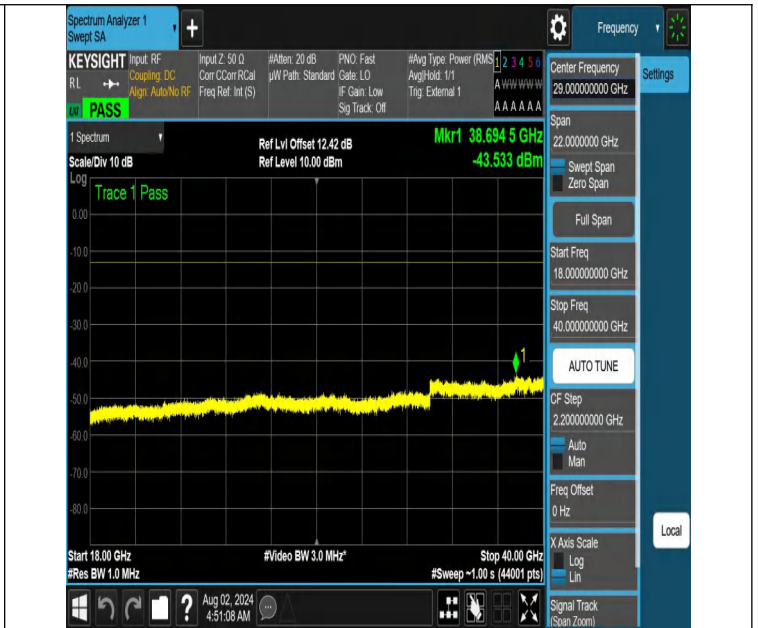

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant2-PASS

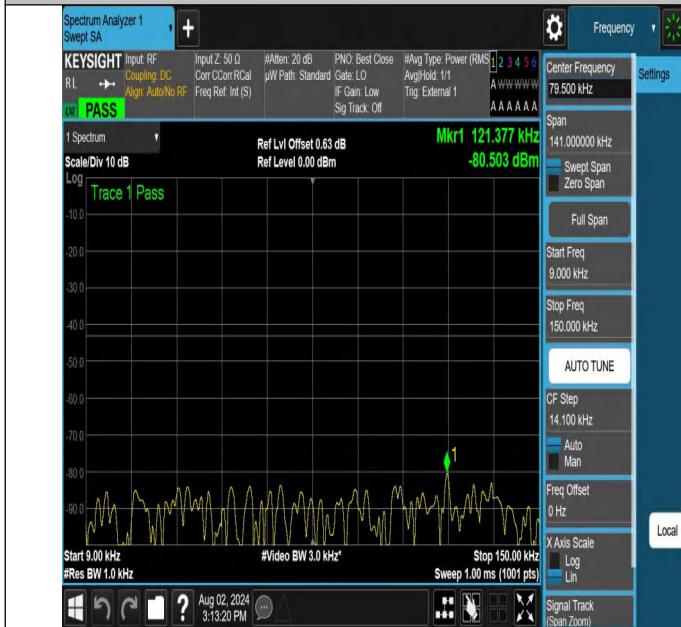

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS

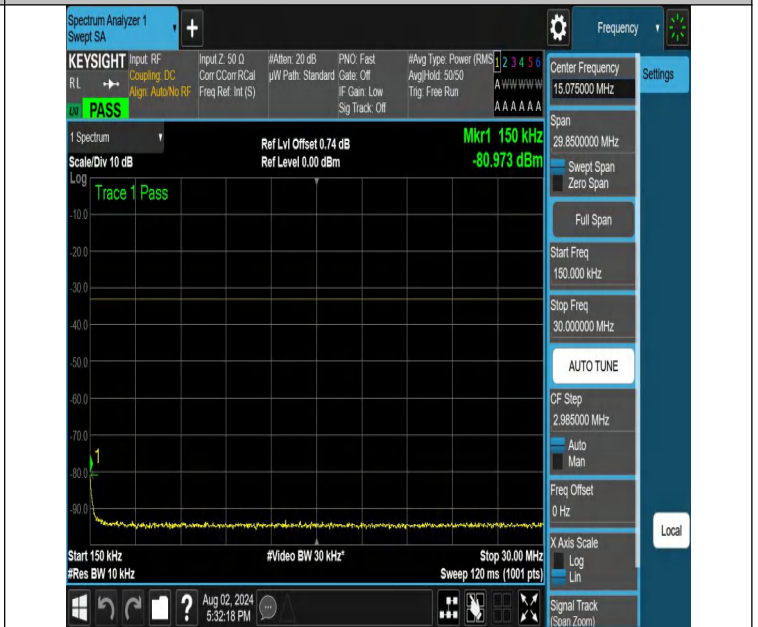

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

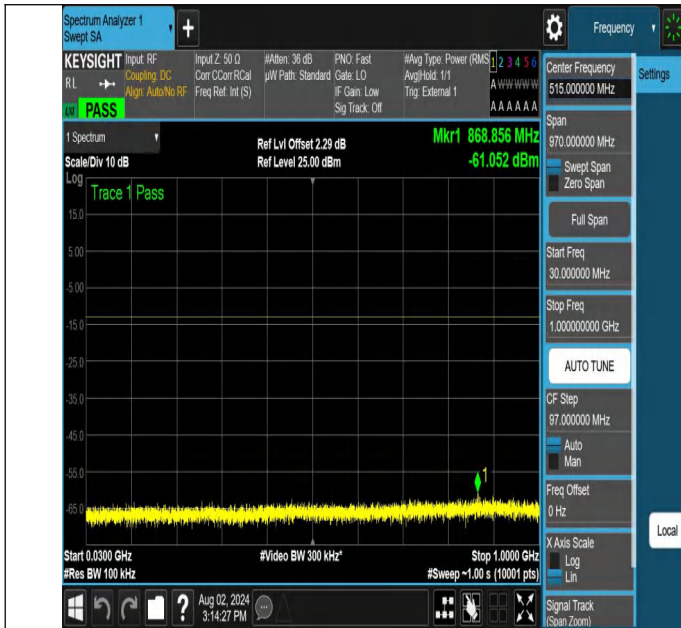

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
30-1000-Ant2-PASS

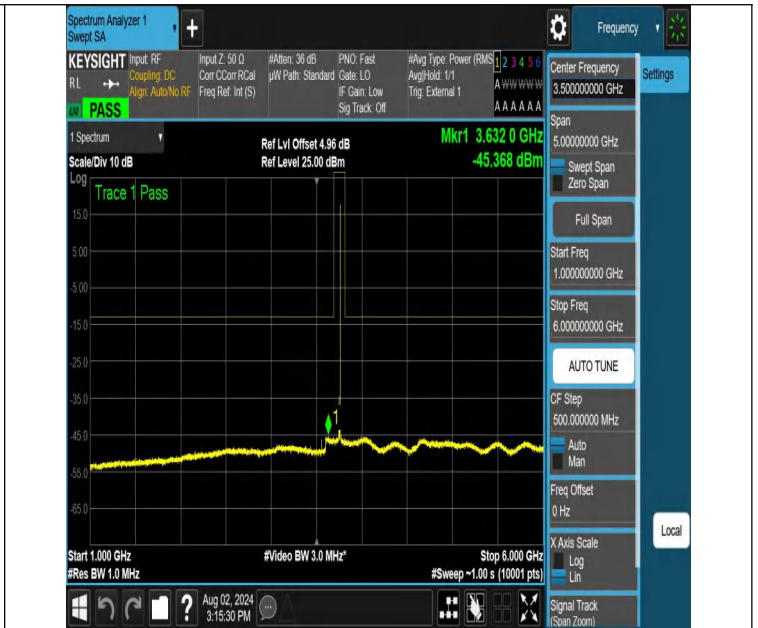

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
1000-6000-
Ant2-PASS

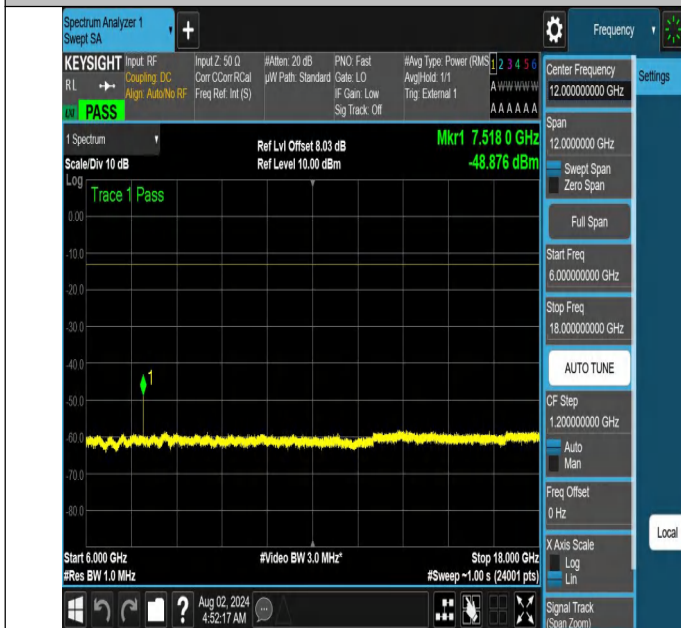

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
6000-18000-Ant2-PASS

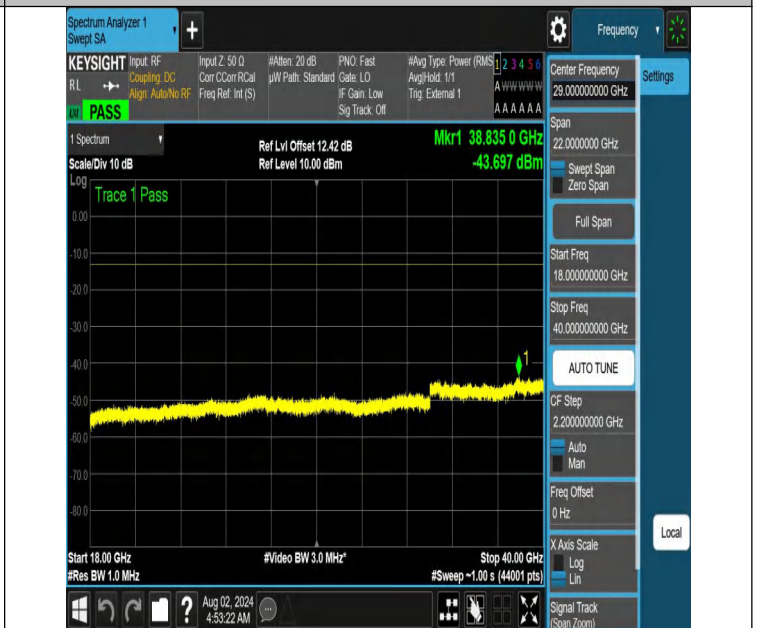

 
NTNV-N78-3700-3800-PC2-30-20-M-CP-QPSK-Edge_1RB_Right-
18000-40000-Ant2-PASS

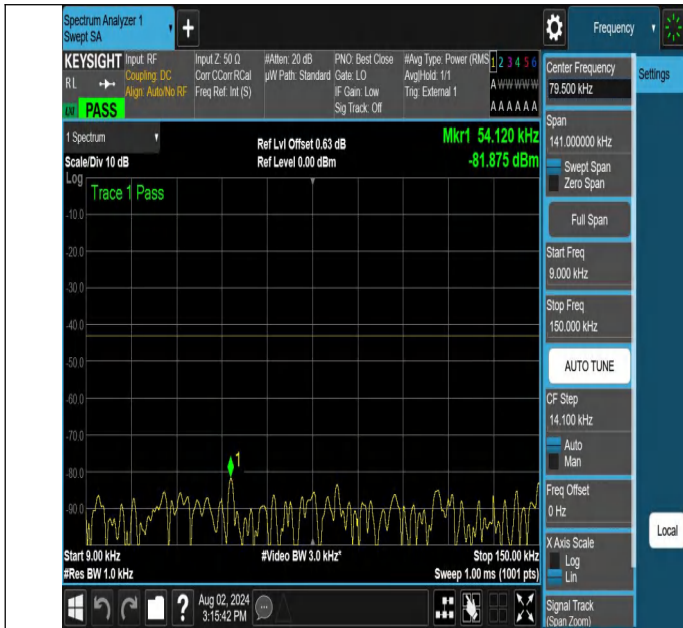

 NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

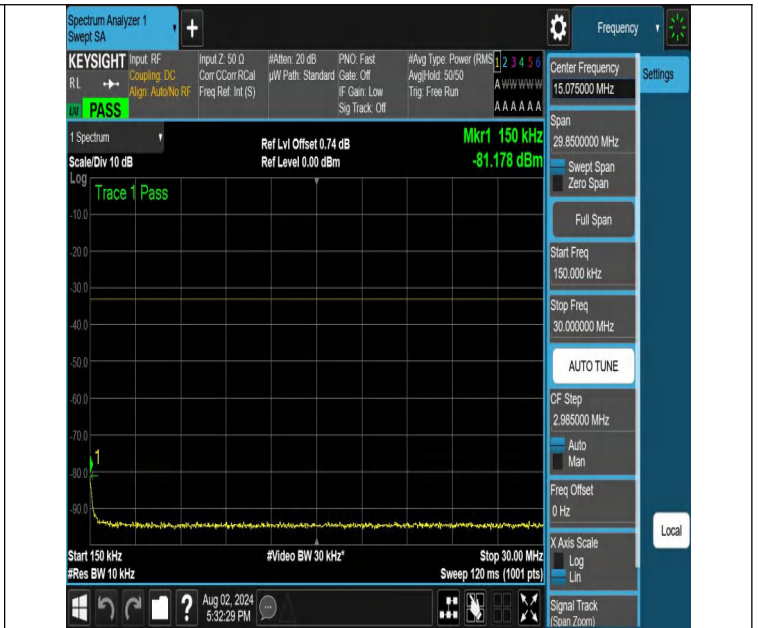

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

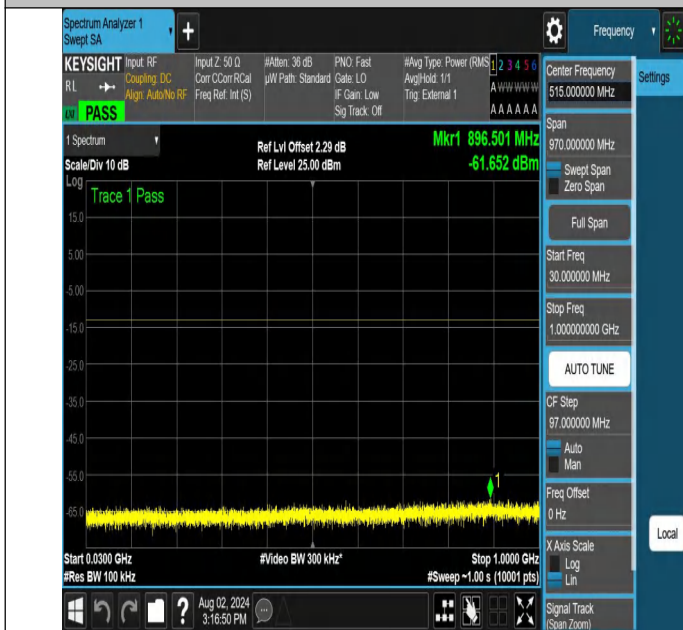


NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

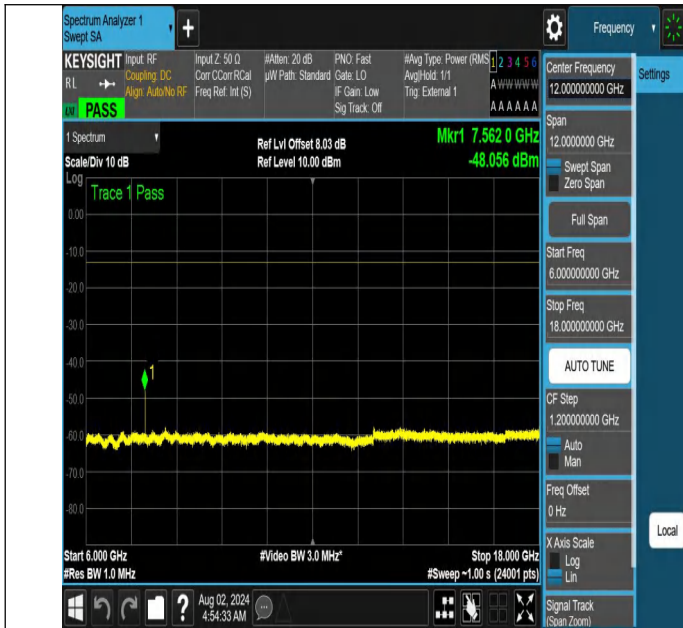

 NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

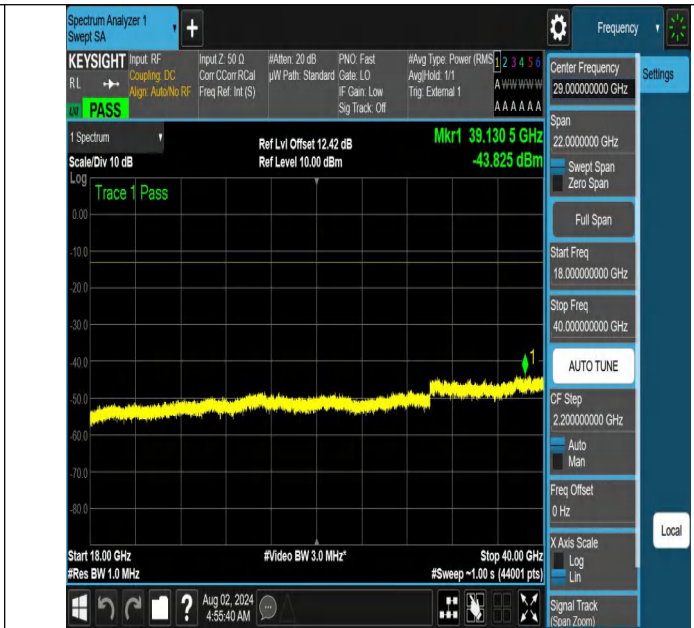

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

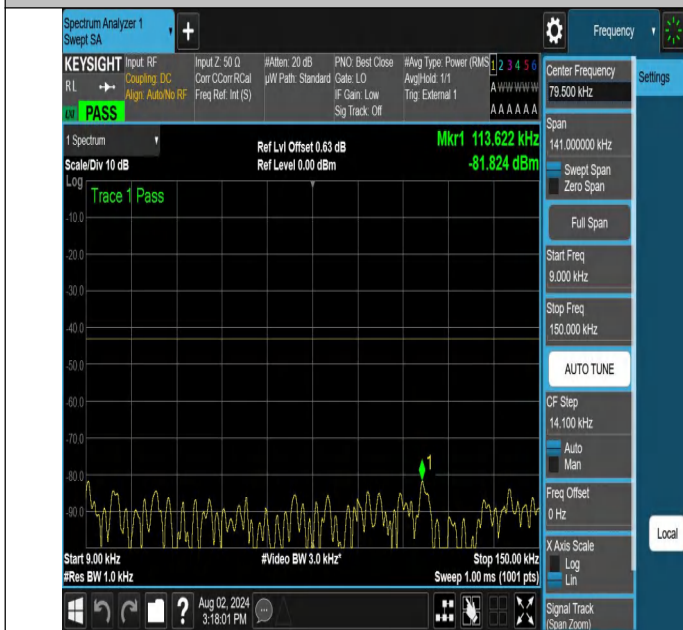


NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

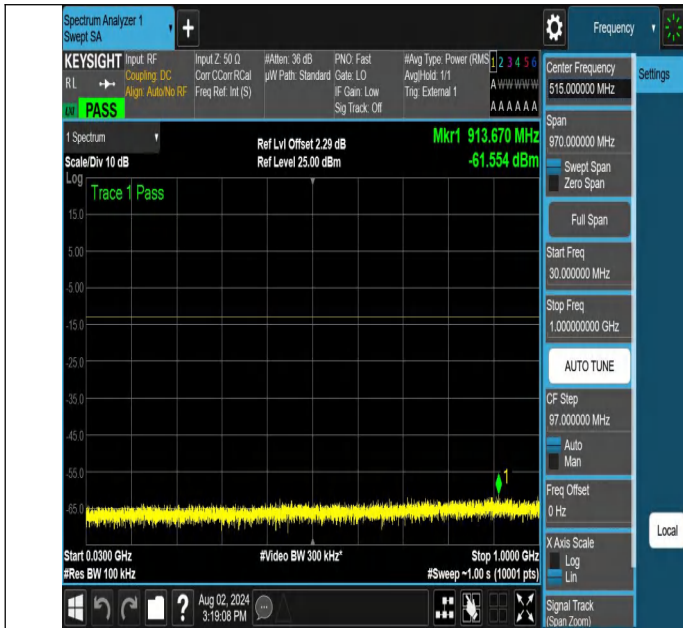

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

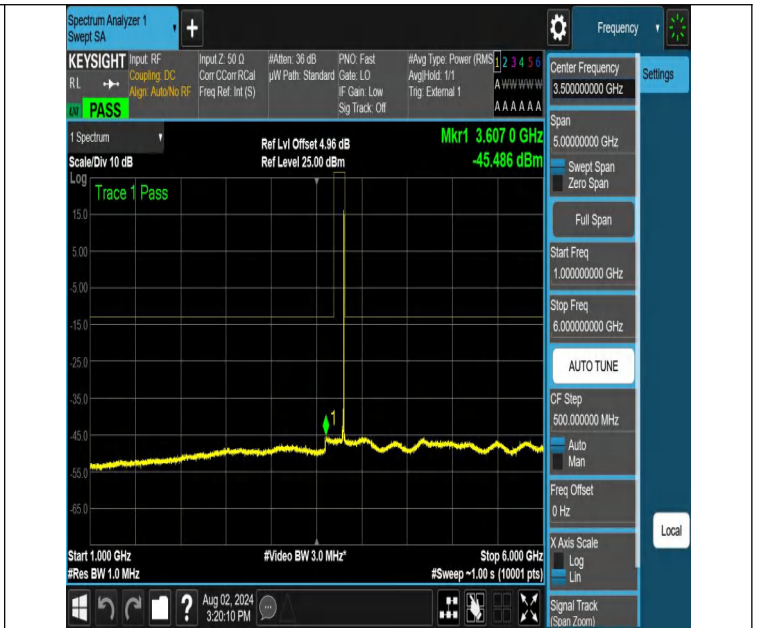

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

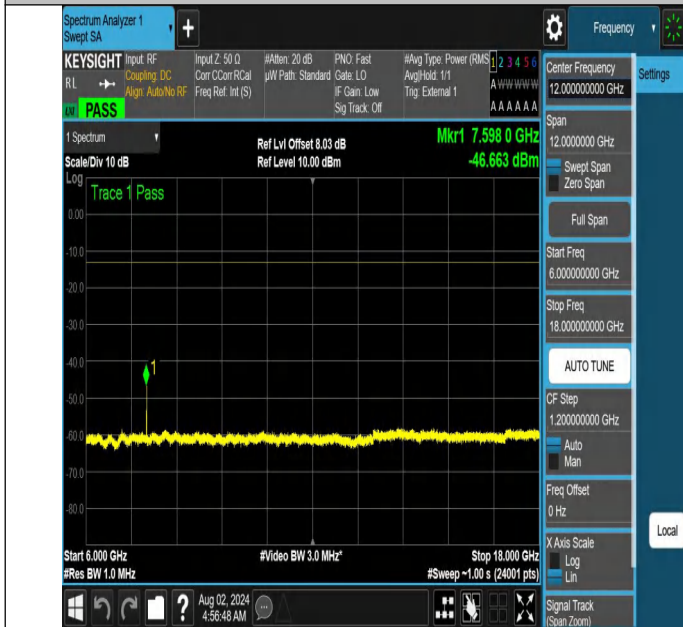

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

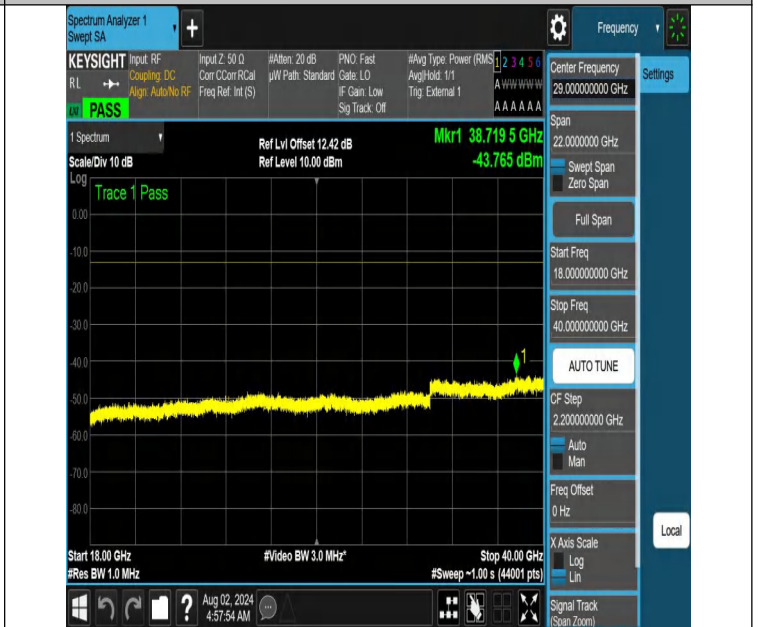

 
NTNV-N78-3700-3800-PC2-30-20-H-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

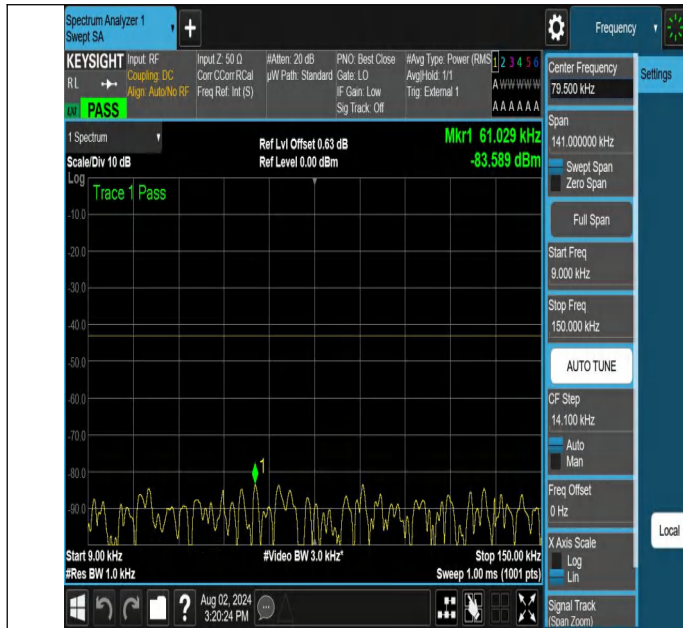

 NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant2-PASS

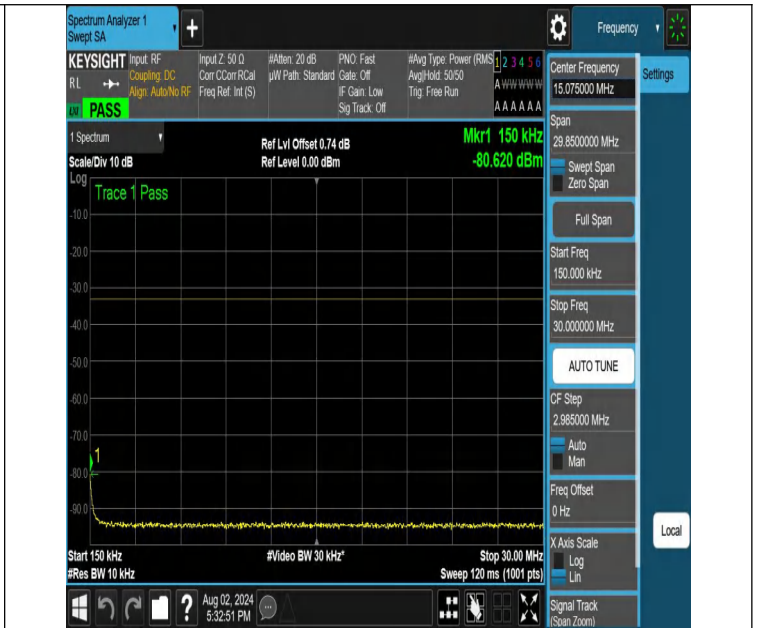

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

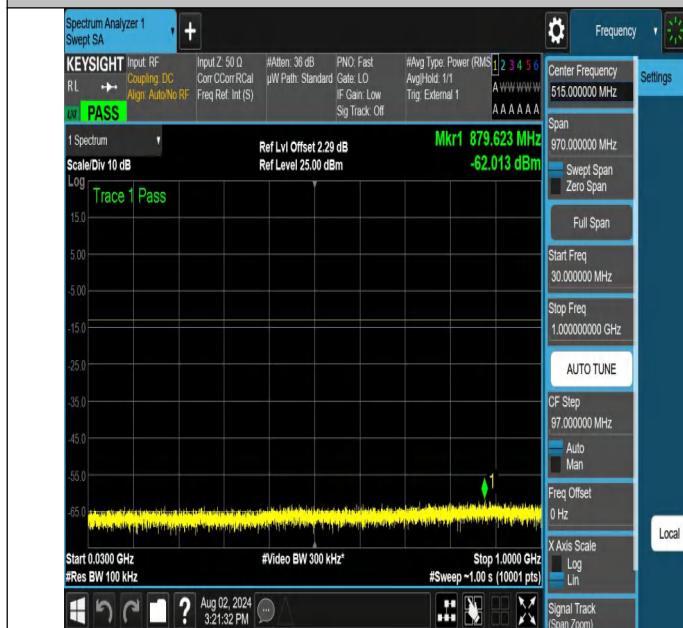


NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

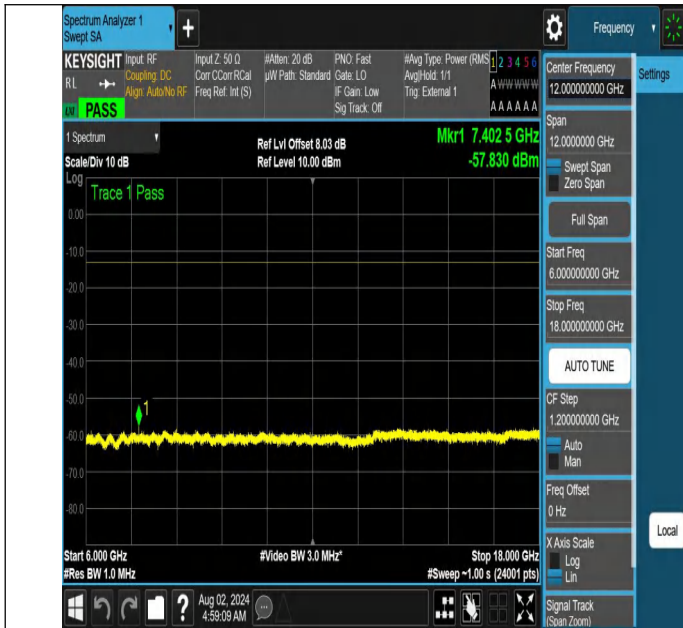

 NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

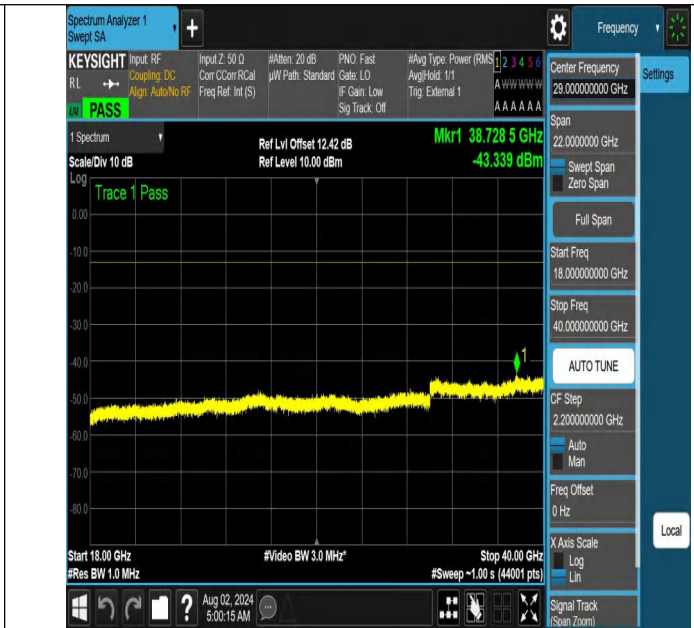

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

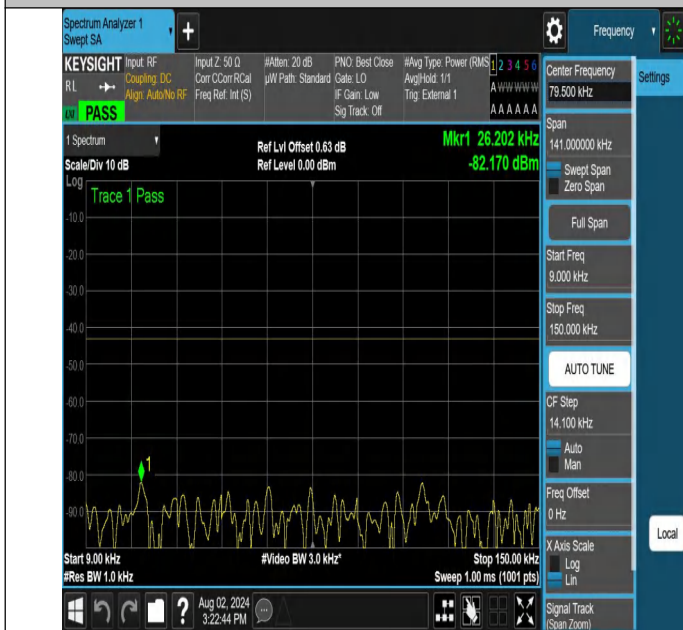


NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant2-PASS

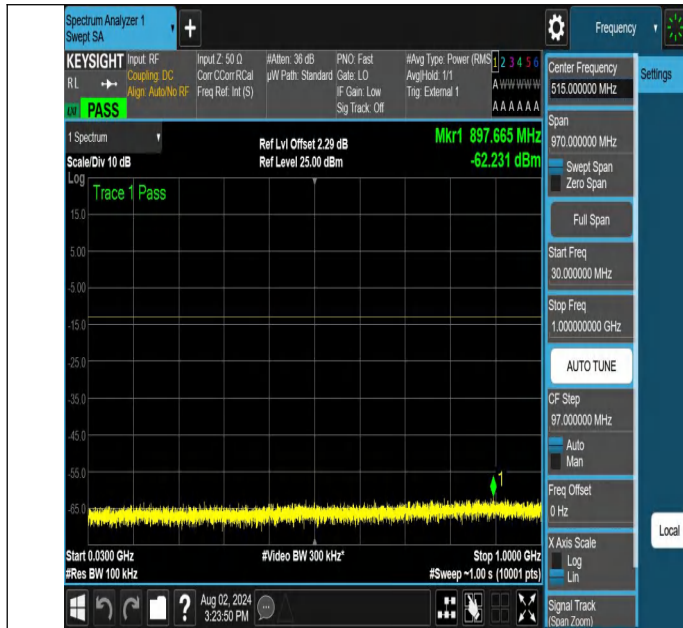

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

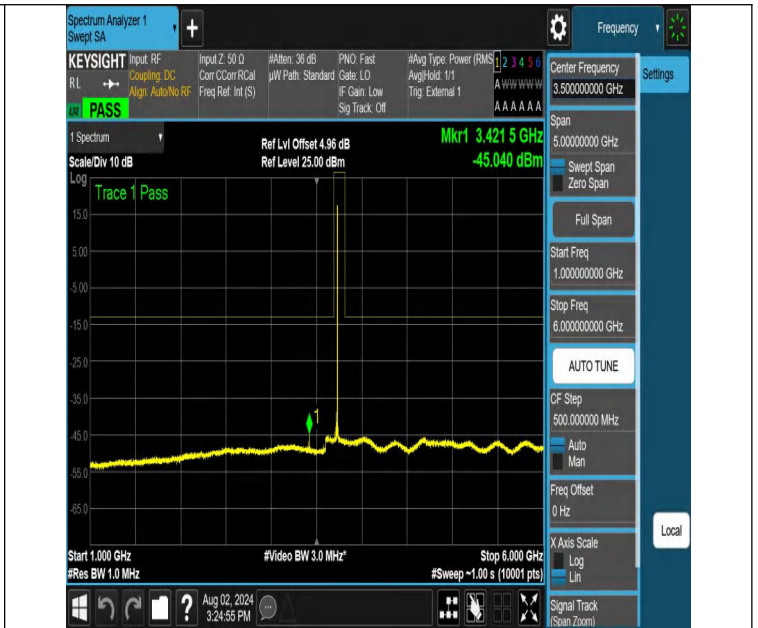

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

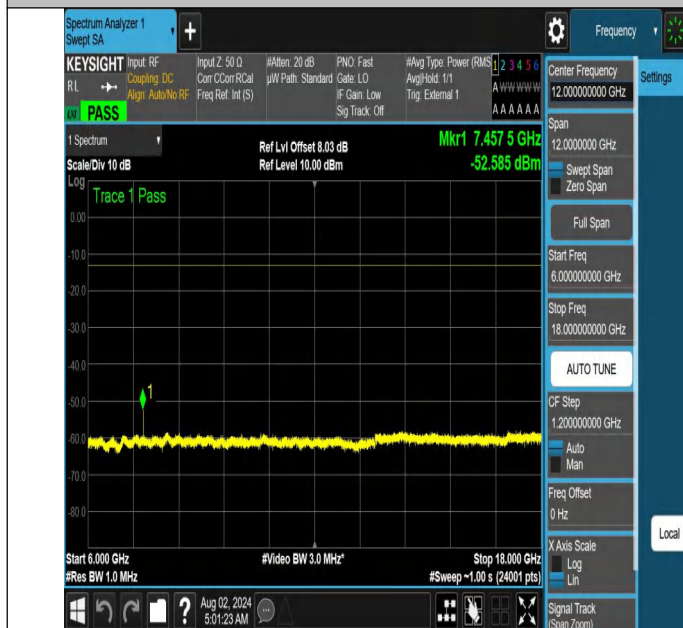

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

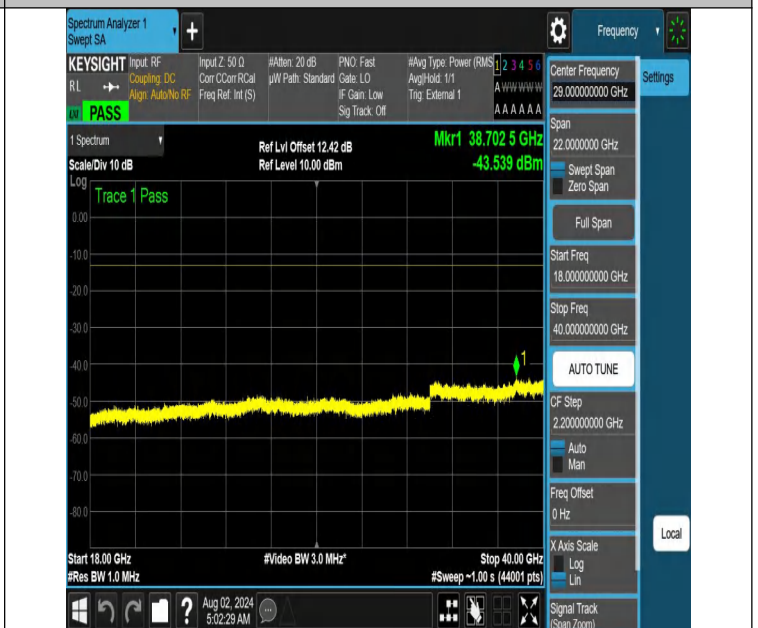

 
NTNV-N78-3700-3800-PC2-30-30-L-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

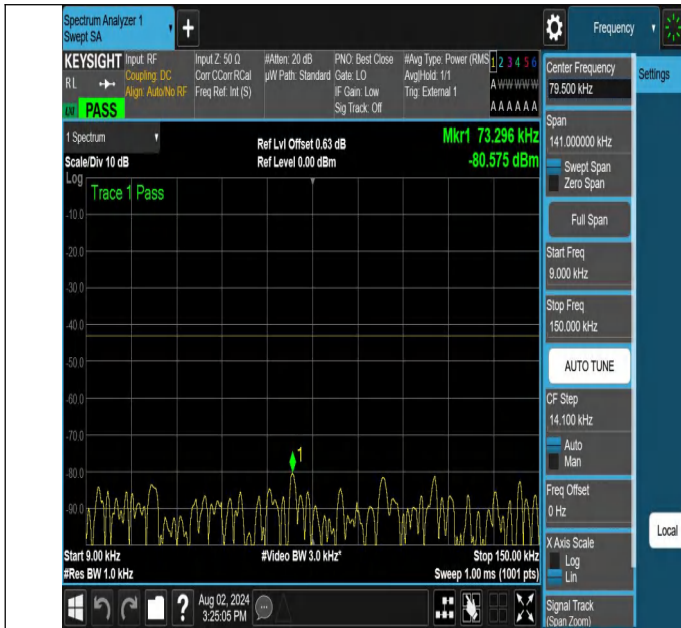

 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

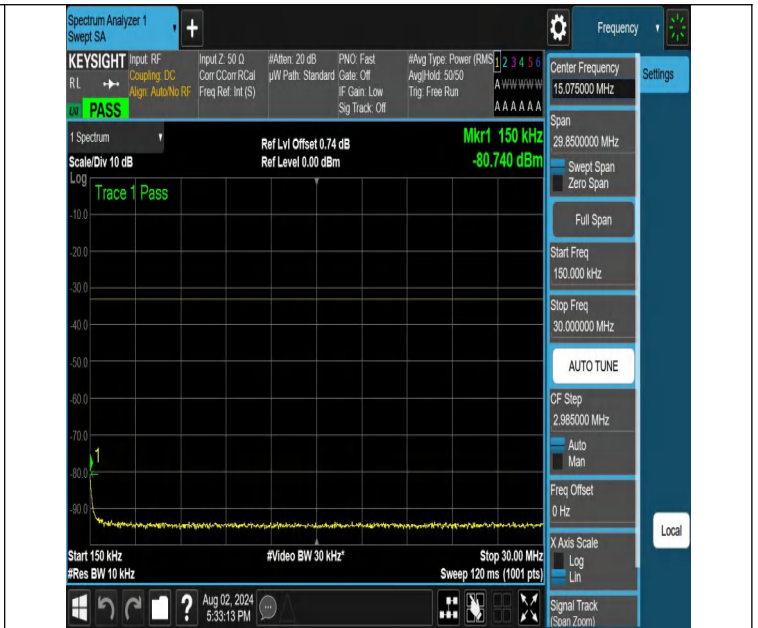

 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

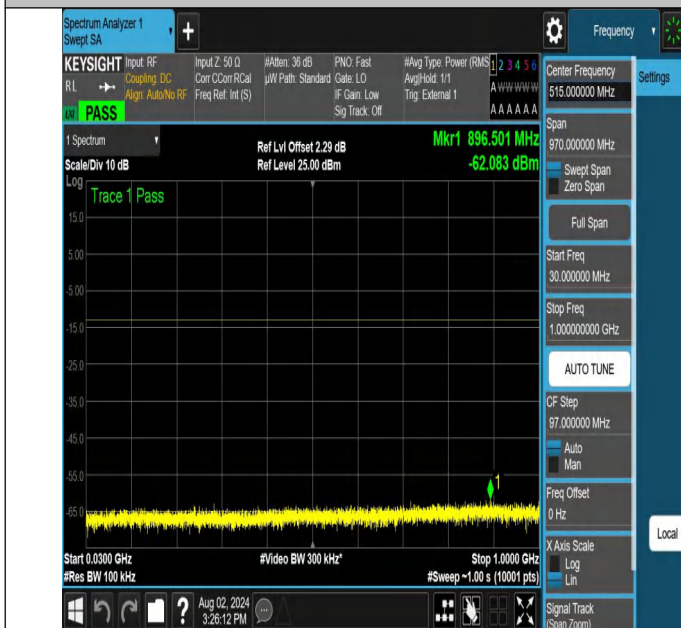

 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS

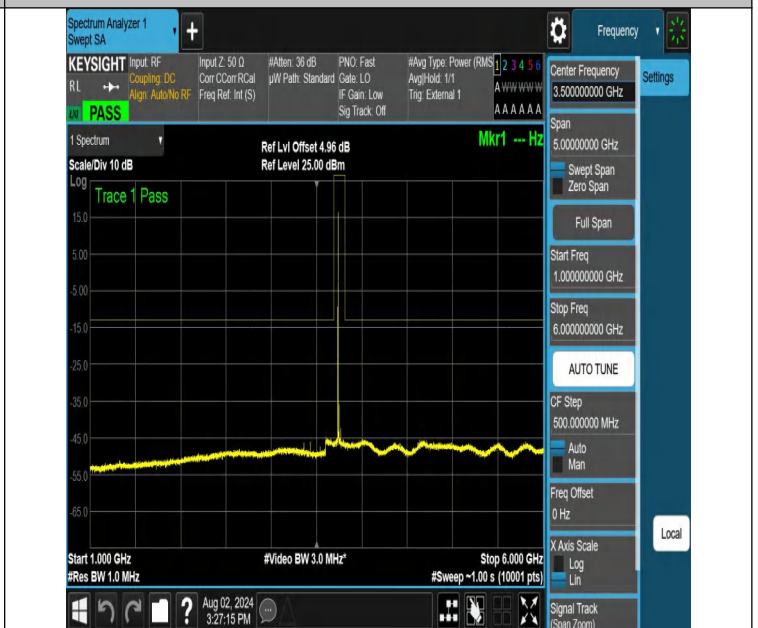

 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant2-PASS

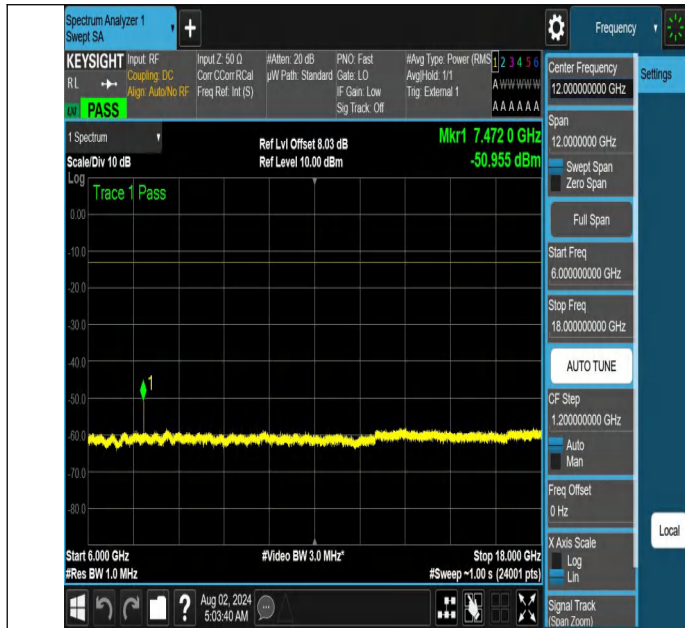

 NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

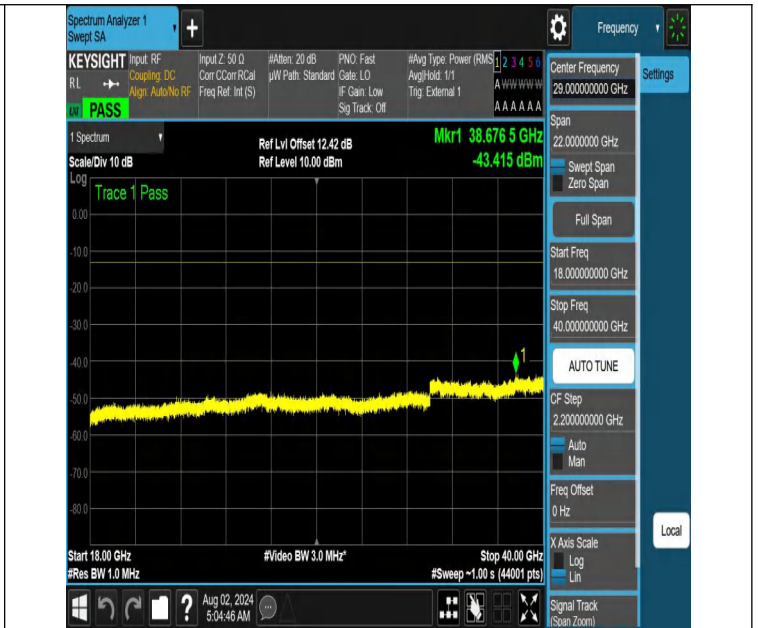

 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant2-PASS

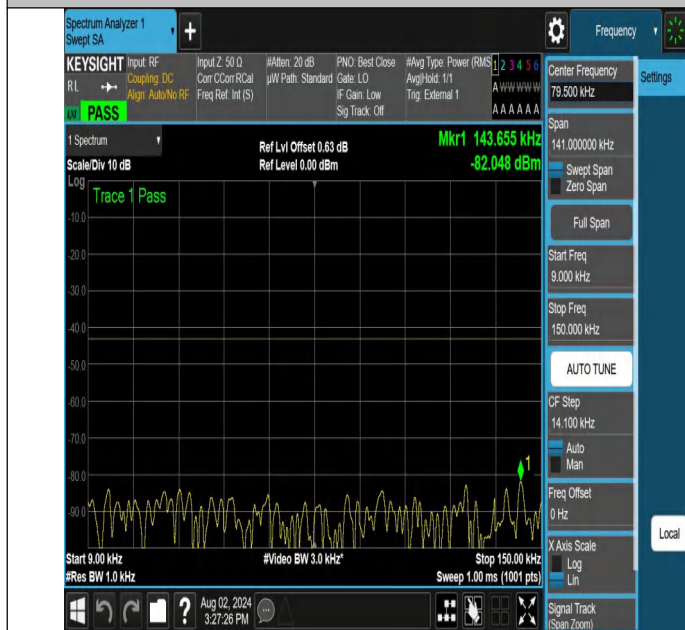


NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

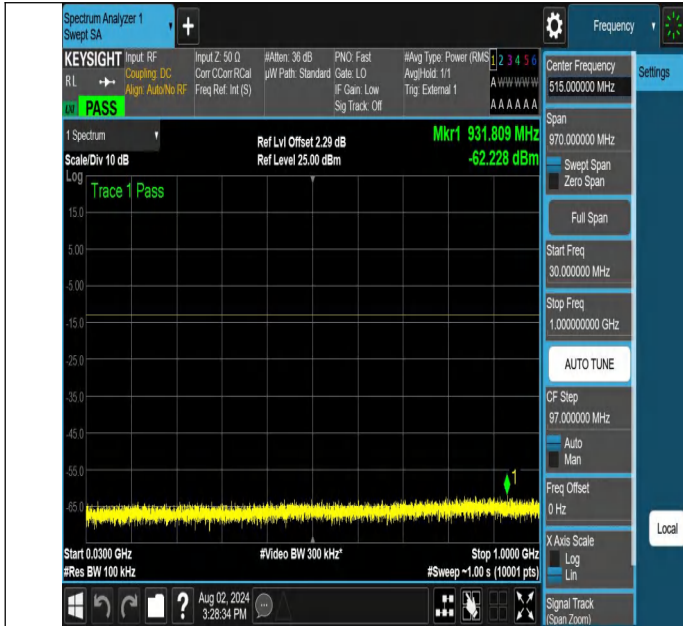

 
NTVN-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

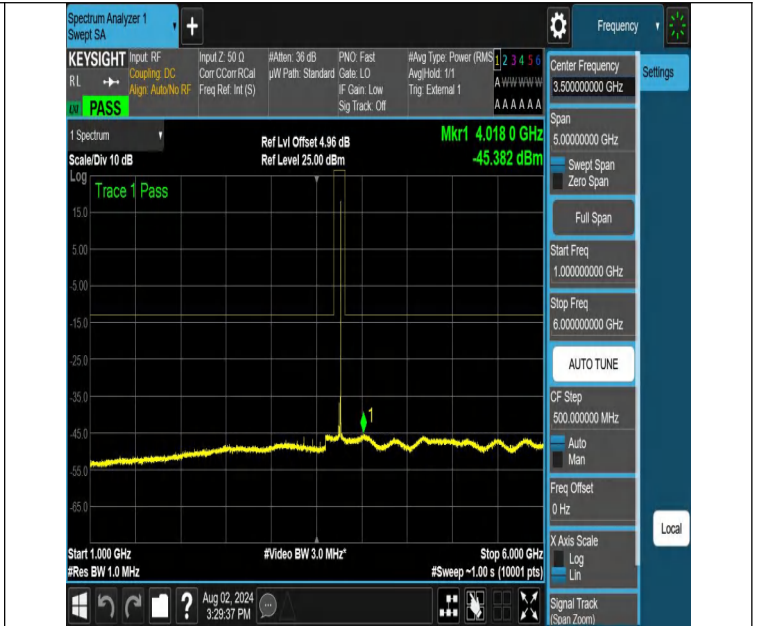

 
NTVN-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

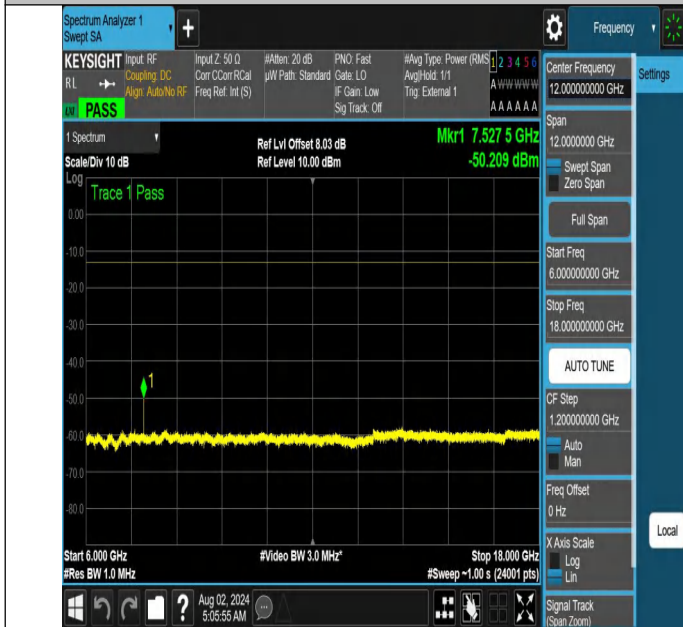

 
NTVN-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

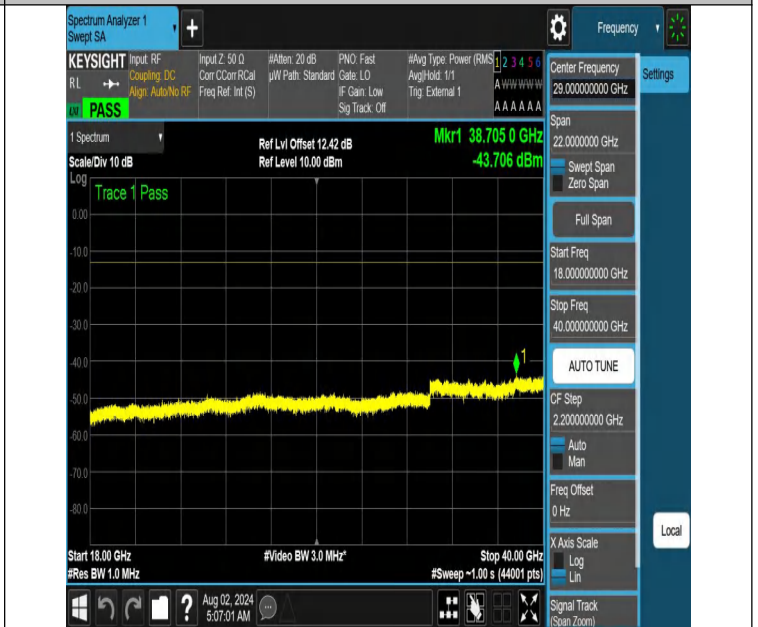

 
NTVN-N78-3700-3800-PC2-30-30-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

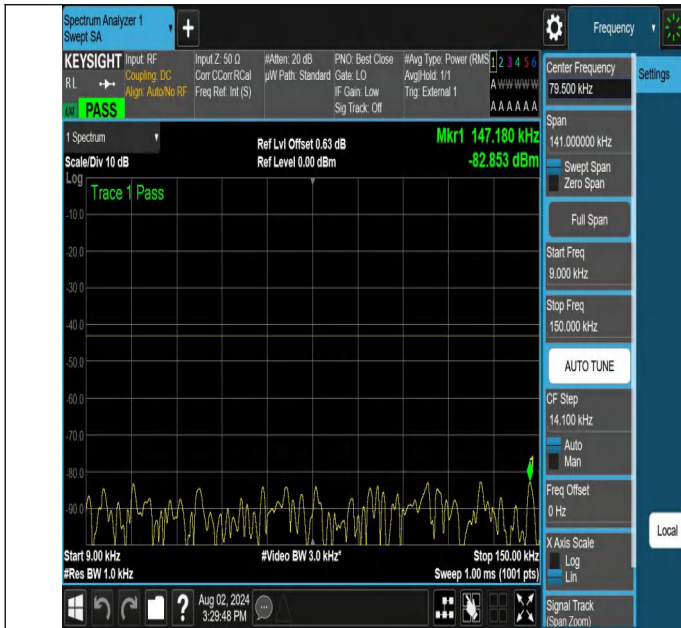

 NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

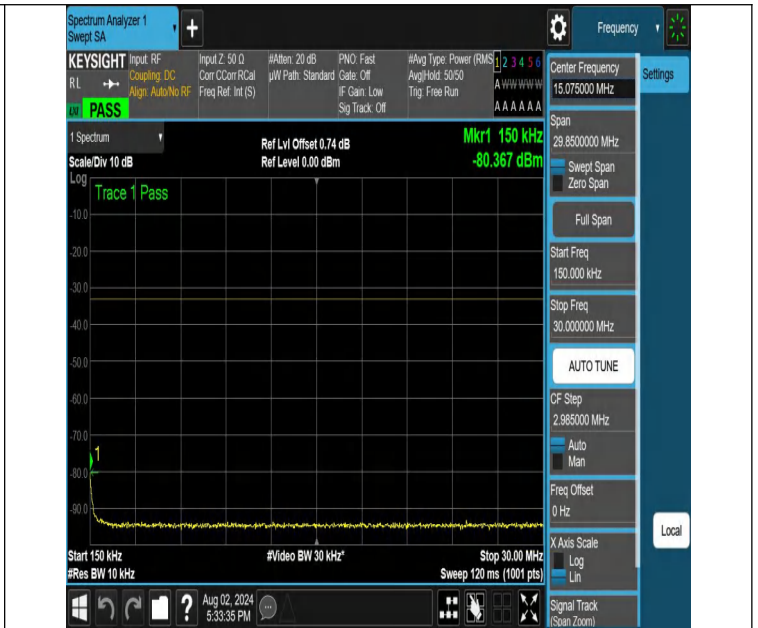

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

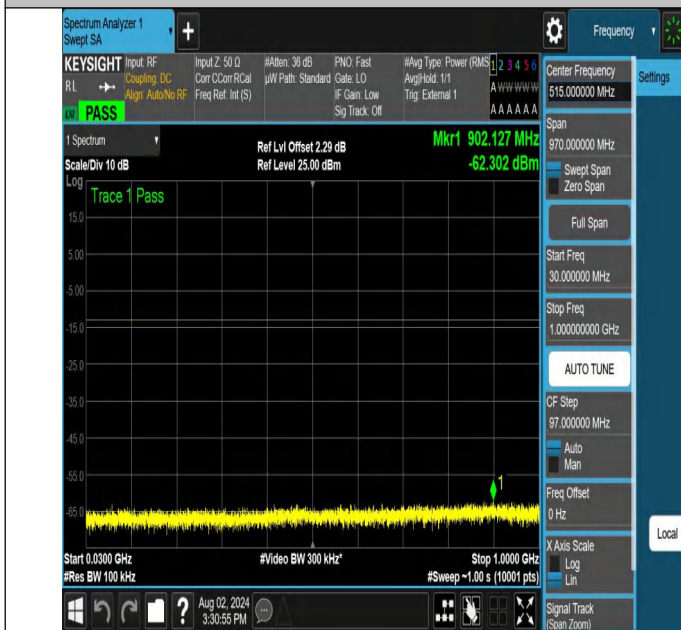


NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

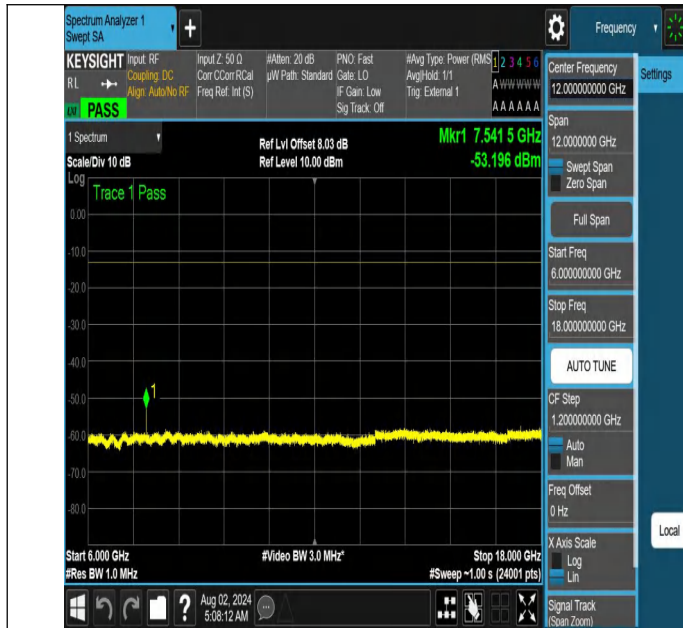

 NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

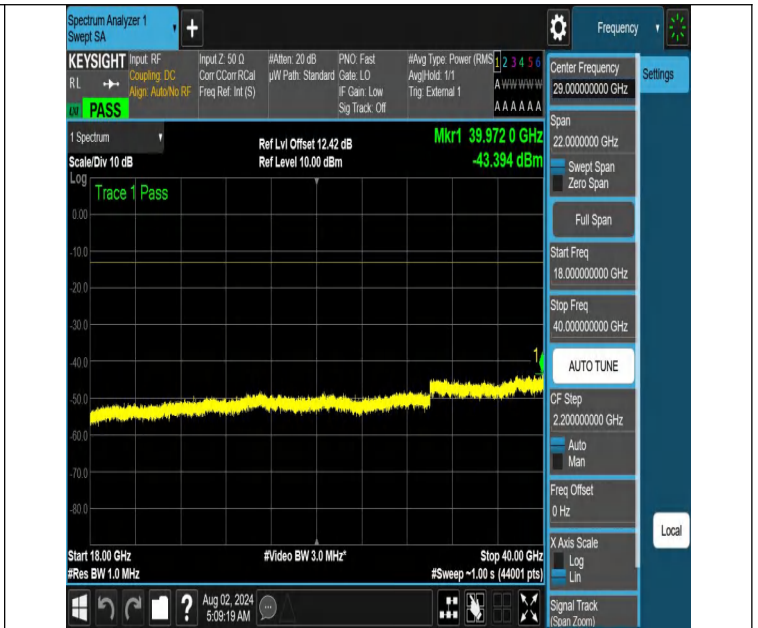

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

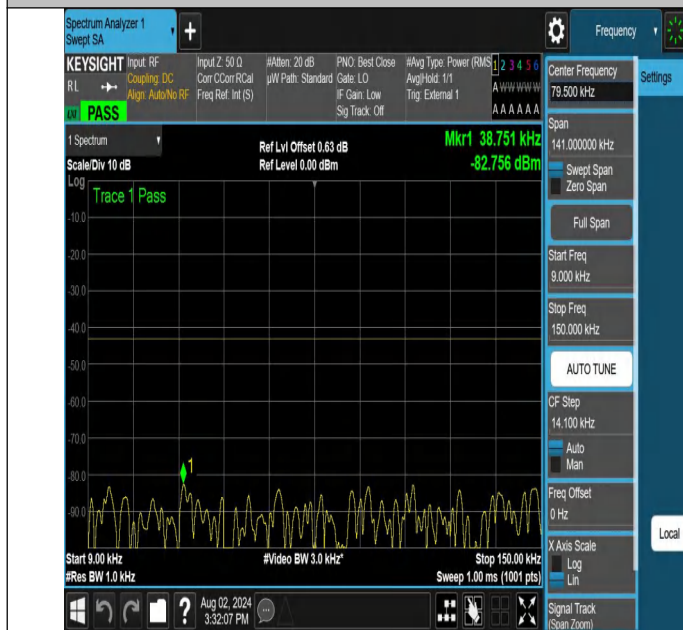


NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

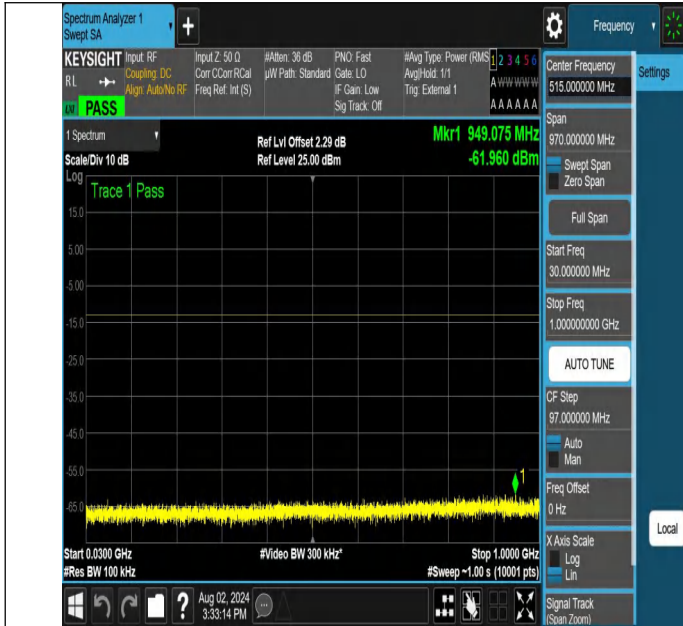

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

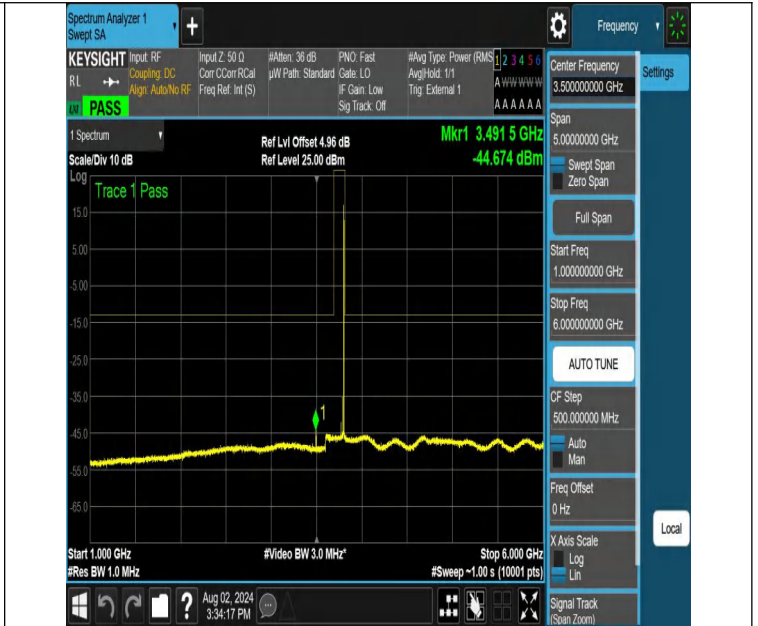

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

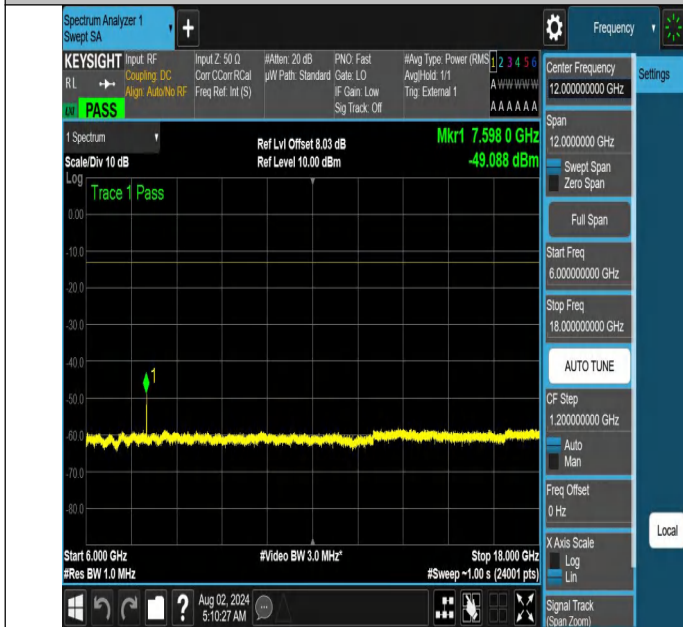

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

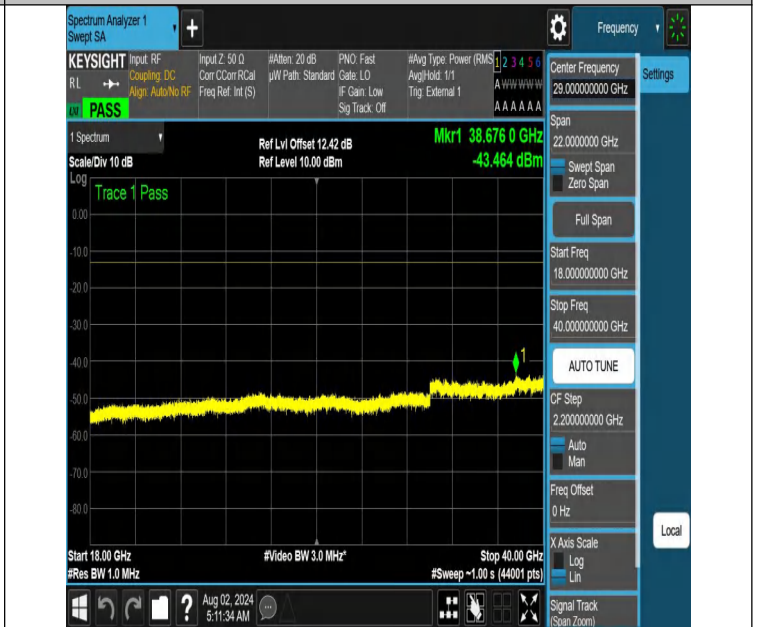

 
NTNV-N78-3700-3800-PC2-30-30-H-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

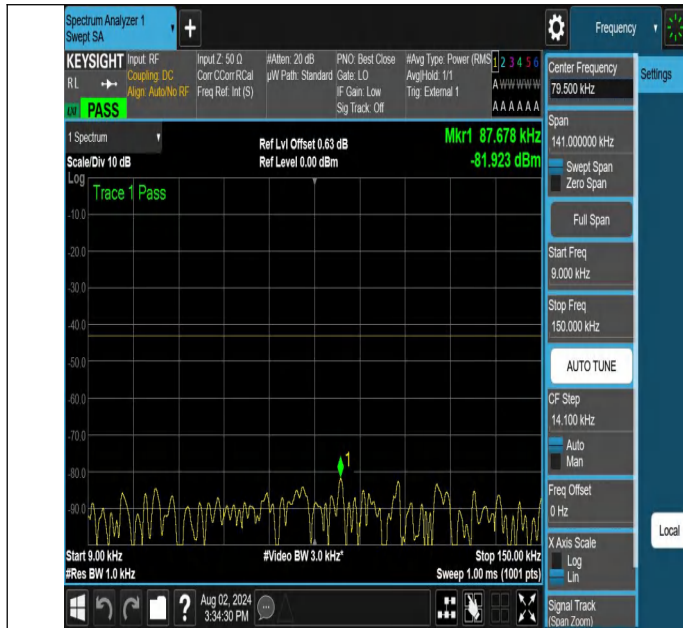

 NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant2-PASS

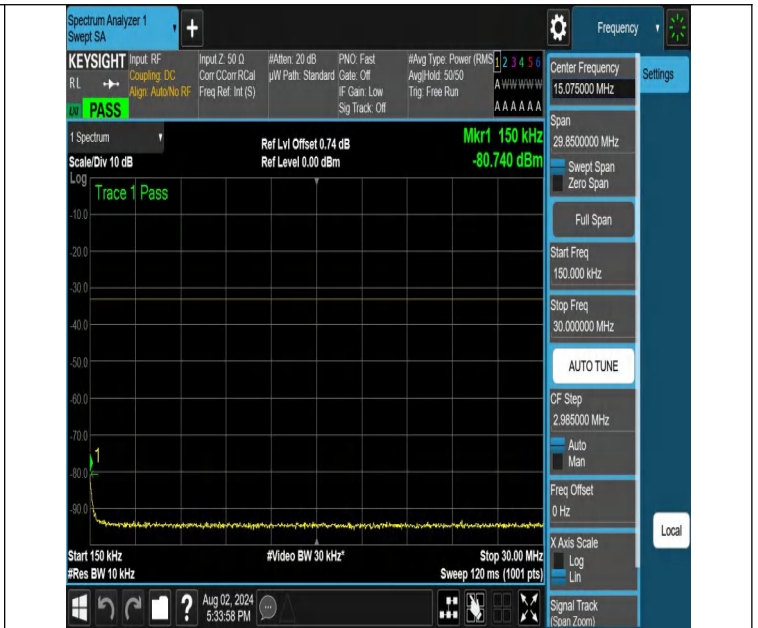

 
NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

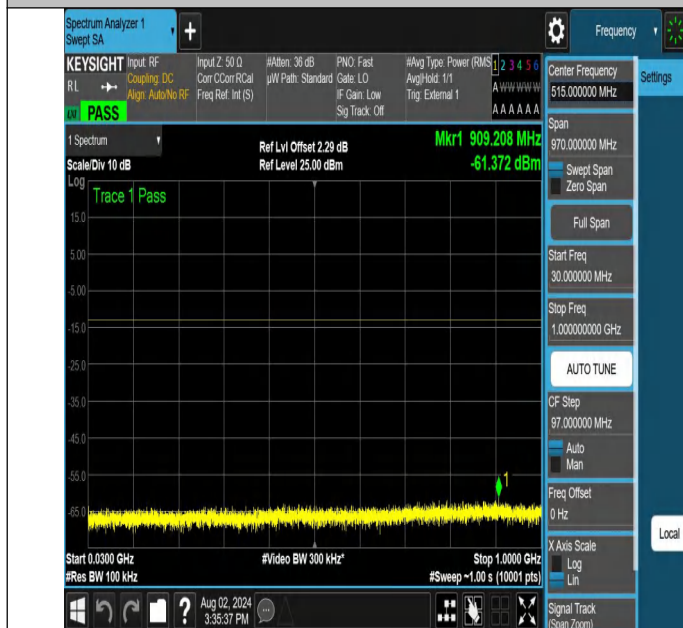


NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

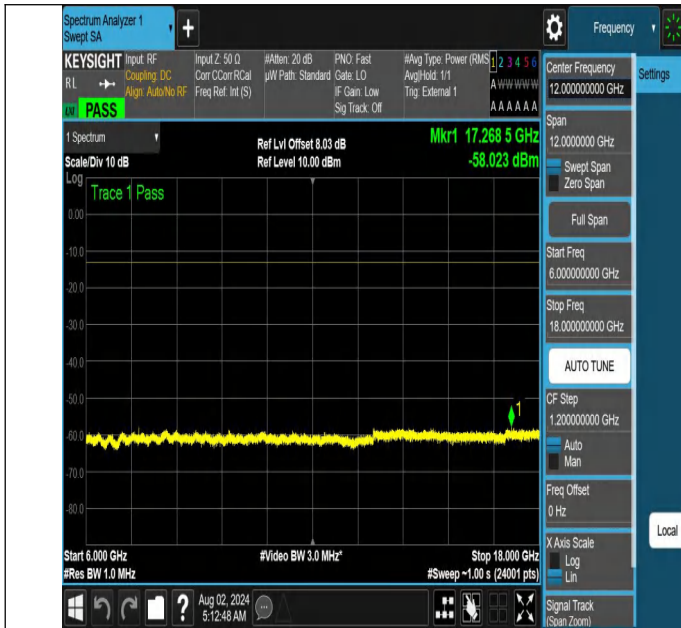

 NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

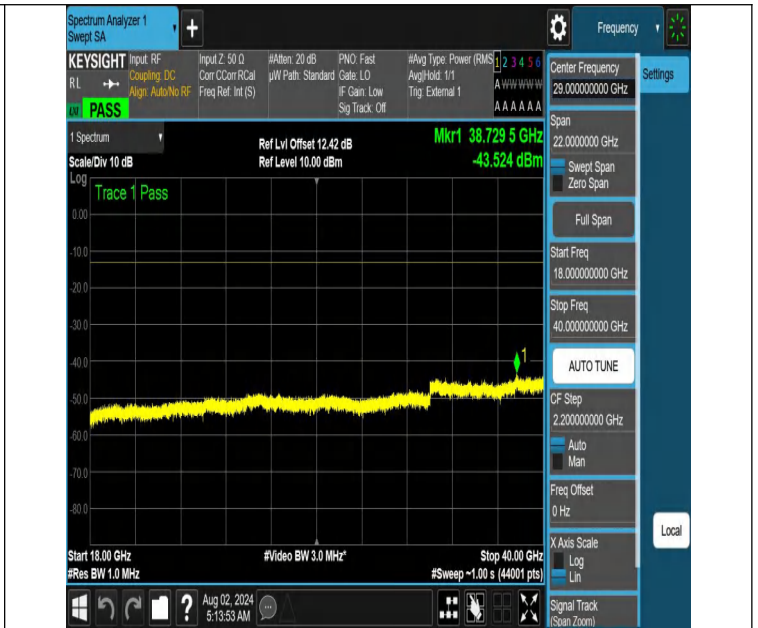

 NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

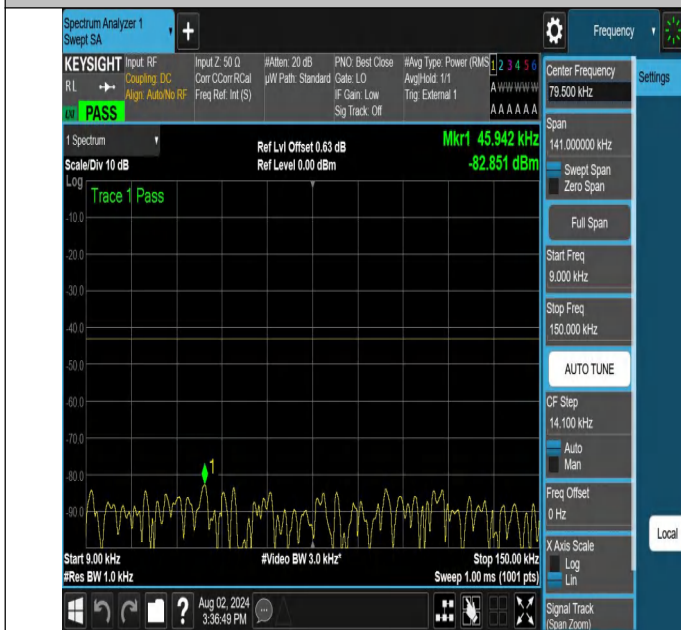

NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



NTNV-N78-3700-3800-PC2-30-40-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant2-PASS