 
 
 


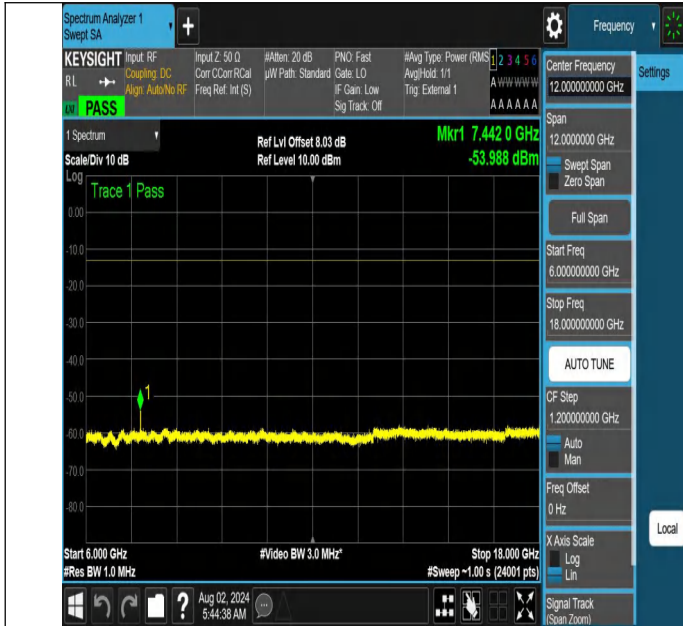


NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

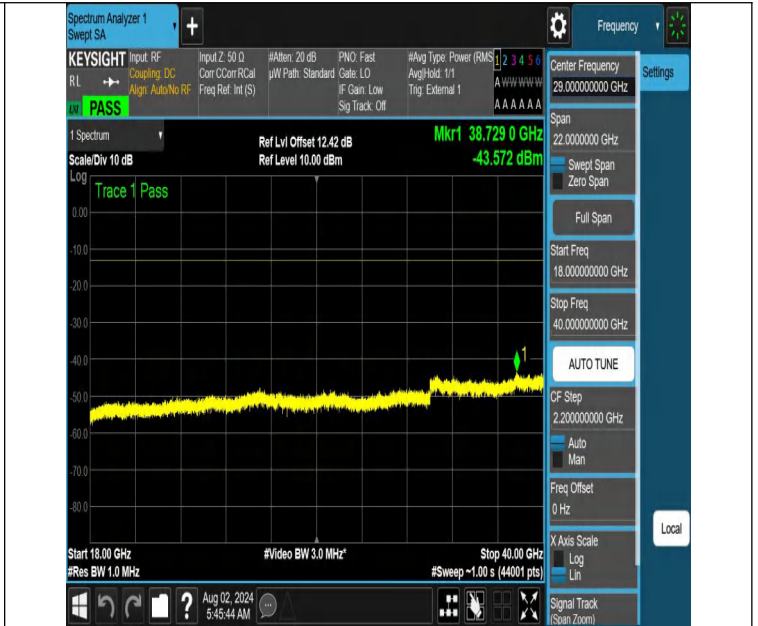


NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant2-PASS

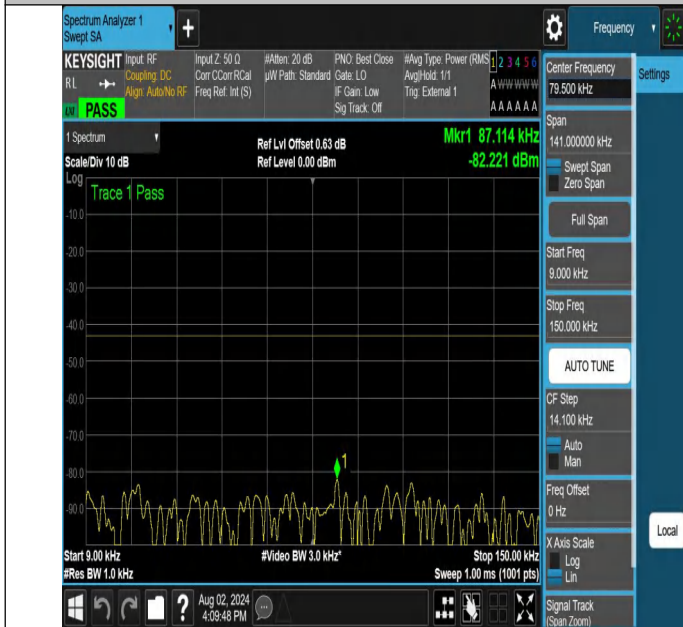

 NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS

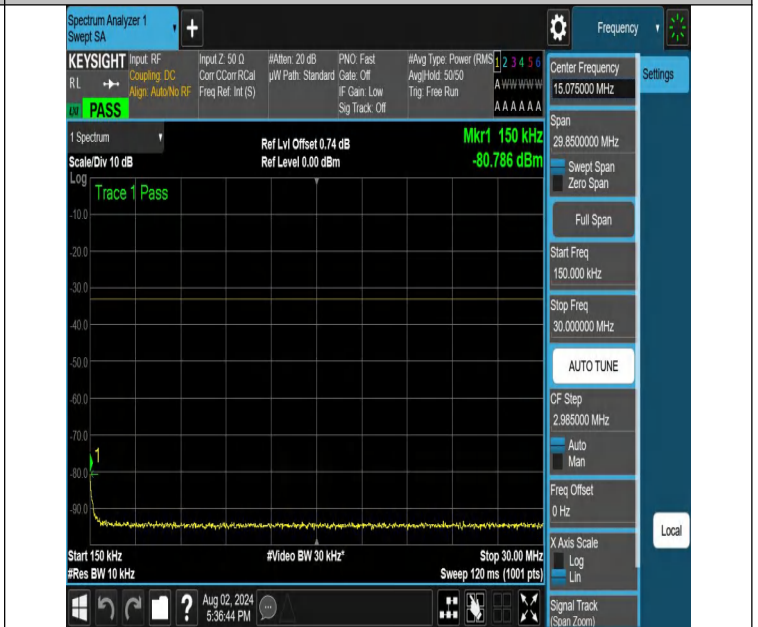

 
NTNV-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

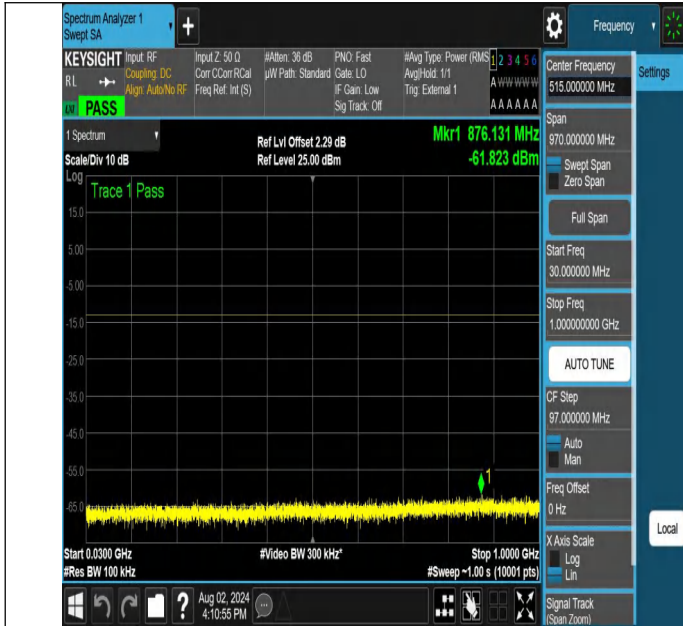


NTVN-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS



 
NTVN-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

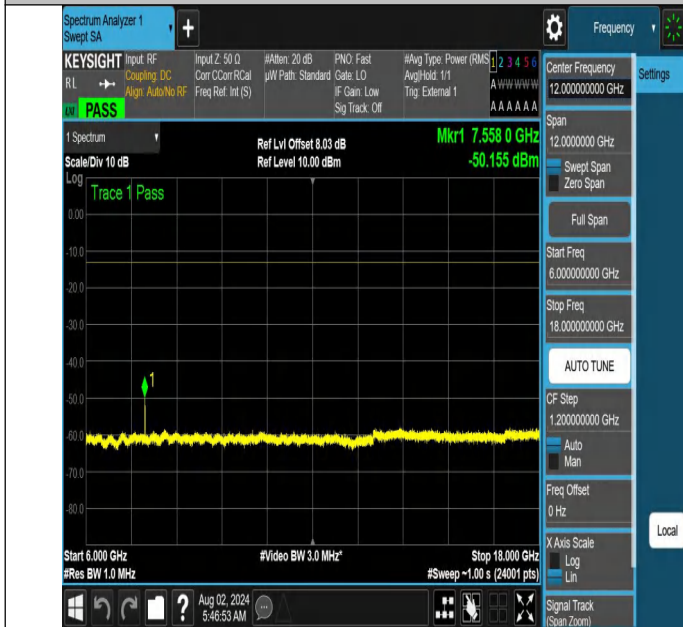

 
NTVN-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

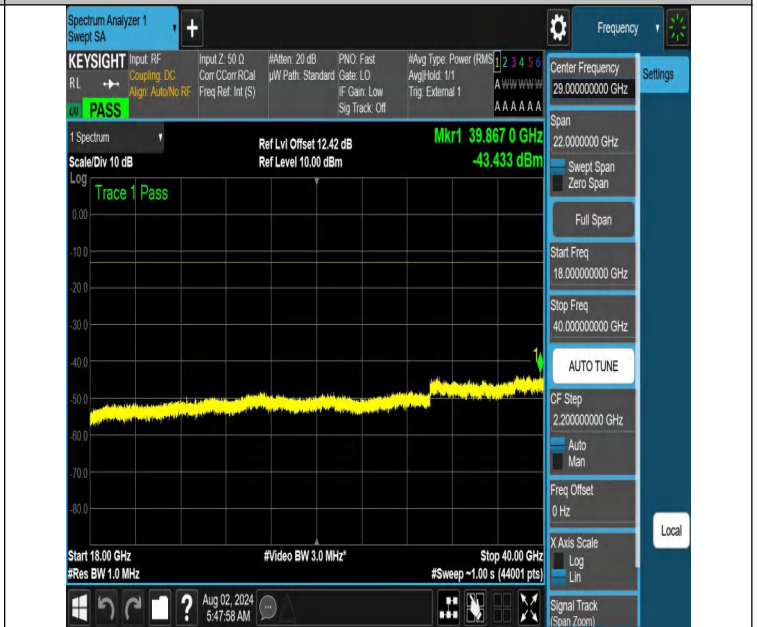

 
NTVN-N78-3700-3800-PC2-30-60-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

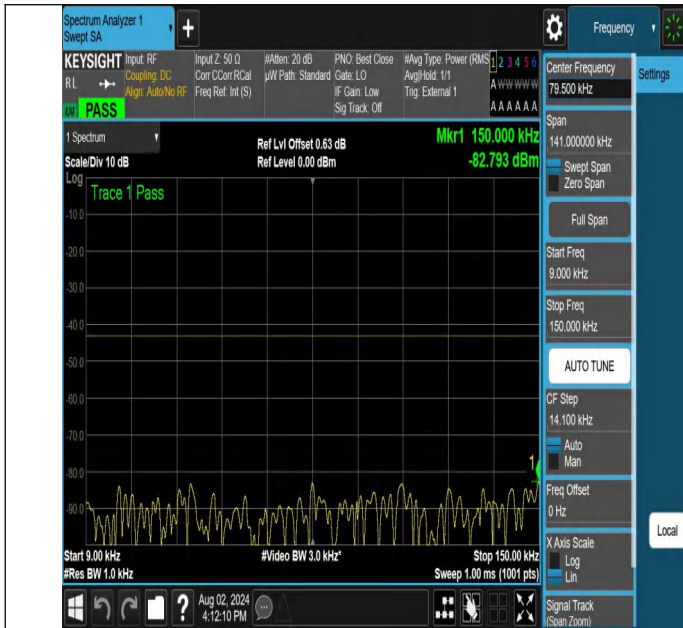

 NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

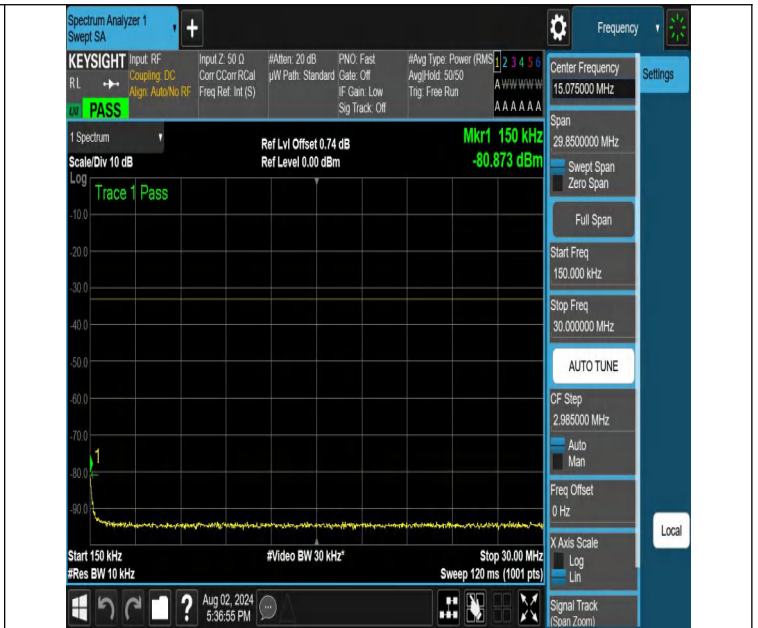

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

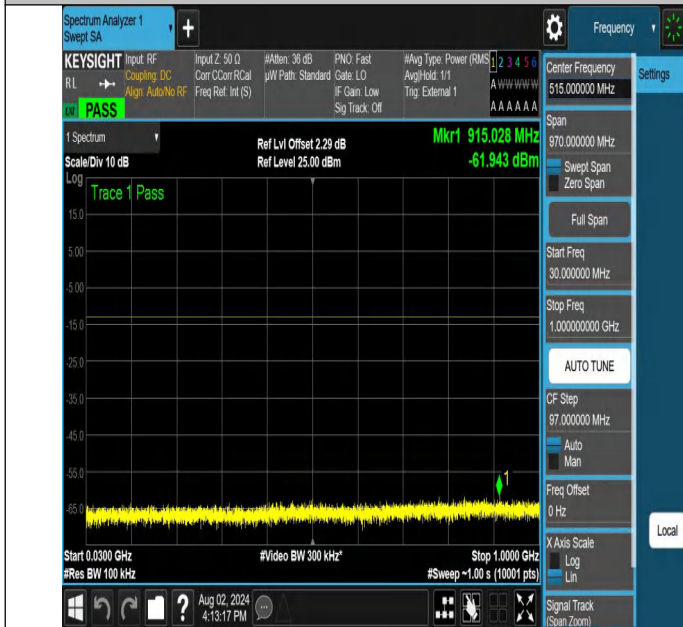


NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

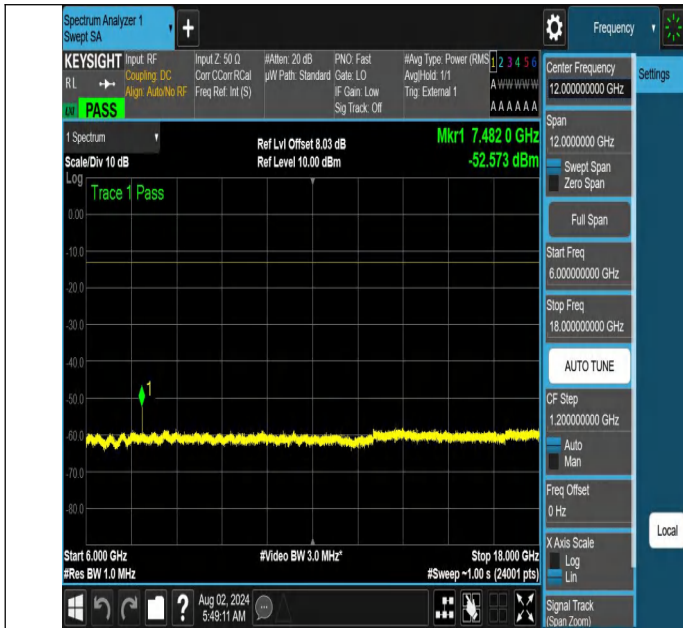

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

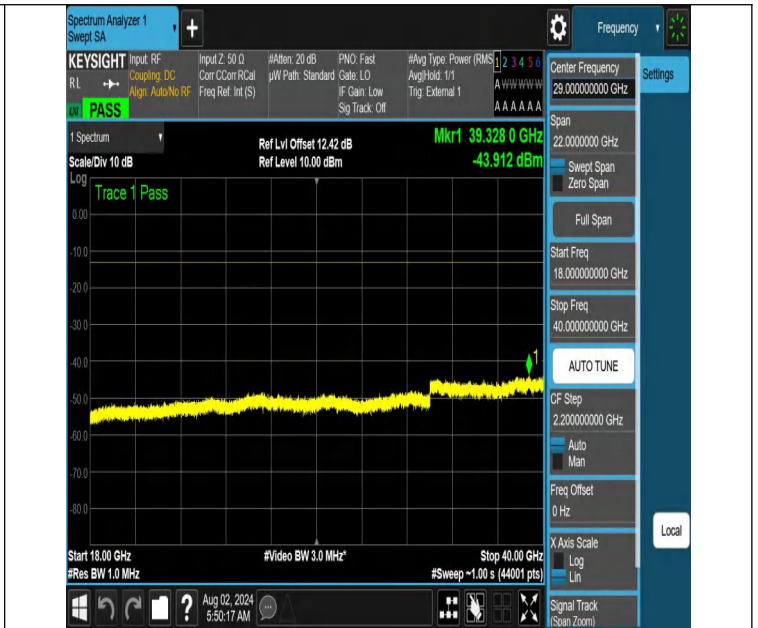

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

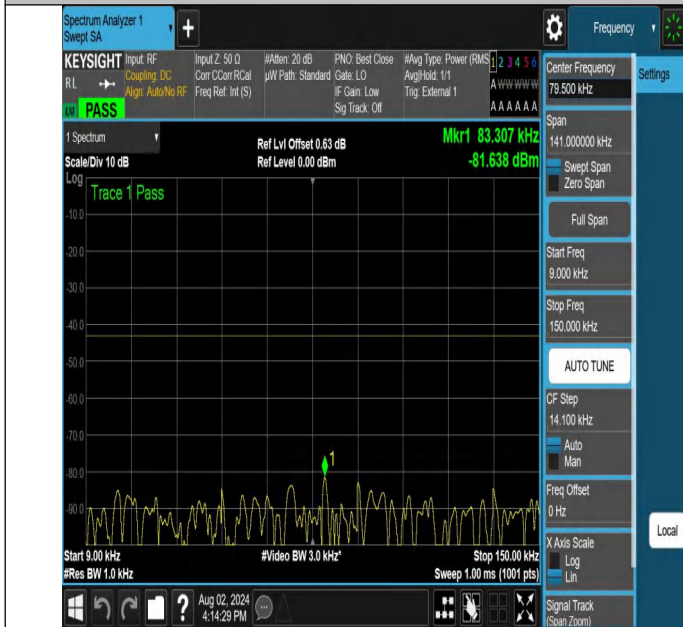

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS

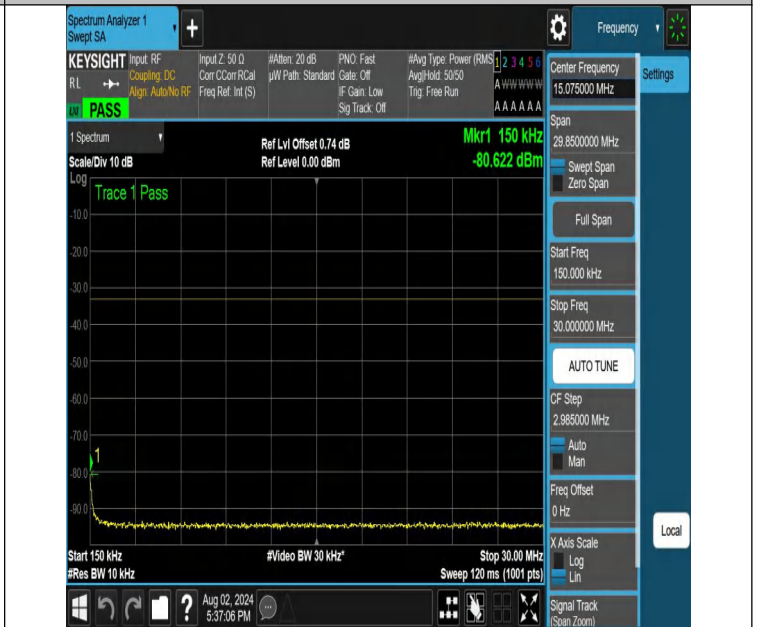

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

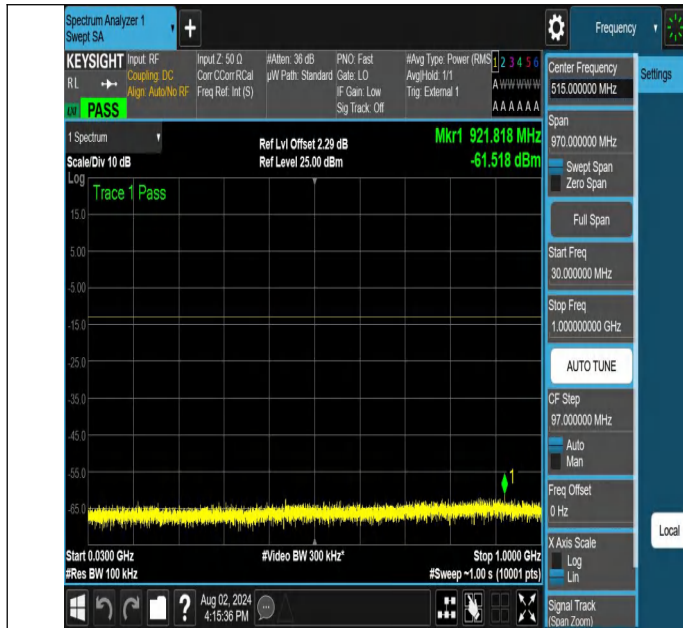

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
30-1000-Ant2-PASS

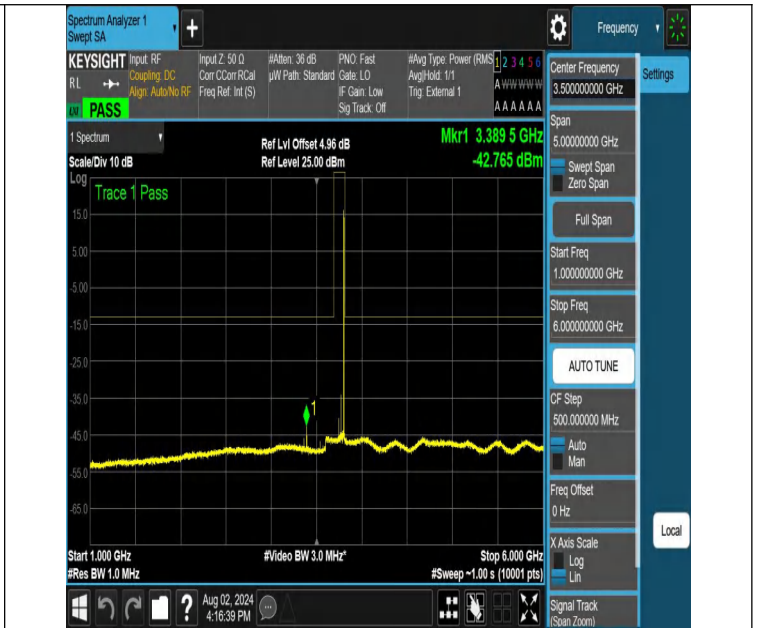

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
1000-6000-Ant2-PASS

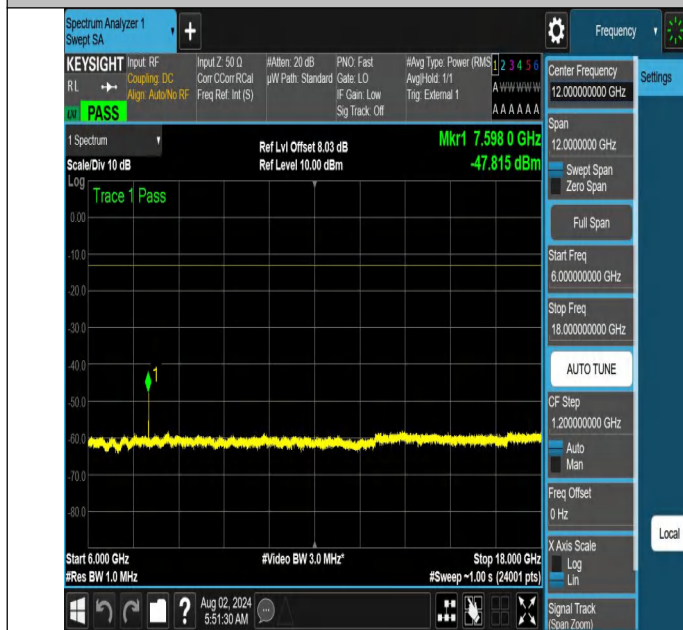

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
6000-18000-Ant2-PASS

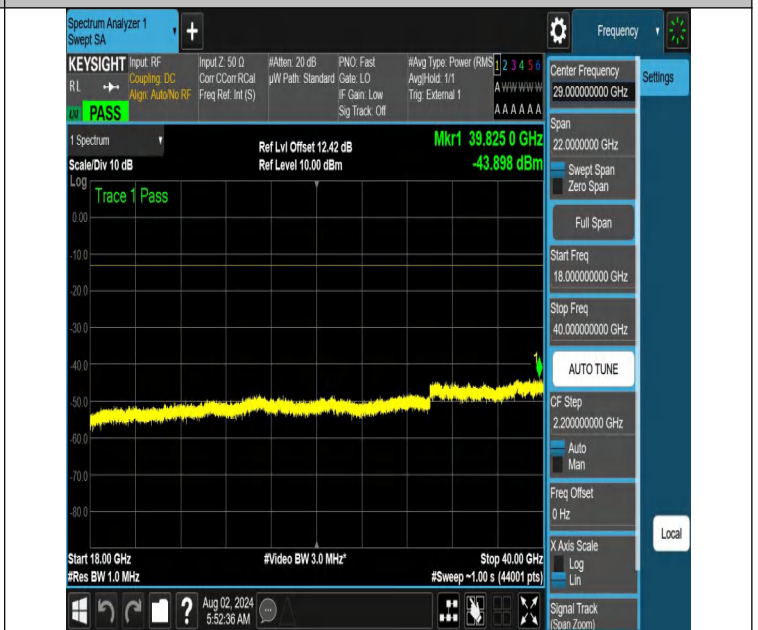

 
NTNV-N78-3700-3800-PC2-30-60-H-CP-QPSK-Edge_1RB_Right-
18000-40000-Ant2-PASS

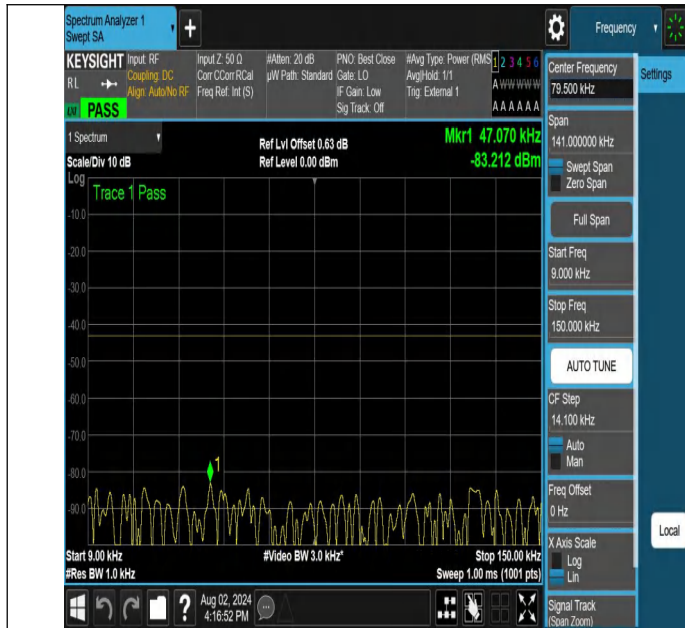

 NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant2-PASS

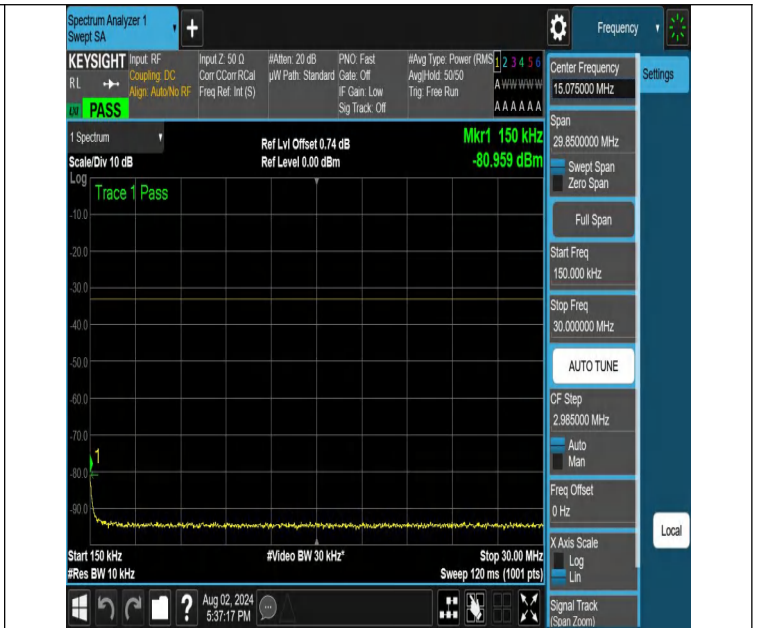

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

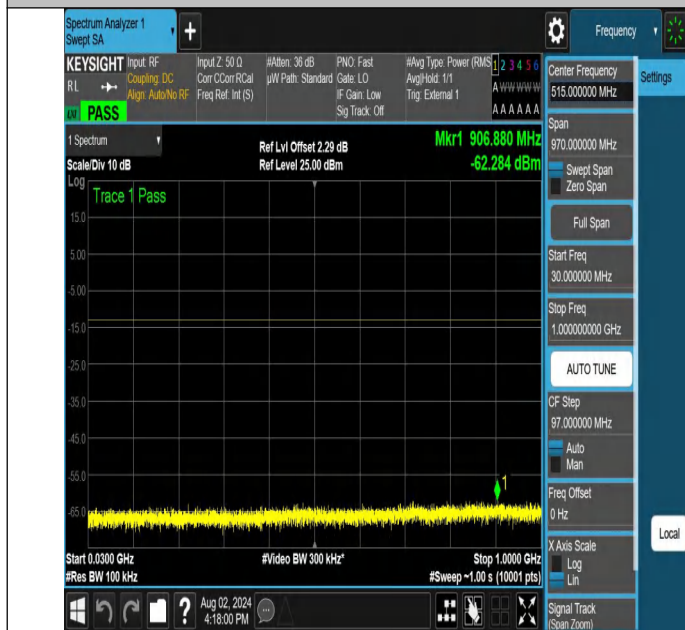

NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

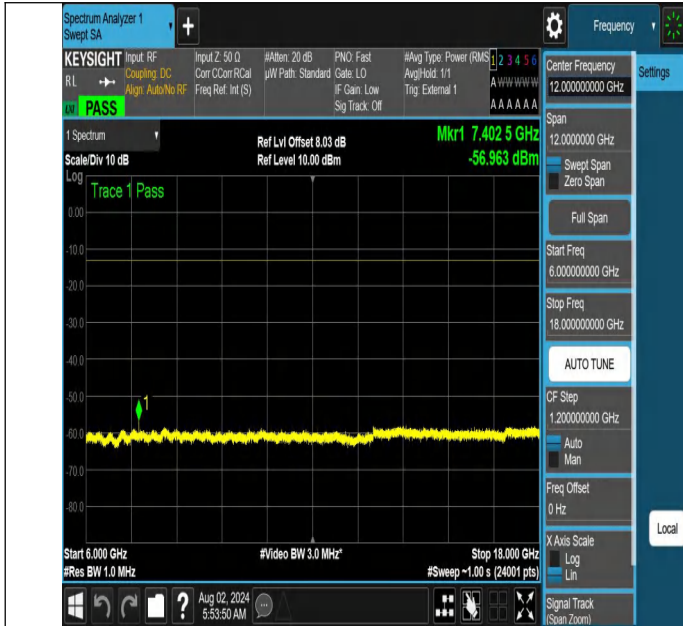


NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

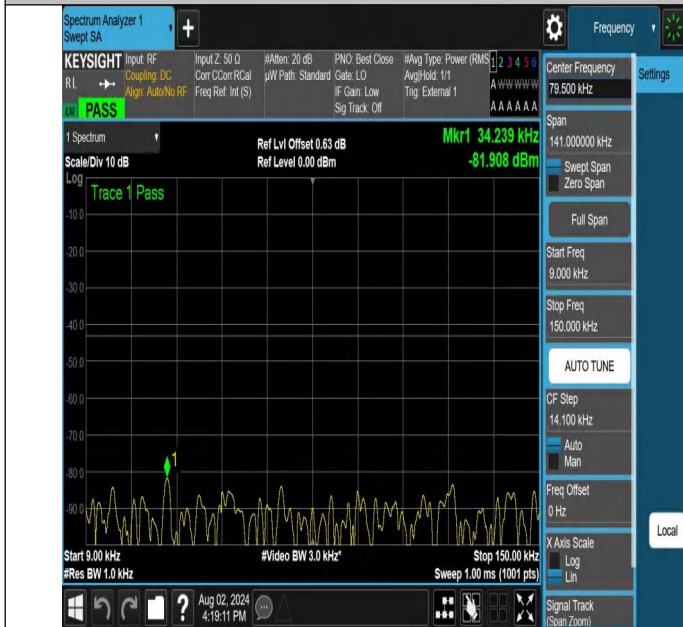

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS

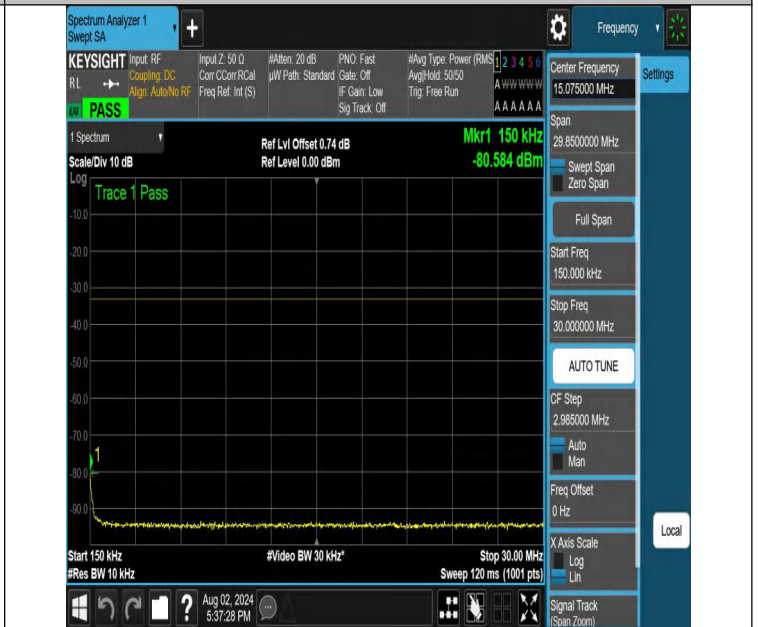

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant2-PASS

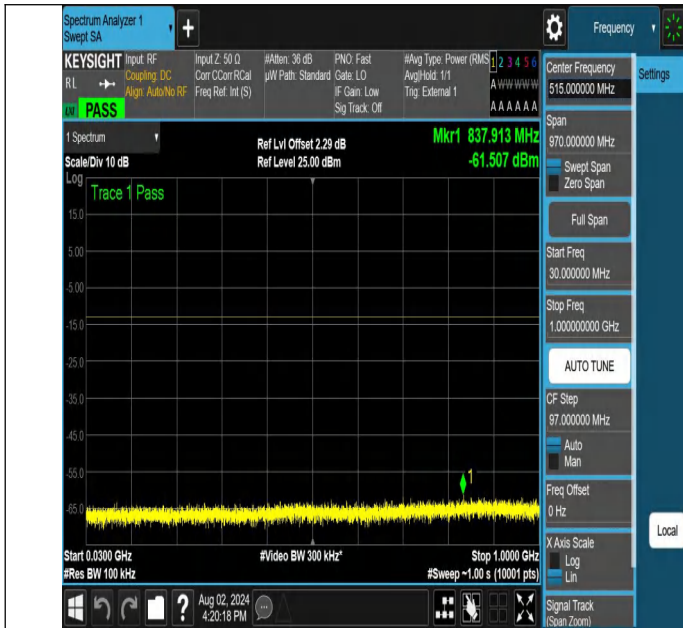

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

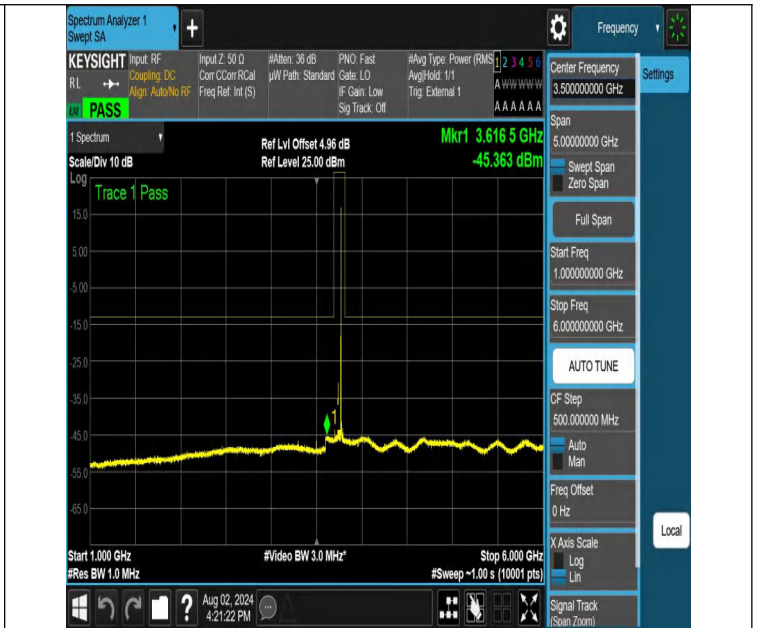

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

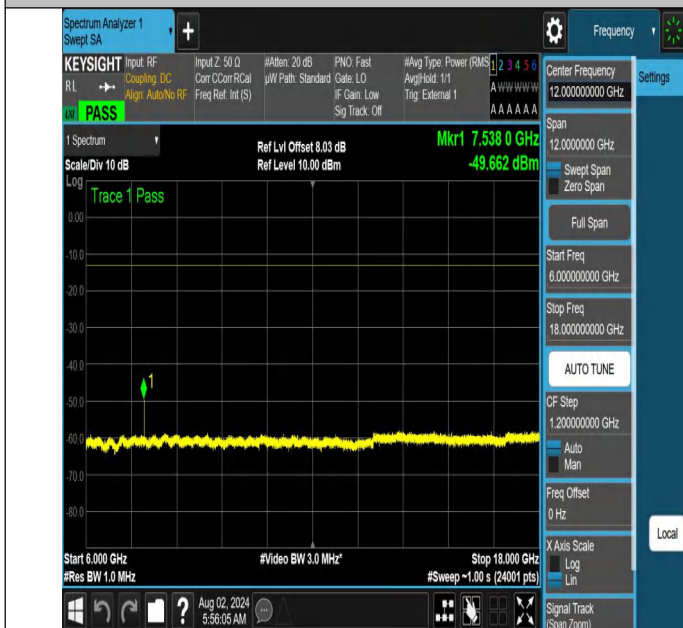

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

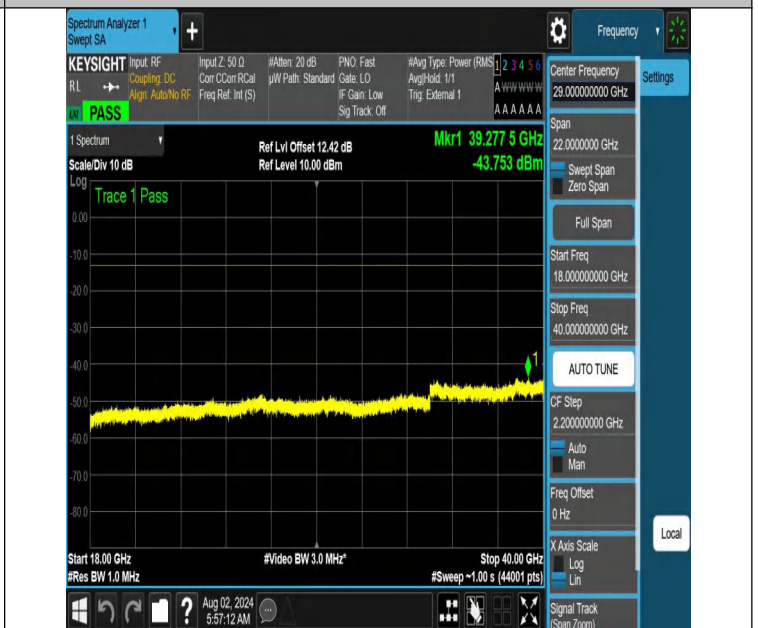

 
NTNV-N78-3700-3800-PC2-30-70-L-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

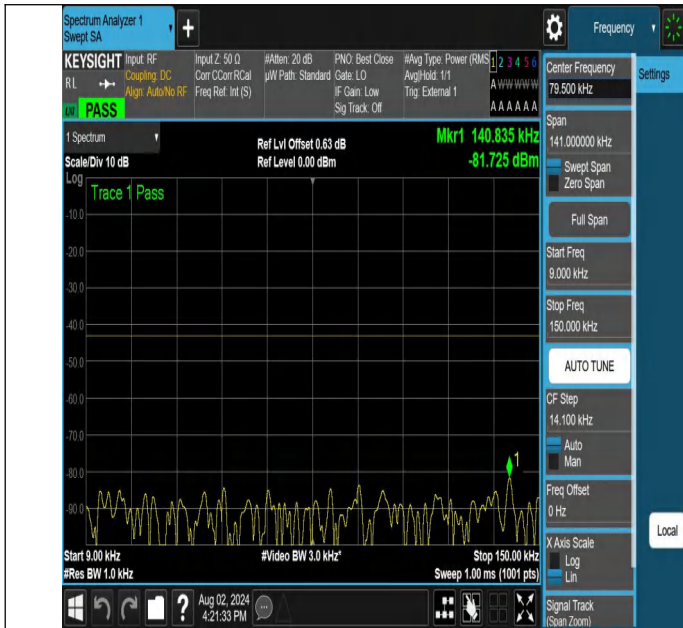

 NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

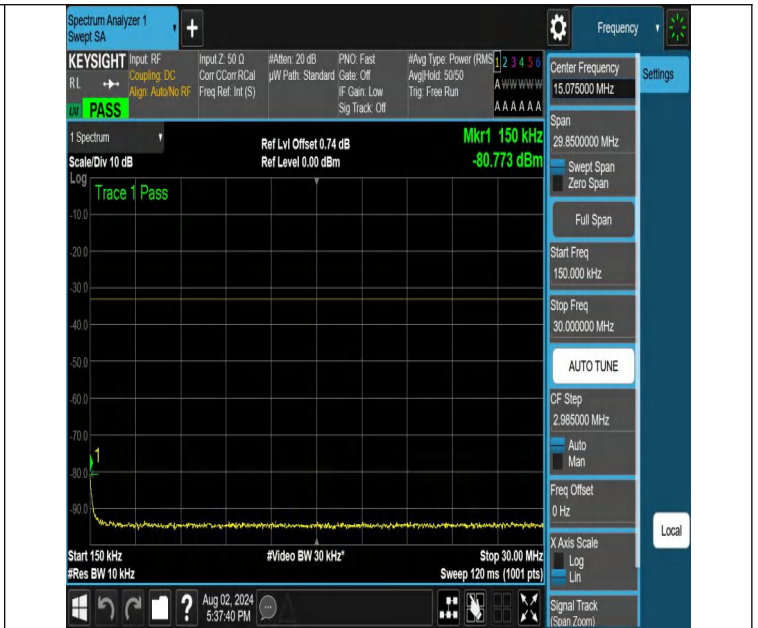

 
NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

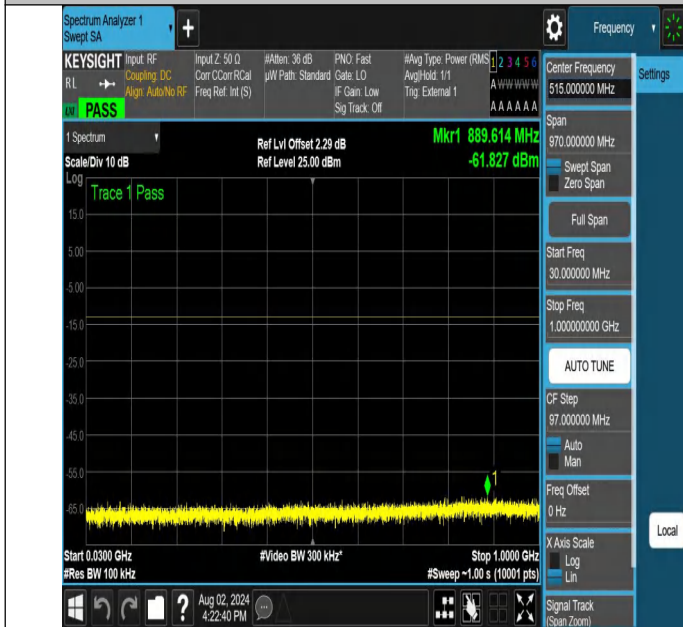


NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant2-PASS

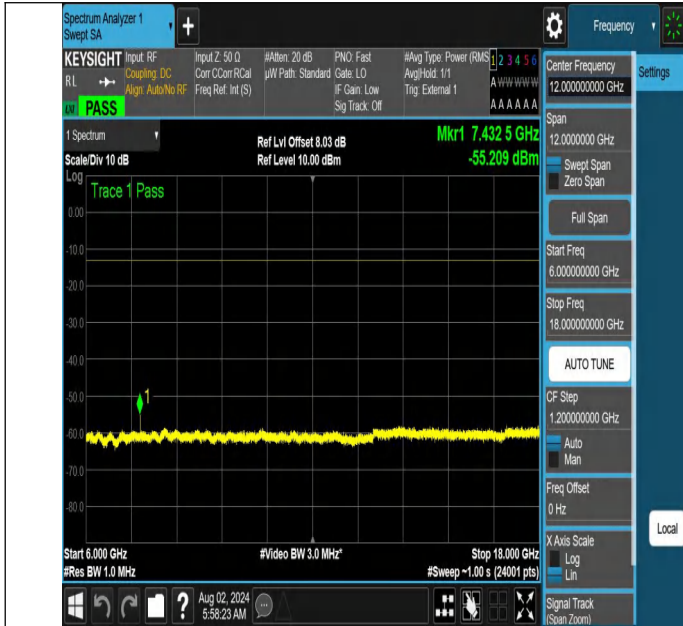

 
NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

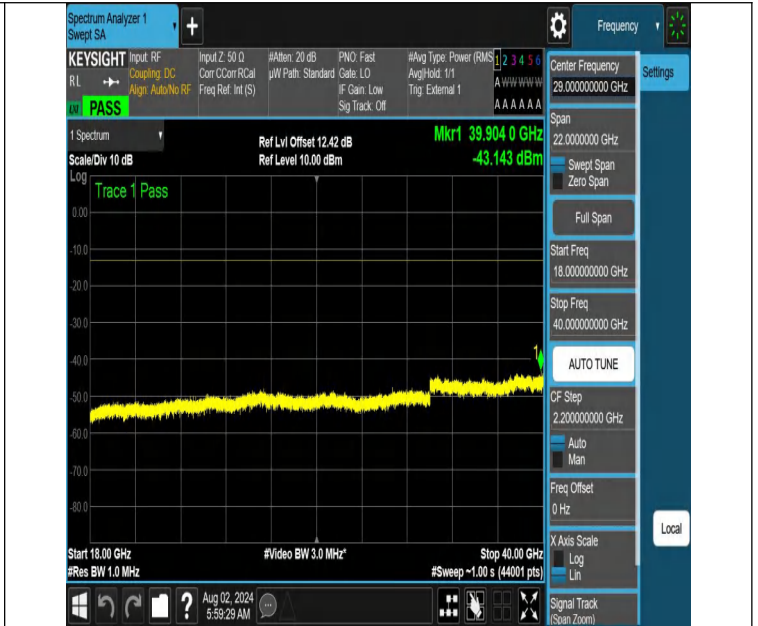

 
NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant2-PASS

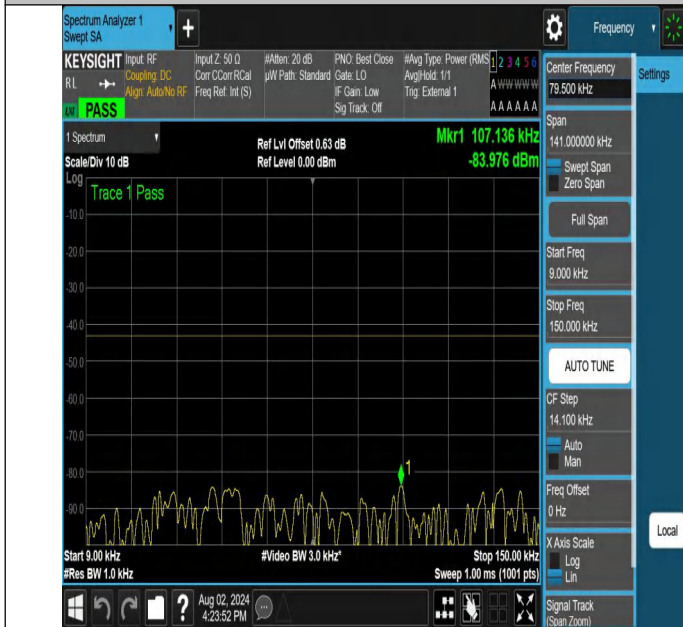

 
NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS

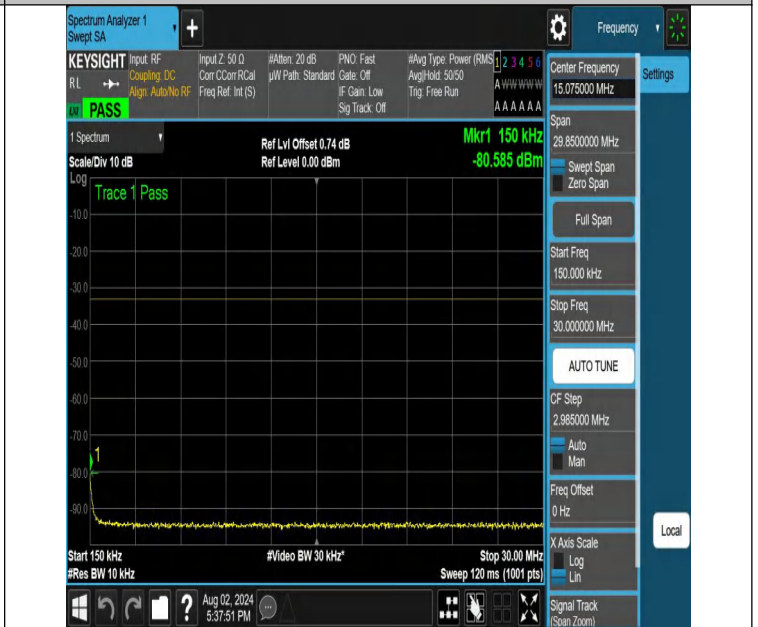

 NTNV-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

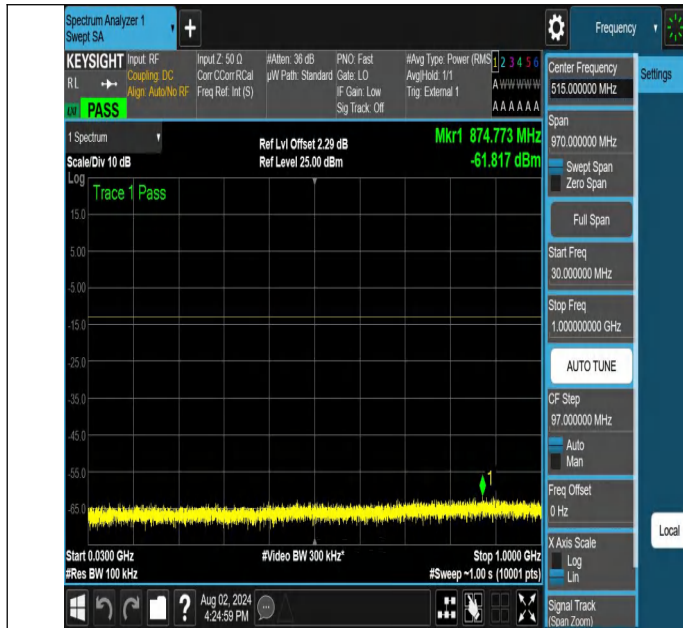

 
NTVN-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

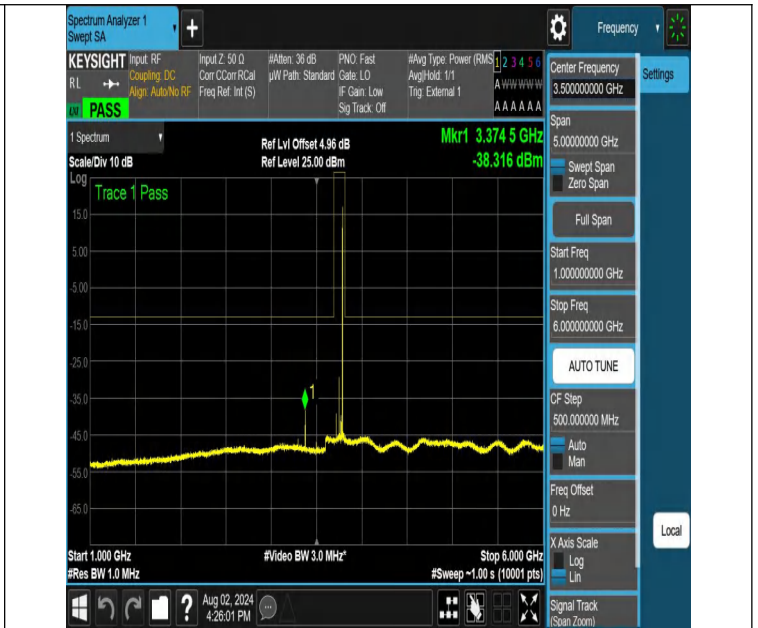


NTVN-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS



 NTVN-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

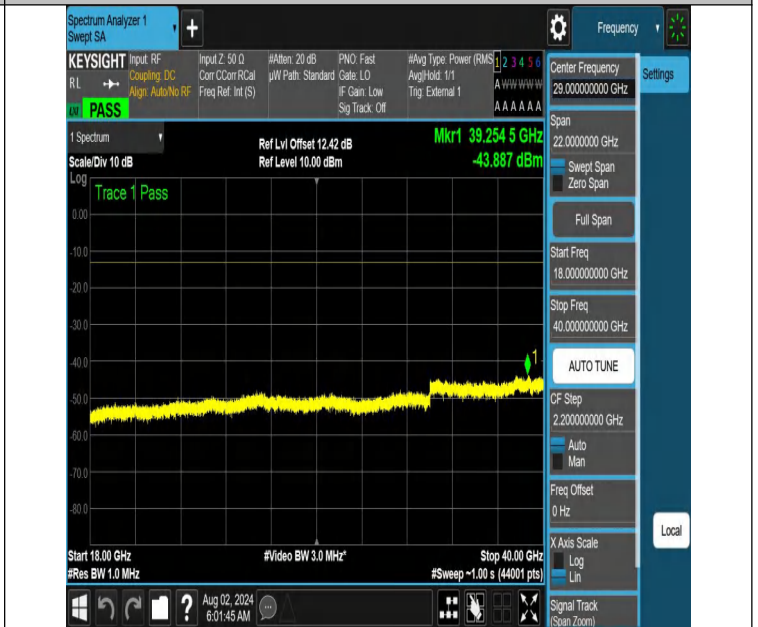

 
NTVN-N78-3700-3800-PC2-30-70-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

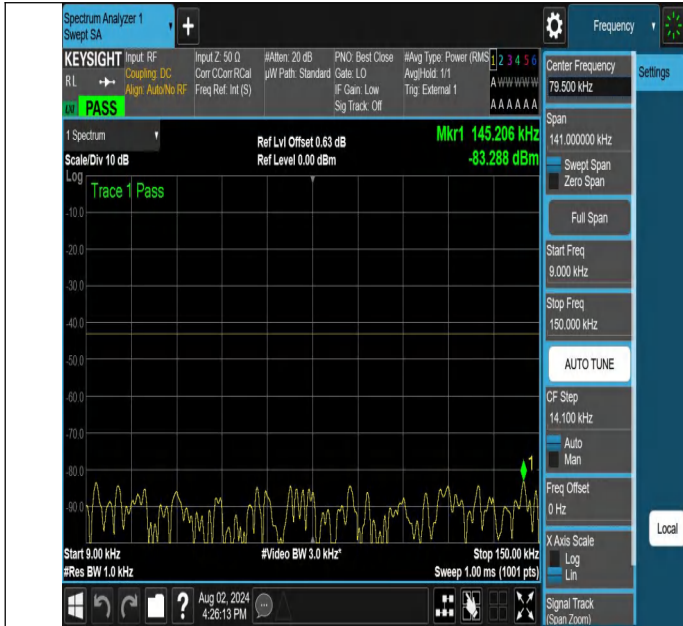

NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

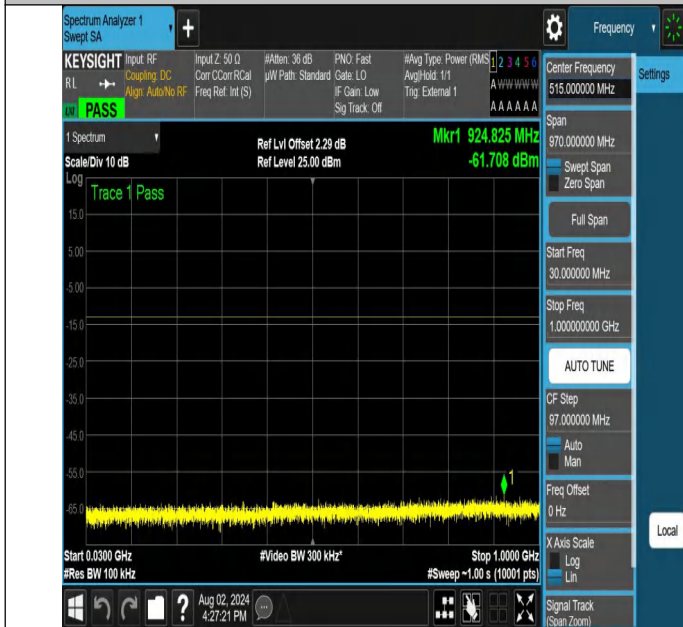


NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

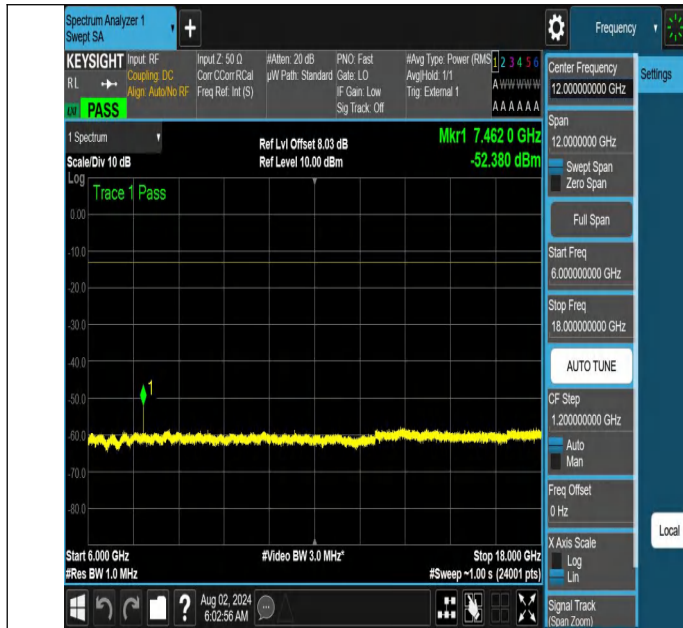

 NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

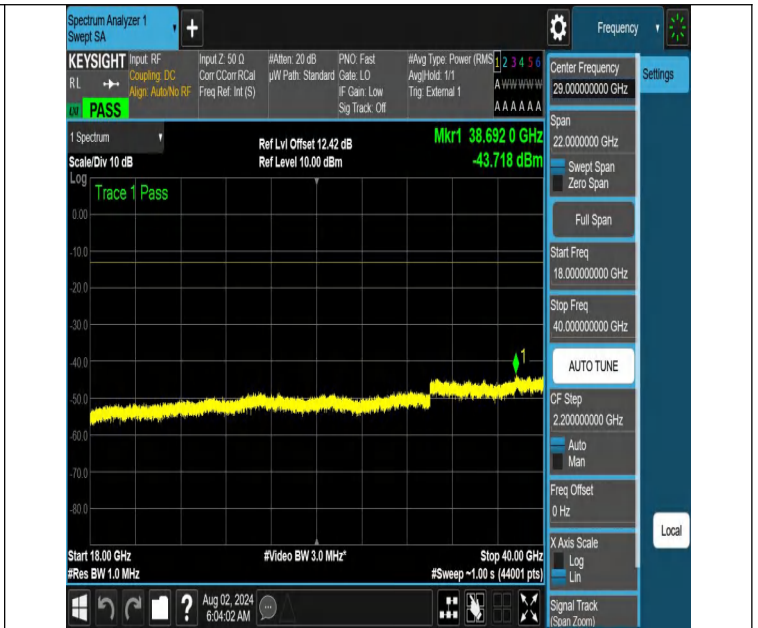

 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

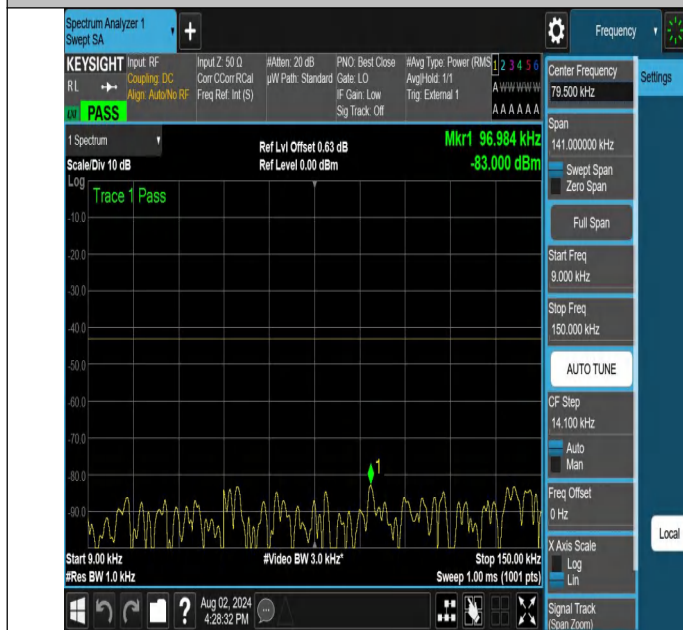


NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

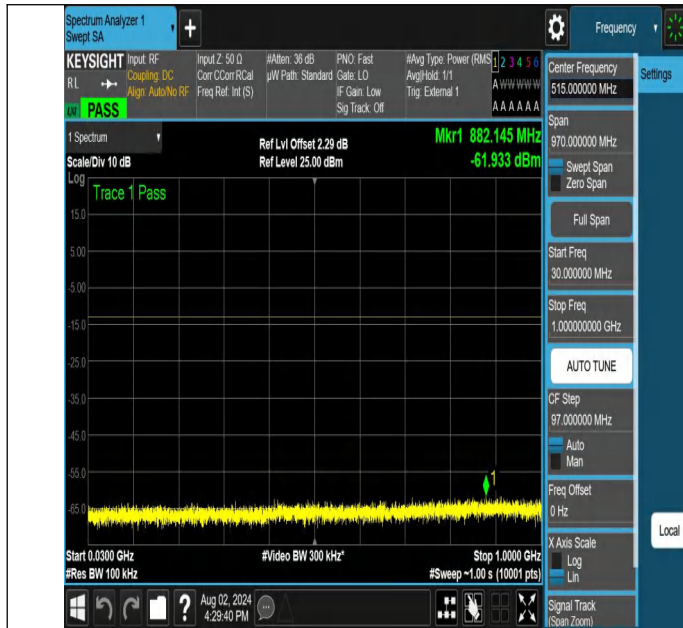

 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS

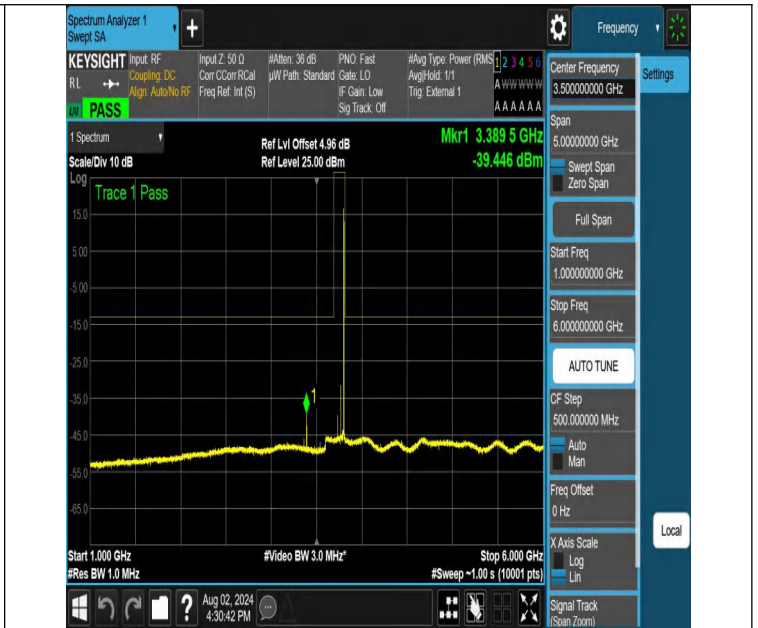

 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

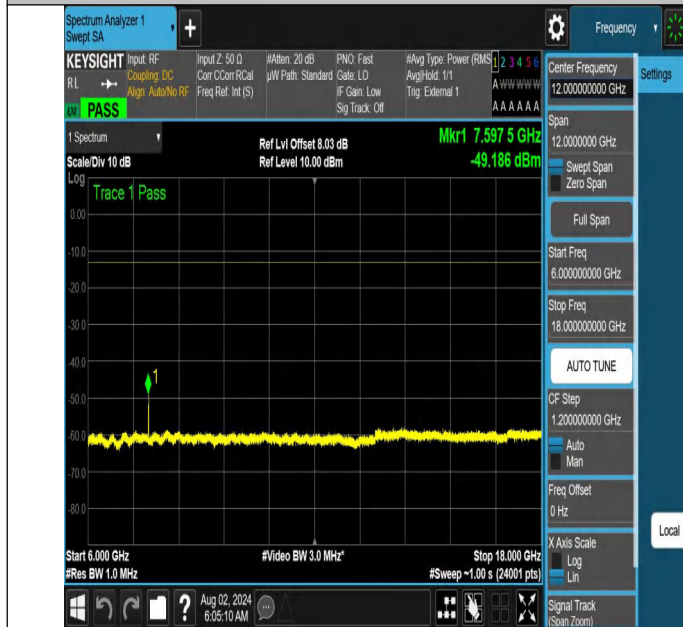

 NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

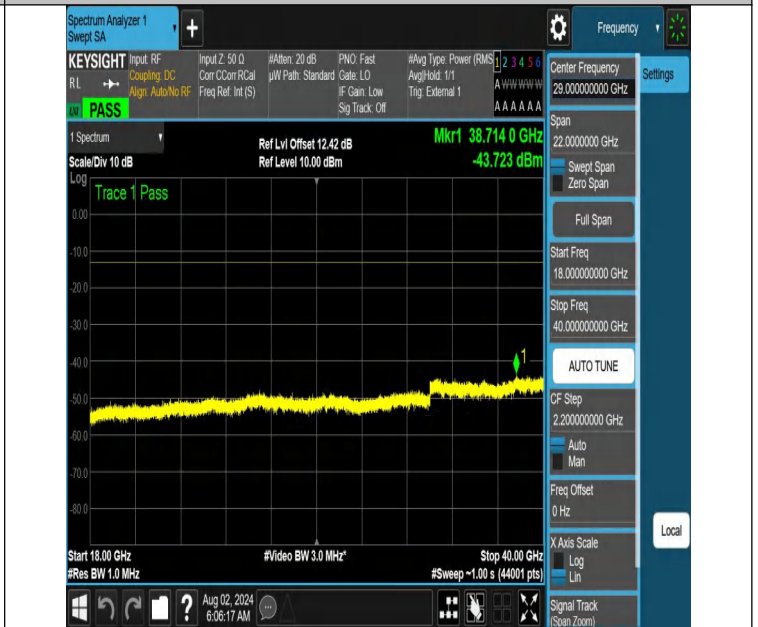

 
NTNV-N78-3700-3800-PC2-30-70-H-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS

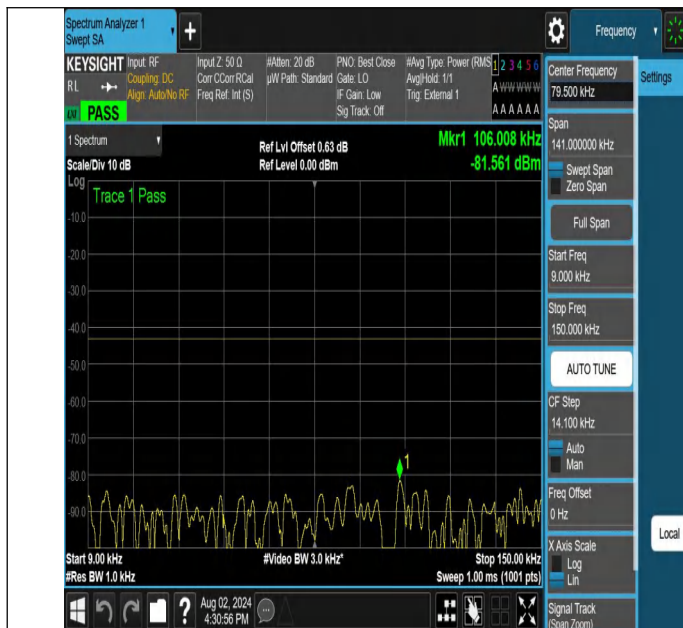


NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-0.
009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

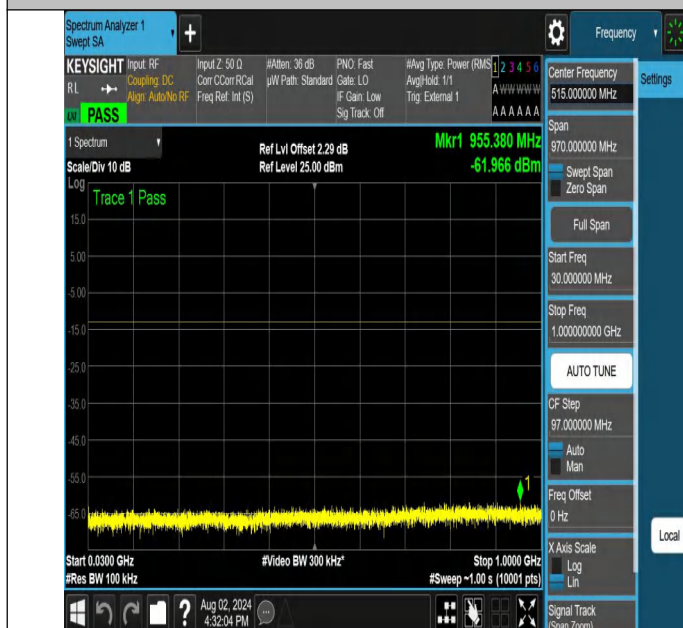

 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS

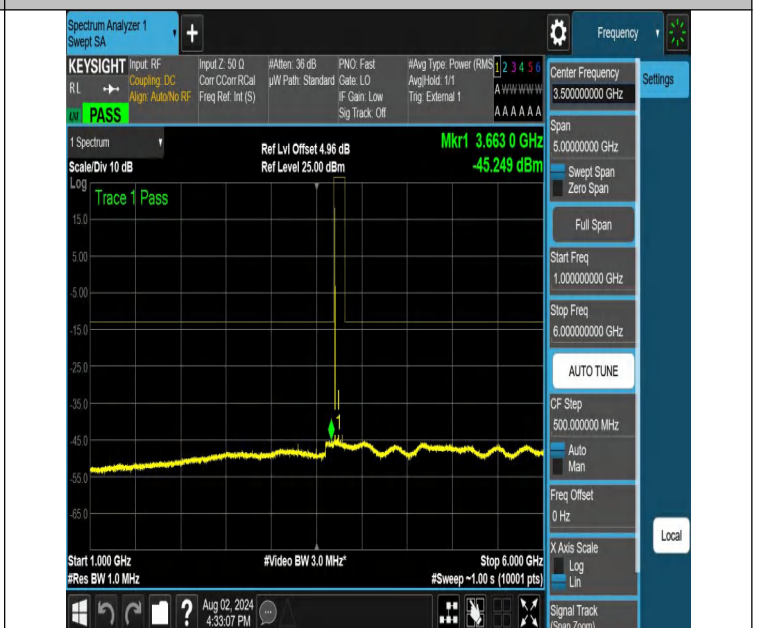

 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-10
00-6000-Ant2-PASS

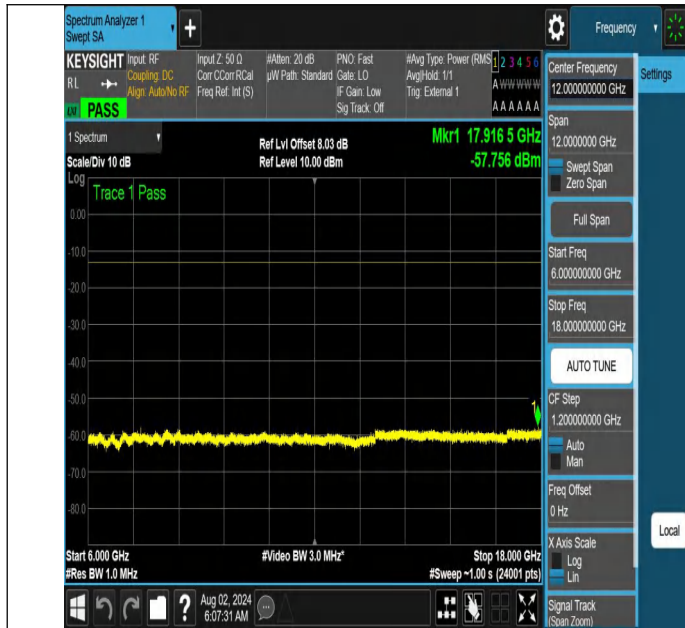

 NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

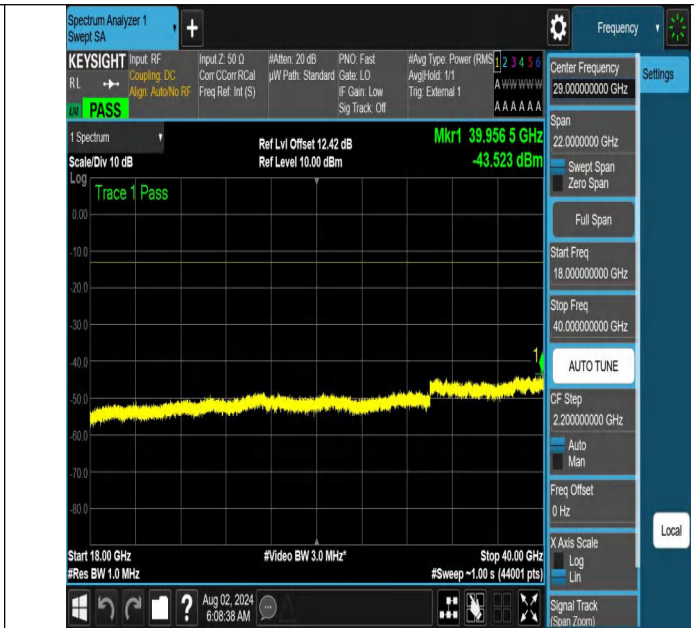

 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Left-18
000-40000-Ant2-PASS

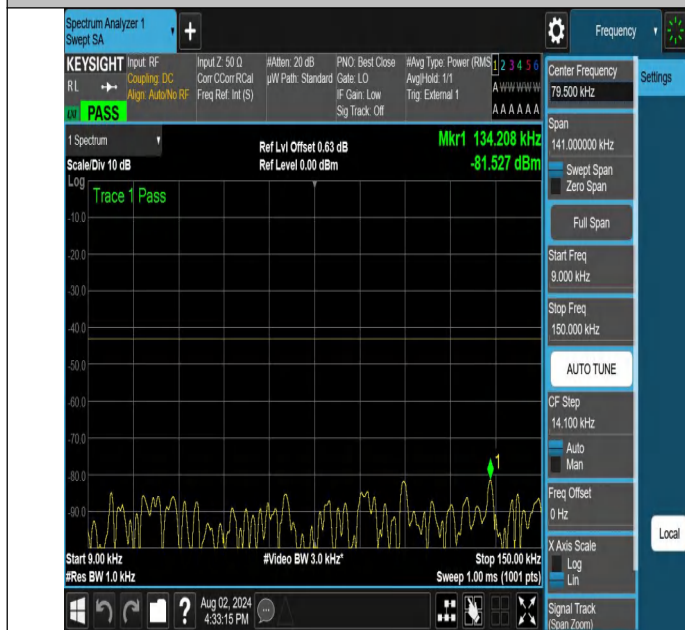


NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-0
.15-30-Ant2-PASS

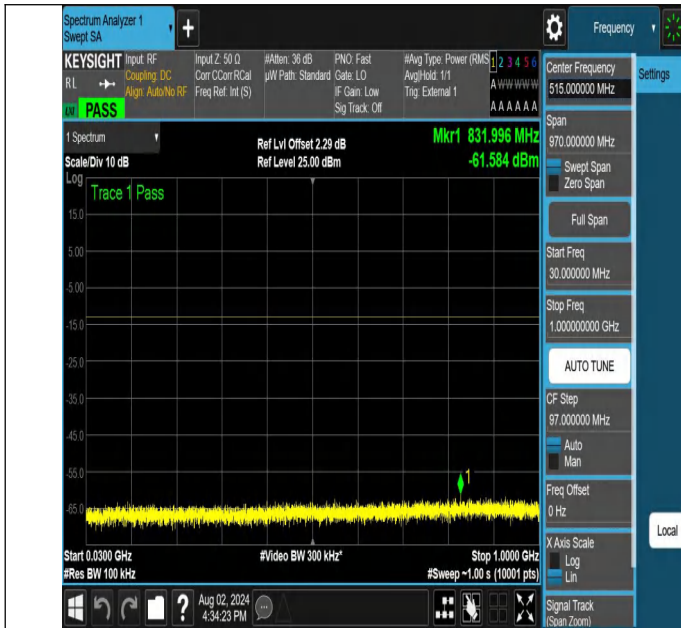

 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-
30-1000-Ant2-PASS

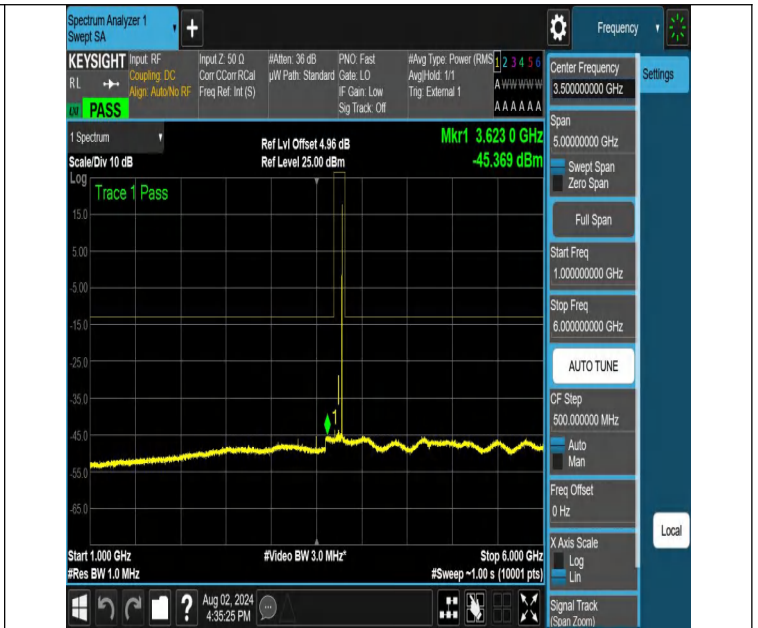


 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-1
000-6000-Ant2-PASS

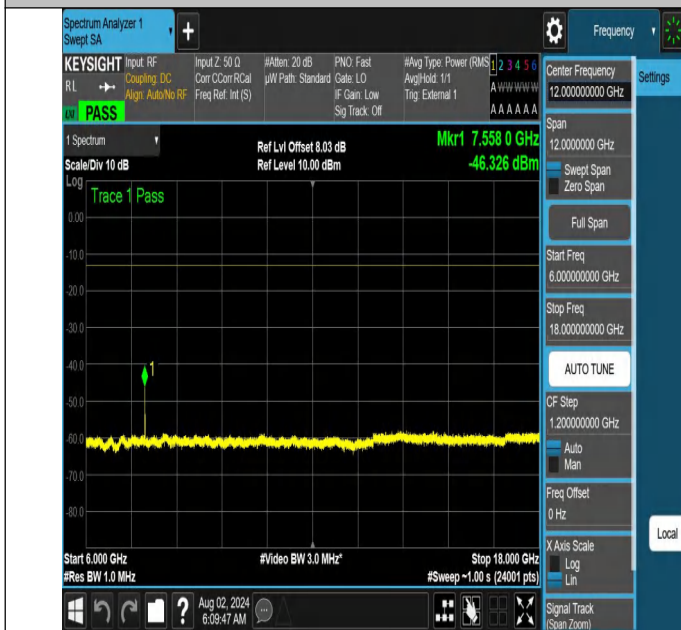

 
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-
6000-18000-Ant2-PASS

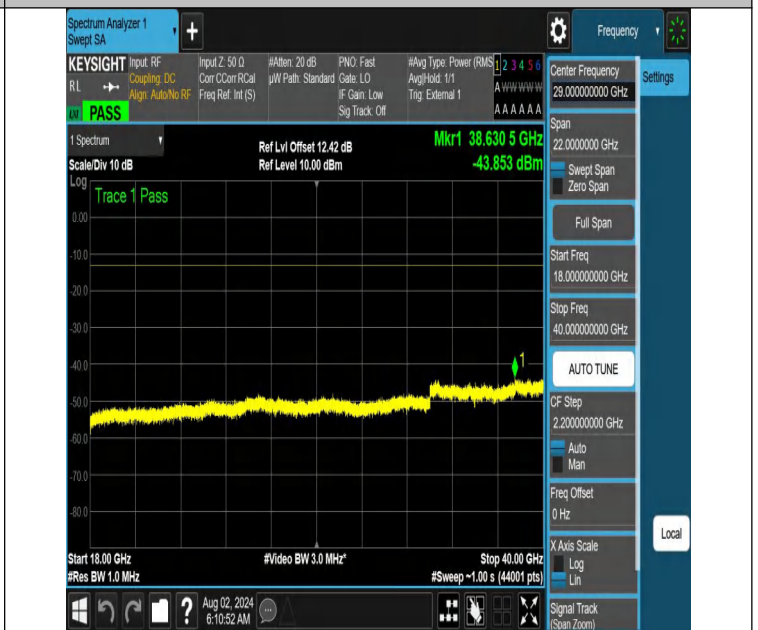

  
NTNV-N78-3700-3800-PC2-30-80-L-CP-QPSK-Edge_1RB_Right-1
8000-40000-Ant2-PASS

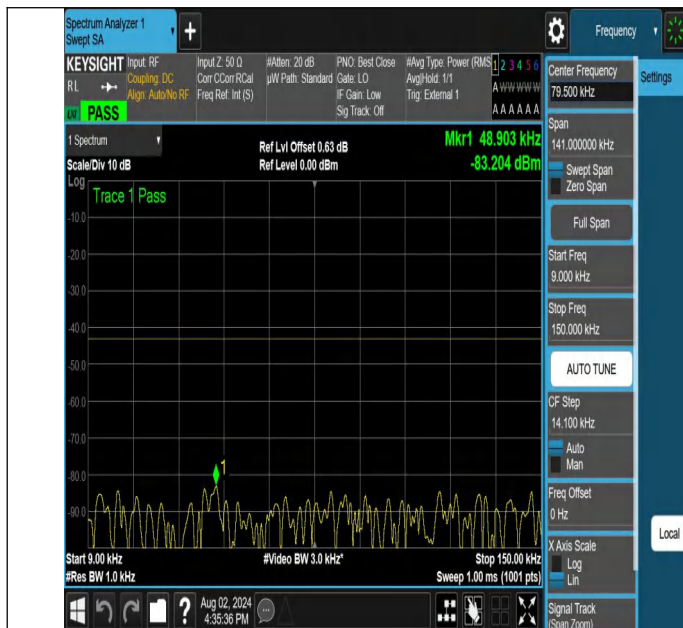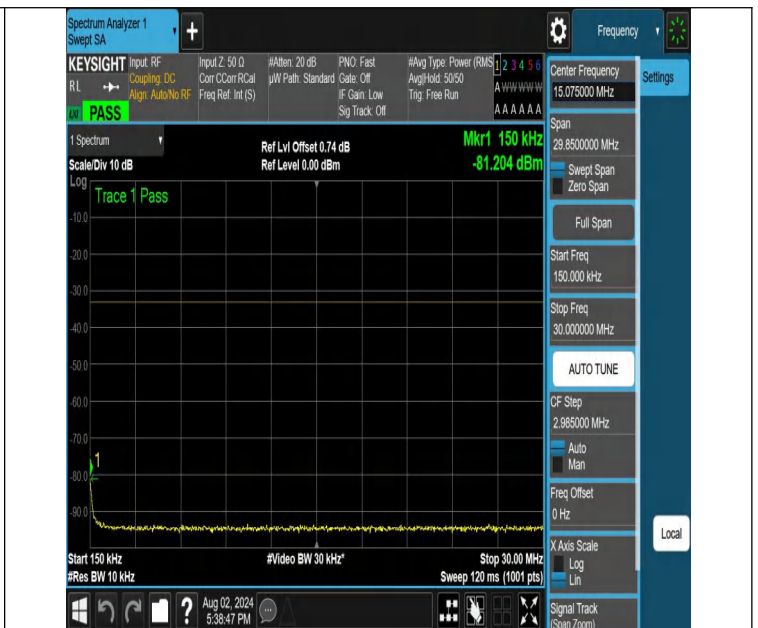NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-0
.009-0.15-Ant2-PASS

 
NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-0.
15-30-Ant2-PASS

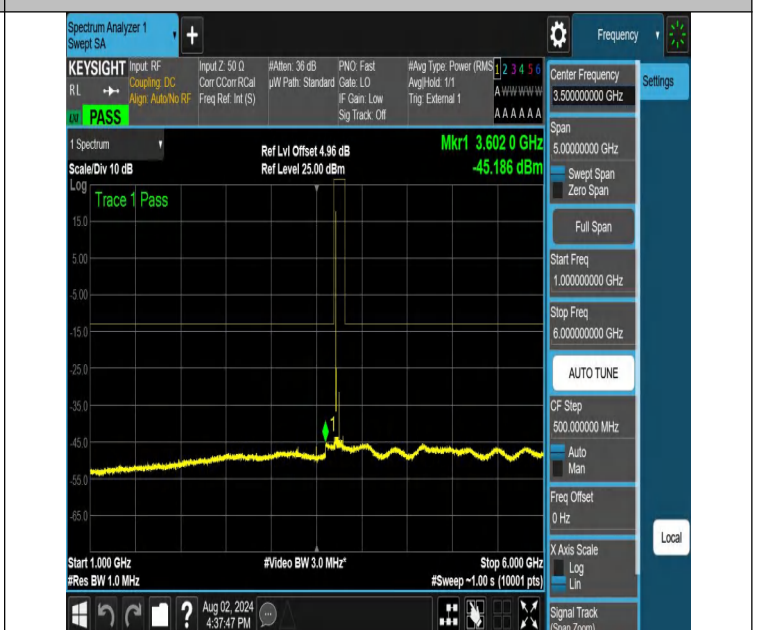NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-3
0-1000-Ant2-PASS

 
NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-1
000-6000-Ant2-PASS

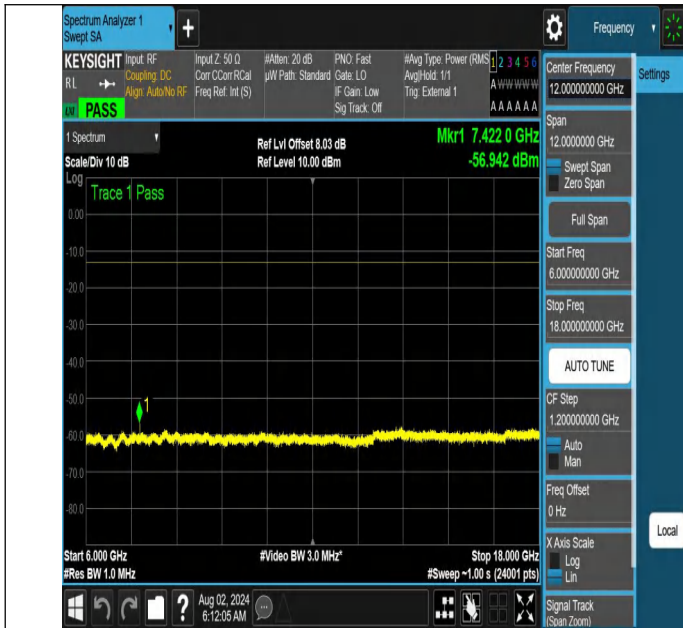

 NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-6
000-18000-Ant2-PASS

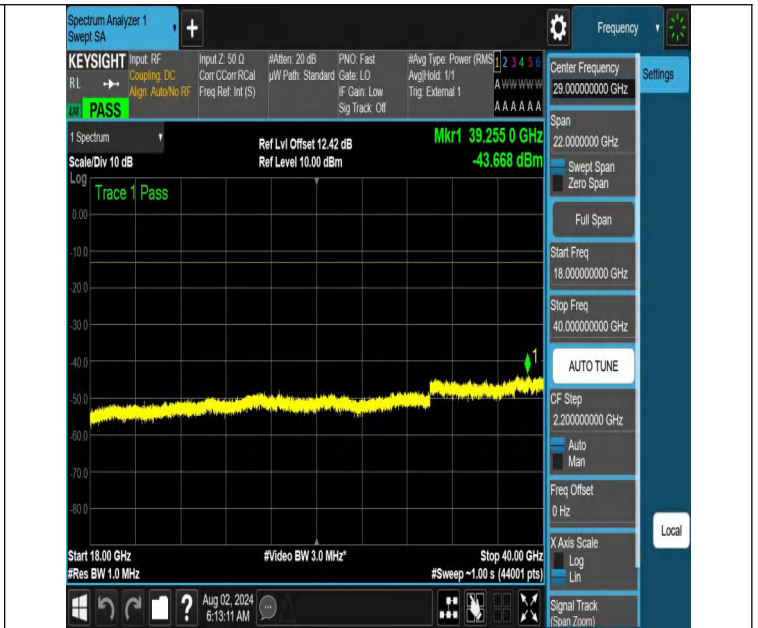

 
NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Left-1
8000-40000-Ant2-PASS

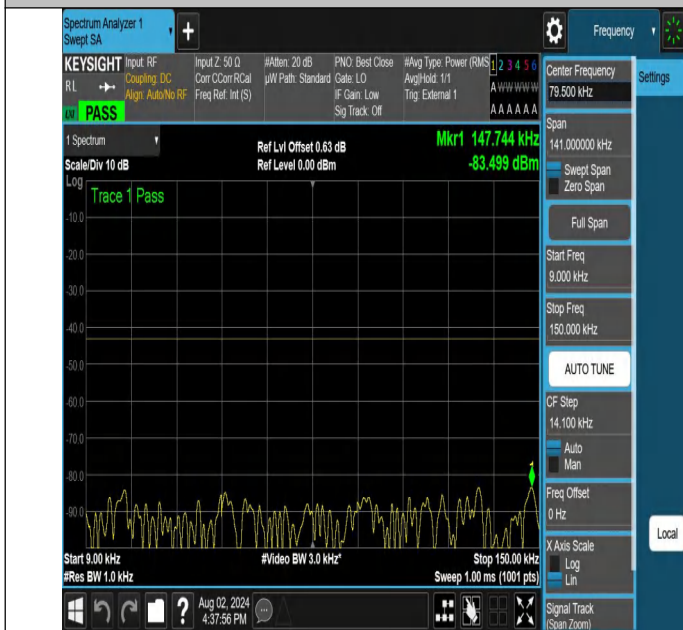

NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-
0.009-0.15-Ant2-PASS



 
NTNV-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-
0.15-30-Ant2-PASS

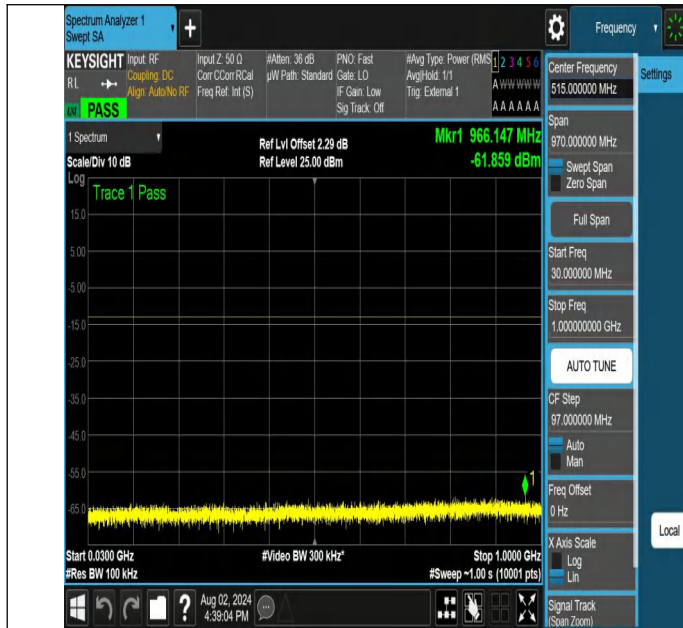


NTVN-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-30-1000-Ant2-PASS



 NTVN-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-1000-6000-Ant2-PASS

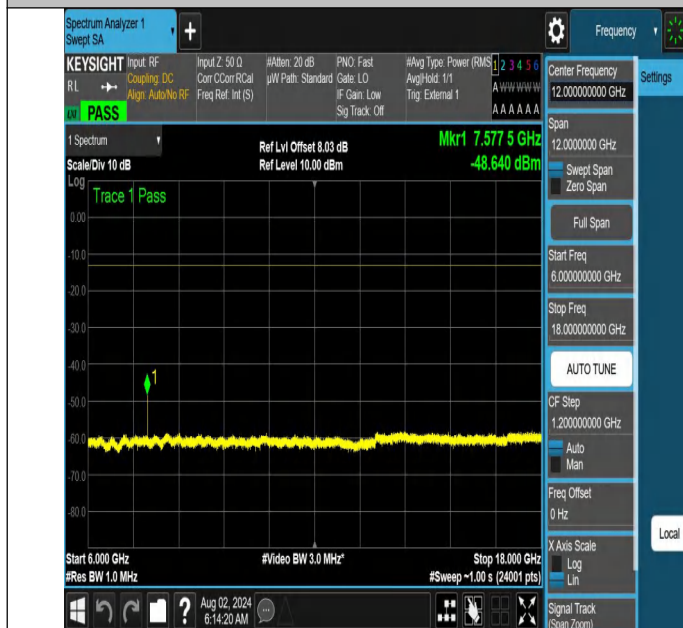

 NTVN-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-6000-18000-Ant2-PASS

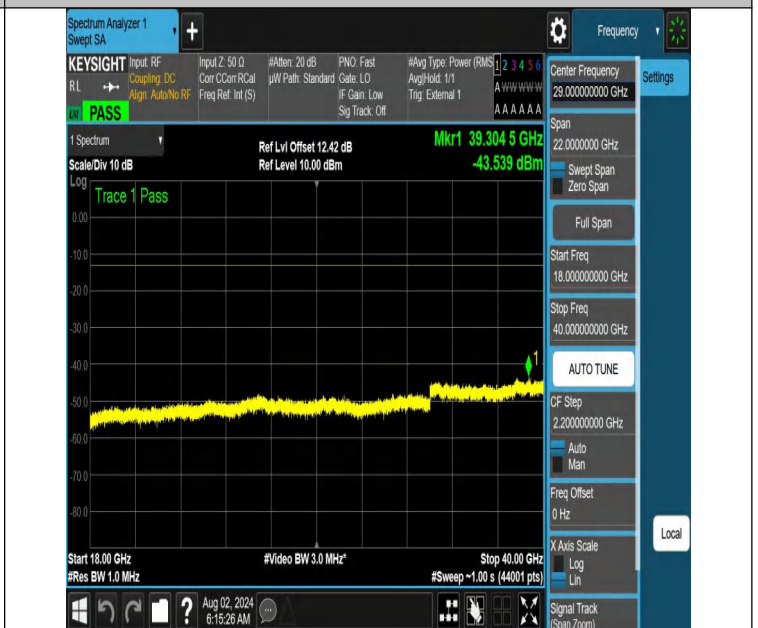

NTVN-N78-3700-3800-PC2-30-80-M-CP-QPSK-Edge_1RB_Right-18000-40000-Ant2-PASS