



Description



1. Bluetooth indicator light
2. Previous track button
3. Center button (play/pause/off)
4. Next Track button (next track)
5. 3.5 mm audio port
6. USB power charge port

Functions

Bluetooth® V2.1 with EDR for superior wireless performance
Supports A2DP V1.2, CLASS 2. Powered by 5V DC
Transmits up to 33 feet (10 meters) away
Automatic Bluetooth discovery and reconnection

Package Includes

Bluetooth Music Receiver
Stereo RCA audio adapter cable
Stereo Universal audio cable 3.5mm
USB power cable with wall charger adapter
User Manual

Set up and Connection

1. Connect the 3.5 mm audio cable to the Bluetooth Music Receiver's earphone jack, (optionally, the 3.5mm to RCA adapter can be used if needed) and plug it into the speaker's audio input port.
2. Insert the USB power cable, the indicator light will flash quickly meaning the device is in pairing/discovery mode and is searching for a Bluetooth enabled device.
3. While in the Bluetooth pairing mode, enable the Bluetooth function from Bluetooth enabled devices such as a smartphone, iPhone, iPad, tablet, Bluetooth computer or other devices with Bluetooth functionality.
4. Search the Bluetooth device list and find "BT BOX" and press "connect". If a password is needed the default password is: 0000. After successfully pairing, the blue LED light will flash slowly, which means the Bluetooth Music Receiver has been made successfully.
5. You can now select, play and stream music from the device wirelessly.

You can disconnect the Bluetooth connection by holding down the Center button. The indicator light will quickly flash again, meaning it has returned to discovery mode. To re-establish the connection, press "connect" on the "BT BOX" in your mobile device's Bluetooth list. After leaving and returning back within Bluetooth range the Bluetooth device may automatically reconnect.

Button Functions

You can PLAY/PAUSE the music by quickly pressing and releasing the Center button.
You can select the PREVIOUS TRACK by holding down the PREVIOUS TRACK (-) button.
You can select the NEXT TRACK by holding down the NEXT TRACK (+) button.

Note

1. Please make sure the Music Receiver is plugged in before and during use.
2. Keep the device away from high temperature and damp environments. Place it in a ventilated environment. Do not expose to rain and shock.
3. Do not open the cover of the case to prevent from electrical shock or any other accidents.
4. If any metal part or liquid drops inside it, turn off the power. It can be used only after examination by a professional.
5. For best results, turn off the device and disconnect the power cable when not in use.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.