




GET STARTED

HEADSET OVERVIEW


① gogo earbuds

Indicator light

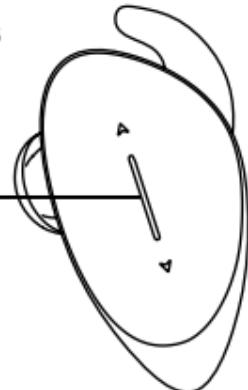


Left ear

Indicator light

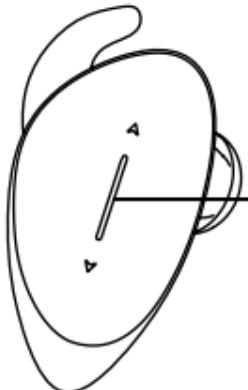


Right ear


Charging pin

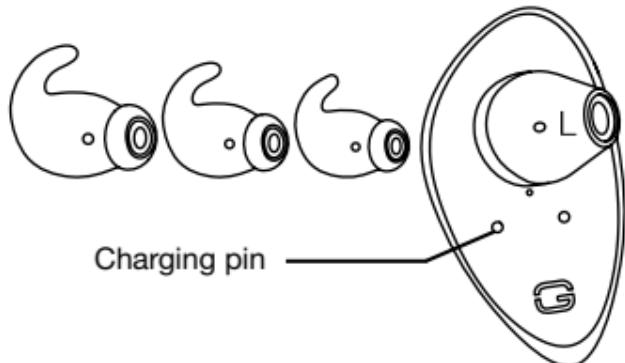

Heart rate sensor

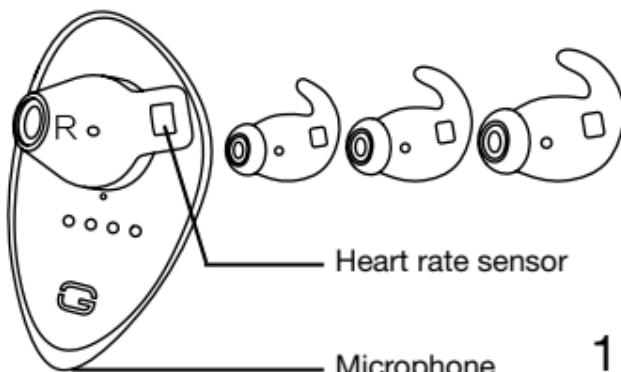

② Charging box

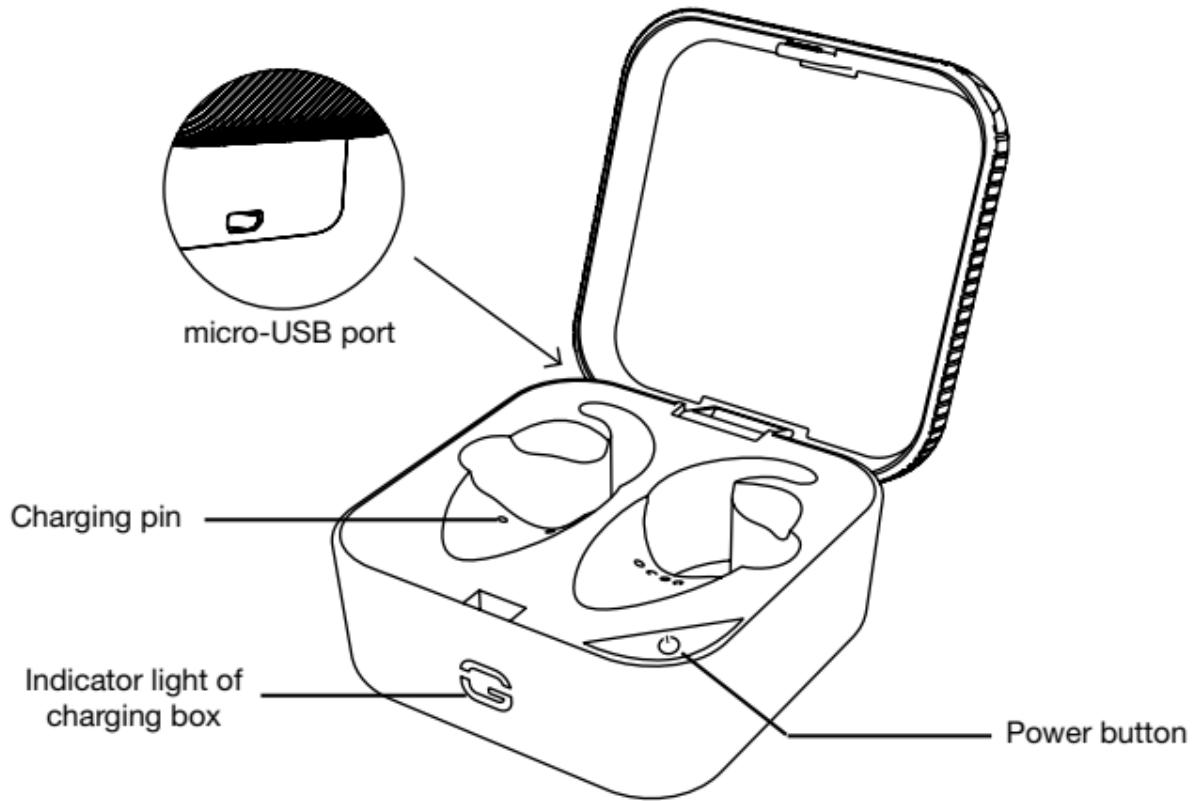

HOW TO CHARGE

Earbuds:

Press the power button as shown in the picture to turn on the charging box for charging the earbuds.

Charging box:

Connect and charge the charging box with a computer via the USB port at the back of the box.




* We highly recommend you to fully charge the earbuds and the charging box before the first usage.

SYNC MUSIC


- ① Connect the charging box to the computer via USB.
- ② Put gogo earbuds into the charging box.
- ③ Open the disk of gogo and copy the music needed into the “MUSIC” folder.

* Only support the file format of MP3.

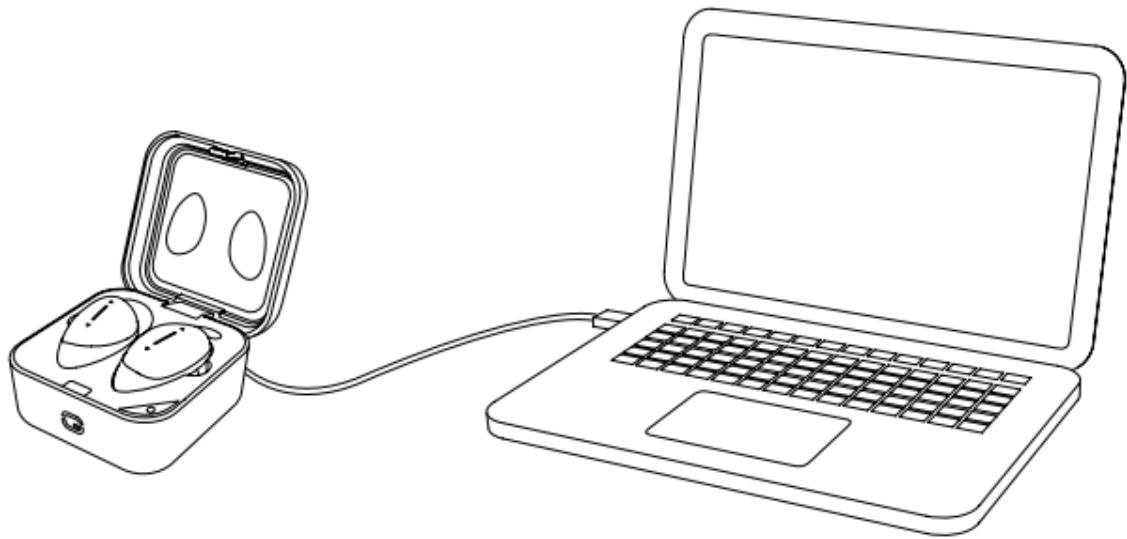

HOW TO WEAR

As shown in the picture, put your earbud into the external auditory canal, and let the tail of the earbud fit the concha.

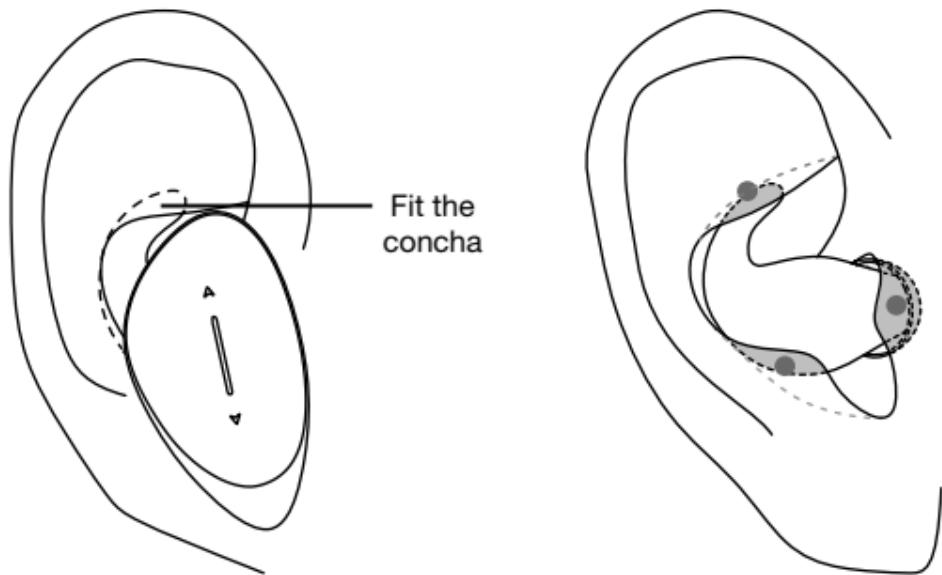


* There are Voice Prompts when using gogo, we highly recommend you to put the earbud on before using.

POWER ON/OFF

Power on: Press and hold the two earbuds for 4 seconds respectively, until a Voice Prompt occurs and the lights flash green.

After the two earbuds are successfully turned on, they will automatically connect with each other. A Voice Prompt will occur if the connection is successfully done.

Power off: Press and hold the two earbuds for 4 seconds respectively, until a Voice Prompt occurs and the lights flash red.

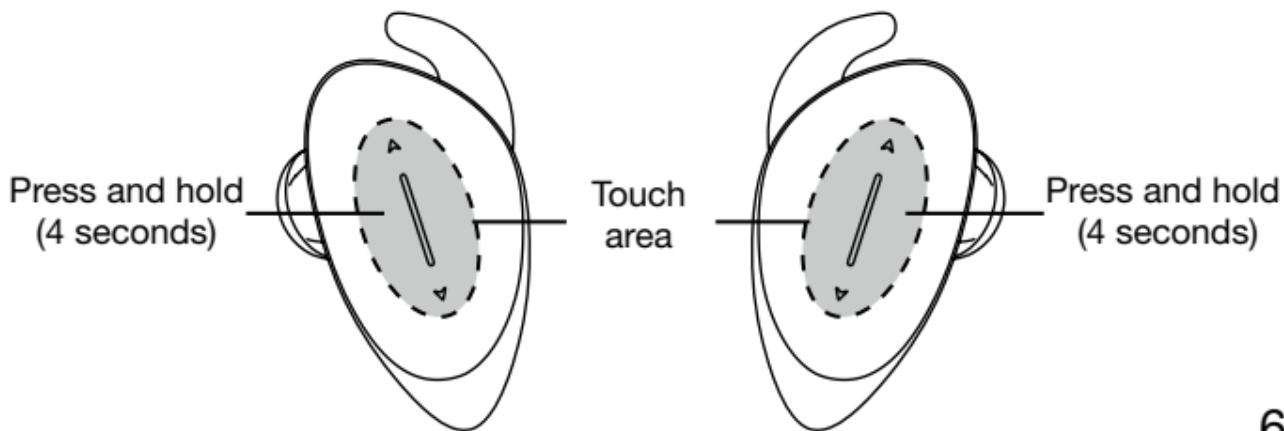


BASIC FUNCTIONS

Play /pause music




Double-tap

Start /pause training

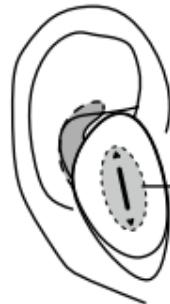


Tap four times on the right ear

Volume up

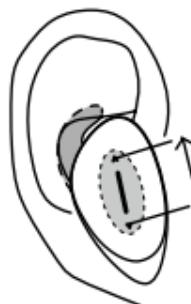


Swipe upwards

Volume down

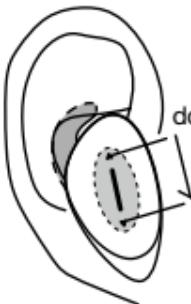


Swipe downwards

Next song

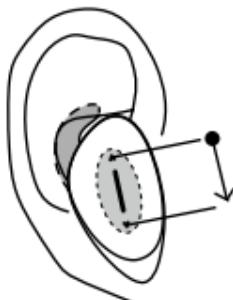


Press and hold the upper part until a notification sound occurs, then swipe downwards

Previous song

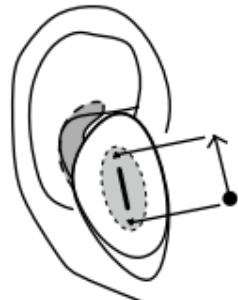


Press and hold the lower part until a notification sound occurs, then swipe upwards

Answer call

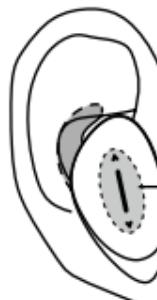

Double-tap on the right ear


Reject /end call

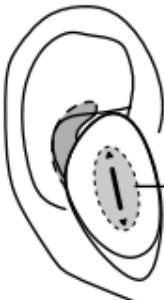

Press and hold on the right ear

BLUETOOTH®

- ① Turn on the earbud on the left ear as normal. Press and hold the right ear for 8 seconds until the connection Voice Prompt occurs and the lights flash blue, which means your gogo can be discovered by other Bluetooth devices.
- ② Turn on the BLUETOOTH and pair gogo to your device.

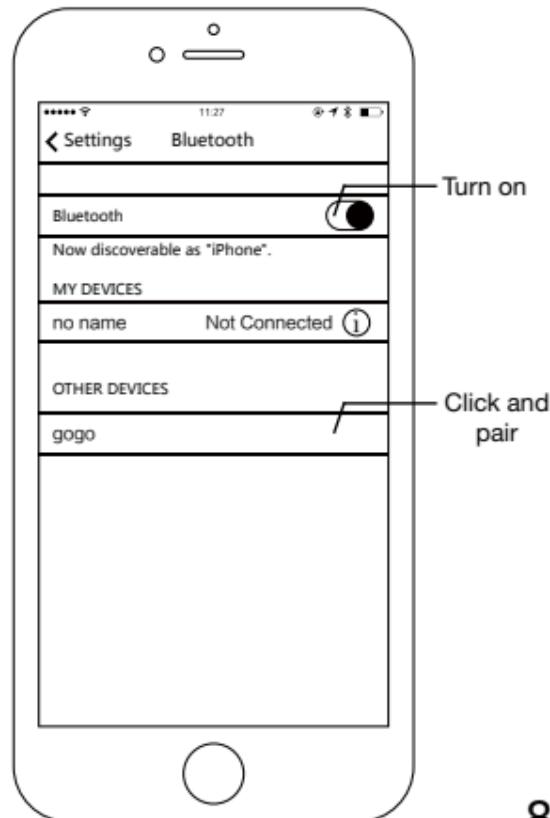

DOWNLOAD THE APP

Scan the QR code below and download “Go Sport” App. With “Go sport”, you can check your training data, view the music list in your gogo and change settings.



Download

WARNING!

- Before putting on the headset, turn the volume control to its lowest level, put the headset on, and then slowly adjust the volume control to a comfortable level.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product.
- This package contains small parts that may be hazardous to children. Always store the product out of reach from children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the products, as this may cause short circuits which could result in a fire or electric shock.
- Avoid exposing your earbuds and charging box to rain, moisture or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Only recharge your gogo's battery with the provided approved charging box designated for gogo.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.

AFTER-SALES SERVICE

Limited One (1) Year Warranty with proof of purchase. Exempt from warranty are limited-life consumable components subject to normal wear and tear, e.g. ear gel, ear hook, batteries and other accessories.

This Warranty does not cover defects or damages that result from improper storage, misuse or abuse, accident or neglect.

You may call us at 400-8819-700 between 10:00am – 6:30pm (Beijing) Monday through Friday or e-mail us at service@g-wearables.com

For more information, please go to our website: www.g-wearables.com

Address: 16F, Tower B, Ding Hao Electronics Building, No.3 Zhongguancun Haidian Street, Haidian District, Beijing, China

FCC Compliance

FCC ID: 2AEJBGH-B

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.