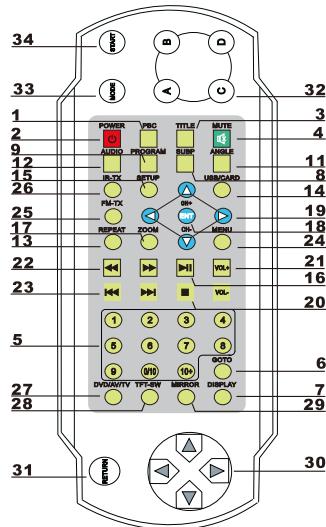


**J.Description for the pressong-key of remote controller**

**Key**  
1.Root menu/PBC  
2.Power  
3.Title menu  
4.Mute  
5.Number key  
6.Goto  
7.Display  
8.Subtitle  
9.Program  
10.Angle  
11.Audio(R/L)  
12.Repeat  
13.USB/CARD  
14.CARD  
15.SETUP  
16.PLAY/Pause  
17.Zoom  
18.Enter

**Key**  
19.Direction key  
20.Stop/Return  
21.Vol +/-  
22.Fast forward  
23.Previous/Next  
24.Menu  
25.FM-TX  
26.IR-TX  
27.DVD/AV/TV  
28.TFT ON/OFF  
29.MIRROR  
30.Game Direction  
31.Game Return  
32.Game A/B/C/D  
33.Game Select  
34.Game Start

## K. Basic operations

### Power button

#### 1. Common buttons

Click POWER button on the panel to open main menu, power light is closed, click again POWER button then turn off, power light is on

#### 2. Touch buttons

Long click POWER button on the screen to open main menu, power light is closed, click again POWER button then turn off, power light is on.



### Place the disc

1. In state of power on, place the disc to top slot of player, the disc is self-started after detection.

2. Insert disc (the side with label to back side)

### Take out disc

1. common button: under DVD/USB/SD, click "▲" button on the panel, disc pop up half automatically.

2. touch button: under DVD/USB/SD, long click "●" button on the panel, disc pop up half automatically.

3. Take out disc and back to the original packaging to save.

**Caution:** ● Be careful to take the disk, wrong operation shall damage the player;

● Do not damage the disk, or the player shall be damaged;

● Please keep the side with label upward if it's a single-side disk;

● Be careful in playing two-side DVD disk for the two sides of the disk are available for playing;

● Do not scratch the surface in taking the disk.

### USB/SD instruction

1. This player supports external USB/SD memory card to play (audio/video/picture/e-book/game)

2. In state of power on to read USB/SD, select USB/CARD on remote control to enter, this player will detect (audio/video/picture/e-book/game) automatically to order playback.

3. Through PC internet download to copy to USB/SD. Audio: MP3/WMA/ASF /WAV /AAC, video:/AVI /3GP/SWF/MPG/VOB/MPEG4. Picture: JPG /PNG/JPEG,e-book, TXT, game: through this website: <http://www.native32.com> to download Native games.

**Caution:** ● Do not pull off the external memorizer when the player is connected with power, otherwise the external memorizer or the player shall be damaged;

● Individual MP3 player couldn't play through USB device.



### L. Remote Control Explanation

KEY	Basic description
Power key	Click POWER button to turn on/off.
▶   Play/Pause	In normal playing state, press the key to pause to play image/sound. Further press the key to resume to play normally.
◀◀ Fast backward ▶▶ Fast forward	Press Fast backward key, the image shall be played backward quickly, at the time, no sound shall be outputted, press the key successively, the player shall play the disk repeatedly as per the following method; Press Fast forward key, the image shall be played forward quickly, at the time, no sound shall be outputted, press the key successively, the player shall play the disk repeatedly as per the following method;  Fast forward (backward) → X2 → X4 → X8 → X20 ↑ ————— Play ————— ↓
◀◀ Previous ▶▶ Next	Press the Previous key to select the previous track to play. Press the Next key to select the next track to play.
■ ↵ Stop/Return	Under DVD function or playing disc, click "■ ↵" stop/return button, then stop, click "play" button to resume play, in stop state, click again "■ ↵" button then back to the previous or exit to main menu. Playing dvd or vcd2.0, this button for return to menu, in menu status this button for stop, in games state, press this button then return to game menu. Under playing USB/SD, press stop/return button, then stop and return to multimed-menu, note: in playing disc, return/exit function is relevant to disc copy format.

**USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER**

KEY	Basic description
Program	<p>Setup of programming play: arrange the playing order of disk and then the player shall play the disks as per the arranged order.</p> <p>Note: the program key shall not be available unless PBC is closed, program is not allowed for MP3 disks; DVD disk should be programmed for its track time and VCD disks should be programmed for its track number. Finally, select Play key and the player shall play the disks automatically as per the arranged order, at the time, the number keys are not available, only the previous/next key could be used. If you want to cancel the programming function, press Program key to enter the menu interface and select Clear key and then press Enter key to confirm.</p>
Repeat	<p>Repeat play</p> <p>Repeatedly play the selected title/chapter (DVD) or track/album (VCD/CD disk).</p> <p>In playing DVD disk, press the key successively to select the title or chapter of DVD to play. For other types of disks, press Repeat key successively to select one track or the album to play repeatedly.</p>
MENU PBC	<p>In playing VCD2.0 or SVCD disk, the PBC menu function could be achieved by press PBC key, the disks could only be played in order if PBC is closed. In playing DVD disk, press the key to stop playing and return to the root menu of disk, press direction key or number key to select your desired contents and press Enter key to confirm, the player shall start to play as per the title or contents you setup.</p> <p>Note: PBC is not available in playing Mp3, CD or VCD 1.1 disks.</p>
Title	Press Title key to stop playing and return to the title menu of disk, press direction key to select your desired title and press Enter key to confirm to enter the chapter menu.

**USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER**

KEY	Basic description
Display	<p>Press Display key for the first time, the LCD shall display: (DVD state)</p> <p>1) Disk format, current title number and total title number; 2) The Current chapter and total title number; 3) The playing of current title.</p> <p> Title 1/1 Chapter 1/29 00:00:12</p> <p>Further press the key to display: Display the current language and the language number supported, channel type, subtitle display language and angle type.</p> <p> 2/3English 2CH OFF  NO</p> <p>Press the key for the third time to display nothing. The display (OSD) in playing VCD disk is as follows:</p> <p> TRACK 2/15 PBC 00:00:12</p> <p>Display the disk format, current track and total track number, mute mode, PBC mode, and the track number of repeat mode, and the track playing time. The OSD of MP3 and CD disk is same with VCD except that VCD disk has PBC option.</p>
Mute	Firstly press the Mute key, the player shall play the image without sound output, further press the key to cancel the mute function and resume to play normally.

**USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER**

KEY	Basic description
Zoom	<p>Press Zoom key to zoom in the image. In playing, press Zoom key, the zoom mode shall be cycled as per the following order:</p> <p>ZOOM 2 → ZOOM 3 → ZOOM4 → ZOOM 1/2 → ZOOM 1/3 → ZOOM 1/4 → ZOOM: OFF</p> <p>↑ ↓</p> <p>In Image Zoom state, press direction key "↑ ↓" to move the image.</p>
Goto	<p>GOTO: start to play from the selected time. Press GOTO key on the remote controller and a time selection dialog box shall be skipped out, move the cursor to the time number and input the time you want to select and then the player shall start to play from the selected time.</p> <p> TITLE 1/1 CHAPTER 1/29 00:00:12</p> <p>Note: the setup of VCD disk is same with DVD disk, the input time couldn't exceed the longest time of the disk.</p>
Audio	<p>DVD disk supports eight languages at most, repeatedly press Language key to select the different language to play. If the disk hasn't the language menu, the user may also change the language by menu. In playing VCD or individual Mp4 disk, press audio key to channel mode. Note: Audio function is not available for MP3, CD, WMA, JPEG and individual MP4 disk.</p>
Subtitle	<p>Open/close the subtitle, select the subtitle on DVD disk and it's displayed on the TV screen, which is related to the format of disk. Subtitle is available only in the condition of the disk having subtitle function, the subtitle function is achieved by the Subtitle key on the remote controller, press the key successively to select different subtitles.</p>

**USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER**

KEY	Basic description
Vol+ Vol-	Volume adjustment key Adjust the volume by the Vol+ and Vol- key on the remote controller
Setup	Press the key to enter the setup menu to set up system, language, audio, video, loudspeaker and dolby digit, in setup menu, press the key to exit the menu interface.
Direction key	Up/Down/Left/Right key Press the keys to select the disk content to be played and item to be set up as well as to select the image part to be zoomed.
Angle	Change the angle, DVD disk may record multiple scenes that are recorded from different angle, in playing, the user may select any one angle to watch. 1. Press Angle on remote controller to select angle 1 and the top right corner of the TV shall display:  1/4 2. Further press Angle on remote controller to select angle 2 and the top right corner of the TV shall display:  2/4
1~0	Press any number key to select the track or chapter to be played and set up the playing time. The player features number key direct-selection function, press the your desired number to select. For example: select the 386 <sup>th</sup> track, first press number "3", and then press number "8", finally press number "6", the player shall play the 386 <sup>th</sup> track. Note: number key direct-selection function is available for Mp3, Mp4 and DVD disks only.
10+	For the track number bigger than 10, press the key first, the LCD will display 10+ and then press other number key to select, press the key in turn to achieve multiple modes

**USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER**

KEY	Basic description
USB/CARD	Press this key enter the selecting menu of DISC/USB/CARD, use direction key and ENTER key select DISC、USB、CARD to play also can select in SETUP MENU.
TFT MENU	The selecting key of TFT function can coordination with the direction key to adjust the brightness, contrast, color, definition, hue and other modes. After adjusting the parameters, press TFT MENU key to return and the set parameters shall be saved.
DVD/AV/TV	Video/AV switching key. Press the key, the player shall switch DVD state into AV-IN state, the video signal inputted by the video terminal shall be displayed on the TV screen. If there is no signal inputted, it shall be blue screen. Further press DVD/AV key to switch AV-IN state into DVD state.
TFT ON/OFF	TFT-LCD switch key ,when you want to listen to the music ,press this key can turn off the screen meanwhile enter the music mode. Press this key again then can turn on the screen.
IR-TX	IR-TX switching key, press this key switch to infrared mode, can switch between ACH,BCH, OFF. Note: when open the infrared ,speakey not have voice output,when switch to OFF then have voice output.
FM-TX	FM-TX key ,press this key can enter the FM-TX function, use direction key can adjust the radiation rate. Press this key again then exit the FM funciton. Note: when open FM,speakey not have voice output ,when switch to OFF then have voice output.



### M.Menu Setting Explanation

Press menu button of remote control to show TFT settings on main menu. (see Figure 1)

TFT setting include color adjustment, TV, menu, function, volume  
Press “ $\Delta$  /  $\nabla$  /  $\leftarrow$  /  $\rightarrow$  / “ buttons to Select then “ENT” confirm,  
press again MENU will exit TFT setting.

Figure 1


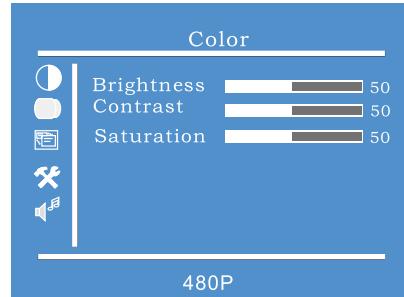


Figure 2



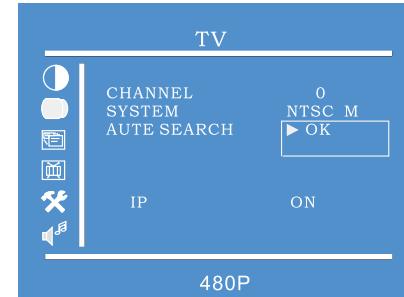


## N. Setup Explanation

Press Setup key and the LCD will display the picture as (Figure 3), press [ $\blacktriangleleft$ ] and [ $\triangleright$ ] key to move the white bar to the designated position, press Enter to confirm to display its submenu, or press [ $\triangleright$ ] key to enter its submenu directly.

Note: no matter in which state, press " $\blacktriangle$ "/" $\blacktriangledown$ "/" $\blacktriangleleft$ " and " $\triangleright$ " key to move the white bar and press Enter key to make it available, press [ $\blacktriangleleft$ ] key to exit the submenu at the right of LCD and at any time press Setup key to exit the Setup system.

Special Tips: for the company has many counterpart products, the figure is for reference only, all is subject the real product! The setup methods described in this instruction are for their common parts, other functions are recommended to use the default setup.

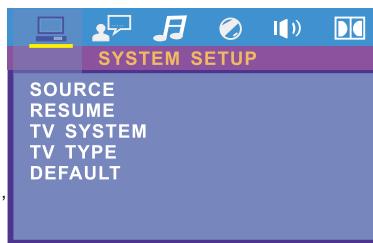

### 1. Source System (see Figure 4)

- (1) Press Setup key and the LCD will display the setup picture of the system, select Source item and press Enter key then the LCD will display the picture as figure2.
- (2) Press key to enter the submenu. If you want to play the files on USB, move the white bar on USB item then press Enter key to confirm. If you want to play the files on MMC/SD/MS just move the white bar on CARD item.
- (3) Press Setup key to exit the system.

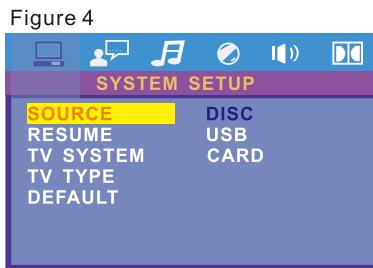


Figure 4