

Quick Start Guide  
For  
Tablet TG08MK

### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The sound system of this product is the amplifier function, not the headphone jack

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## **CAUTION**

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

### **Attention: Teachers, Parents and Adult Supervisors**

This product is an educational tool designed for school children, ages 6 and up. There must be supervision by an adult on school children under 10 when using this tablet. It is a must to have a thorough explanation to students on safe and proper handling of the tablet, power supply, battery pack, and power cord.



***Be sure to keep the power cord away from younger children***

Please ensure that students understand the following:

- » As with all electrical products, precautions should be observed during handling and use to prevent electric shock. The power supply (adapter) should not be handled by the children.”
- » Emphasize to students that this device is an educational tool and not a toy. The tablet, power supply, battery pack or power cord should not be dropped, crushed, stepped on or otherwise abused.
- » Ensure students understand the safe and proper handling of power cord and power supply. Misuse could result in serious injury.

- » The teacher, parent or adult supervisor should periodically inspect the tablet; power supply and power cord for damage and replace it, if necessary.
- » Students should report any damage or loose parts to their teacher, parents or adult supervisor, immediately.
- » Do not leave the tablet plugged in or “on” when enclosed in a non-vented container, such as a school backpack, as overheating may occur.
- » It is recommended that students should take a 5-minute break every 30 minutes of use.

## Safety Precautions

 

 

The following are lists of precautionary measure the students must understand before using this tablet inside the classroom or home environment:



1. Do not place near the fire or other sources of heat.
2. Do not expose to magnetic fields.
3. Do not expose to direct sunlight.
4. Do not expose to rain or moisture.
5. Do not place heavy objects to add heavy pressure on the tablet.
6. Do not drop the tablet.

## Package contents

Carefully unpack your box and take out the items listed below. If any of the items are missing or damaged, please contact your dealer immediately:

· One tablet	
	
· One USB charger	· One USB 2.0 cable
	
· This guide	
	

## Tablet layout



No.	Name	No.	Name
1	Touchscreen	4	Audio Combo jack
2	Front facing camera	5	Micro HDMI
3	Microphone	6	Micro SD card slot
		7	Micro USB 2.0 OTG port (Type B)



No.	Name	No.	Name
1	Power lock button	4	Flip-up holder
2	Volume up/down	5	Speaker
3	Rear facing camera		



## Charging your tablet

If your tablet is just being unpacked from the box, you need to charge the tablet first. It will take around 4 to 5 hours to be fully charged.

1. Take out the provided USB cable. Plug the USB head of the cable into the adapter.



2. Plug the micro USB head of the cable into the micro-USB port on your tablet.



3. Plug the adapter into a wall-socket.

## Powering ON/OFF your tablet

### To power on your tablet

Press and hold the power button down until the screen turns on.

### To power off your tablet

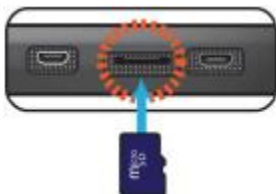


To turn off your tablet, follow these steps:

1. Press and hold the Power Lock button.
2. Touch Power off from the menu.
3. Touch OK to power down your tablet.

## Inserting a storage card

Your tablet supports micro-SD cards with maximum storage space up to 32G. You can insert the micro SD card and pull it out without powering down the tablet. To do so, follow the steps below.



### Install your Micro SD Card

1. Hold your tablet with front side up.
2. Insert your micro SD card in the direction as shown.

### Remove your Micro SD Card

1. Push and release the micro SD card. This will unlock the card.
2. Pull out the micro SD card.

## Flip-up holder

The holder allows you to adjust the viewing angle. There are 2 angles to choose from.

1. Just flip the holder up as show below.



2. Slide the holder down to the angle you want, as shown below.



3. The holder shall click to the position and your tablet is ready now.

## Specifications

<b>Processor</b>	<ul style="list-style-type: none"><li>● MTK8168, Quad-core</li><li>● 2.0 GHz: 64-bit</li></ul>
<b>Memory</b>	<ul style="list-style-type: none"><li>● LPDDR3</li><li>● Default 3 GB</li></ul>
<b>Storage</b>	<ul style="list-style-type: none"><li>● eMMC</li><li>● Default 32 GB</li></ul>
<b>Wireless</b>	<ul style="list-style-type: none"><li>● Wi-Fi 802.11 ac, 1*1, 2.4GHz/ 5.0GHz (Dual band)</li><li>● Bluetooth 5.0</li></ul>
<b>LCD</b>	<ul style="list-style-type: none"><li>● 8-inch IPS LCD</li><li>● Resolution: 800×1280 pixels</li></ul>
<b>Touchscreen</b>	<ul style="list-style-type: none"><li>● Support 10-points multi-touch</li><li>● Capacitive multi-touch</li><li>● GLS3676</li></ul>
<b>Stylus</b>	<ul style="list-style-type: none"><li>● Passive Stylus(3mm thin-head /hard tip)</li></ul>
<b>Cameras</b>	<ul style="list-style-type: none"><li>● Front: 5M</li><li>● Rear: 2M</li></ul>
<b>Battery</b>	<ul style="list-style-type: none"><li>● Li-polymer</li><li>● 4000mAh, 3.7V, 22.2W or 4000mAh 3.8V, 22.8W</li></ul>

<b>Input/Output</b>	<ul style="list-style-type: none"> <li>● 1 x Micro USB 2.0,OTG port (Type B)</li> <li>● 1 x Micro SD card slot</li> <li>● 1 x Audio Combo jack</li> <li>● 1 x Micro HDMI</li> </ul>
<b>Speaker &amp; Mic</b>	<ul style="list-style-type: none"> <li>● 2 x Build-in Stereo Speakers, 1W, 8 Ohm</li> <li>● 1 x Internal digital MIC</li> </ul>
<b>USB-Charger</b>	<ul style="list-style-type: none"> <li>● DC Output: 5V/2A/10 Watt (Micro USB)</li> <li>● Input Voltage: 100 - 240VAC</li> </ul>
<b>Dimension (WxHxD mm)</b>	<ul style="list-style-type: none"> <li>● Body: 135.3 x 214 x 11.5</li> <li>● Silicon cover (max.) : 223 x 151 x 21</li> </ul>
<b>Weight</b>	<ul style="list-style-type: none"> <li>● Body : 410g</li> <li>● Body+Siliconcover+Stylus: 580g</li> </ul>

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The use of the 5150 – 5250 MHz band is restricted to indoor use only. This restriction will be applied in all member states.