
Smart Fishing Float

User's Guide

Operation instruction

1. Putting the battery into fishing floats

Twist the fishing float and put the battery in it. The light will be turned on automatically when the fishing float works.

* Battery can be bought in fishing gear shop.

2. Connecting the float with Smartphones

Activate Bluetooth by clicking the "search" button. Smartphones can detect the float's signal through Bluetooth.

*When floats are connected successfully, the search mode will turn into fish mode.

Setting Sensitivity

According to the fishing area conditions and fish species, users can adjust the sensitivity by the APP.

1. Main interface

When the fish bites, the interface will flash.

2. Control switch

Sound, light and vibrator's switch can be controlled by buttons

Smart Fishing Float's Parameter

Size	Float foot	Float body	Float tail
Weight	2.5g		
Material	Wood		
Battery life	8hours (Battery's model CR435)		
Signal distance	15m		
System	IOS / Android		
Sensitivity	User can adjust sensitivity according to specific situations.(12 levels)		

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.