




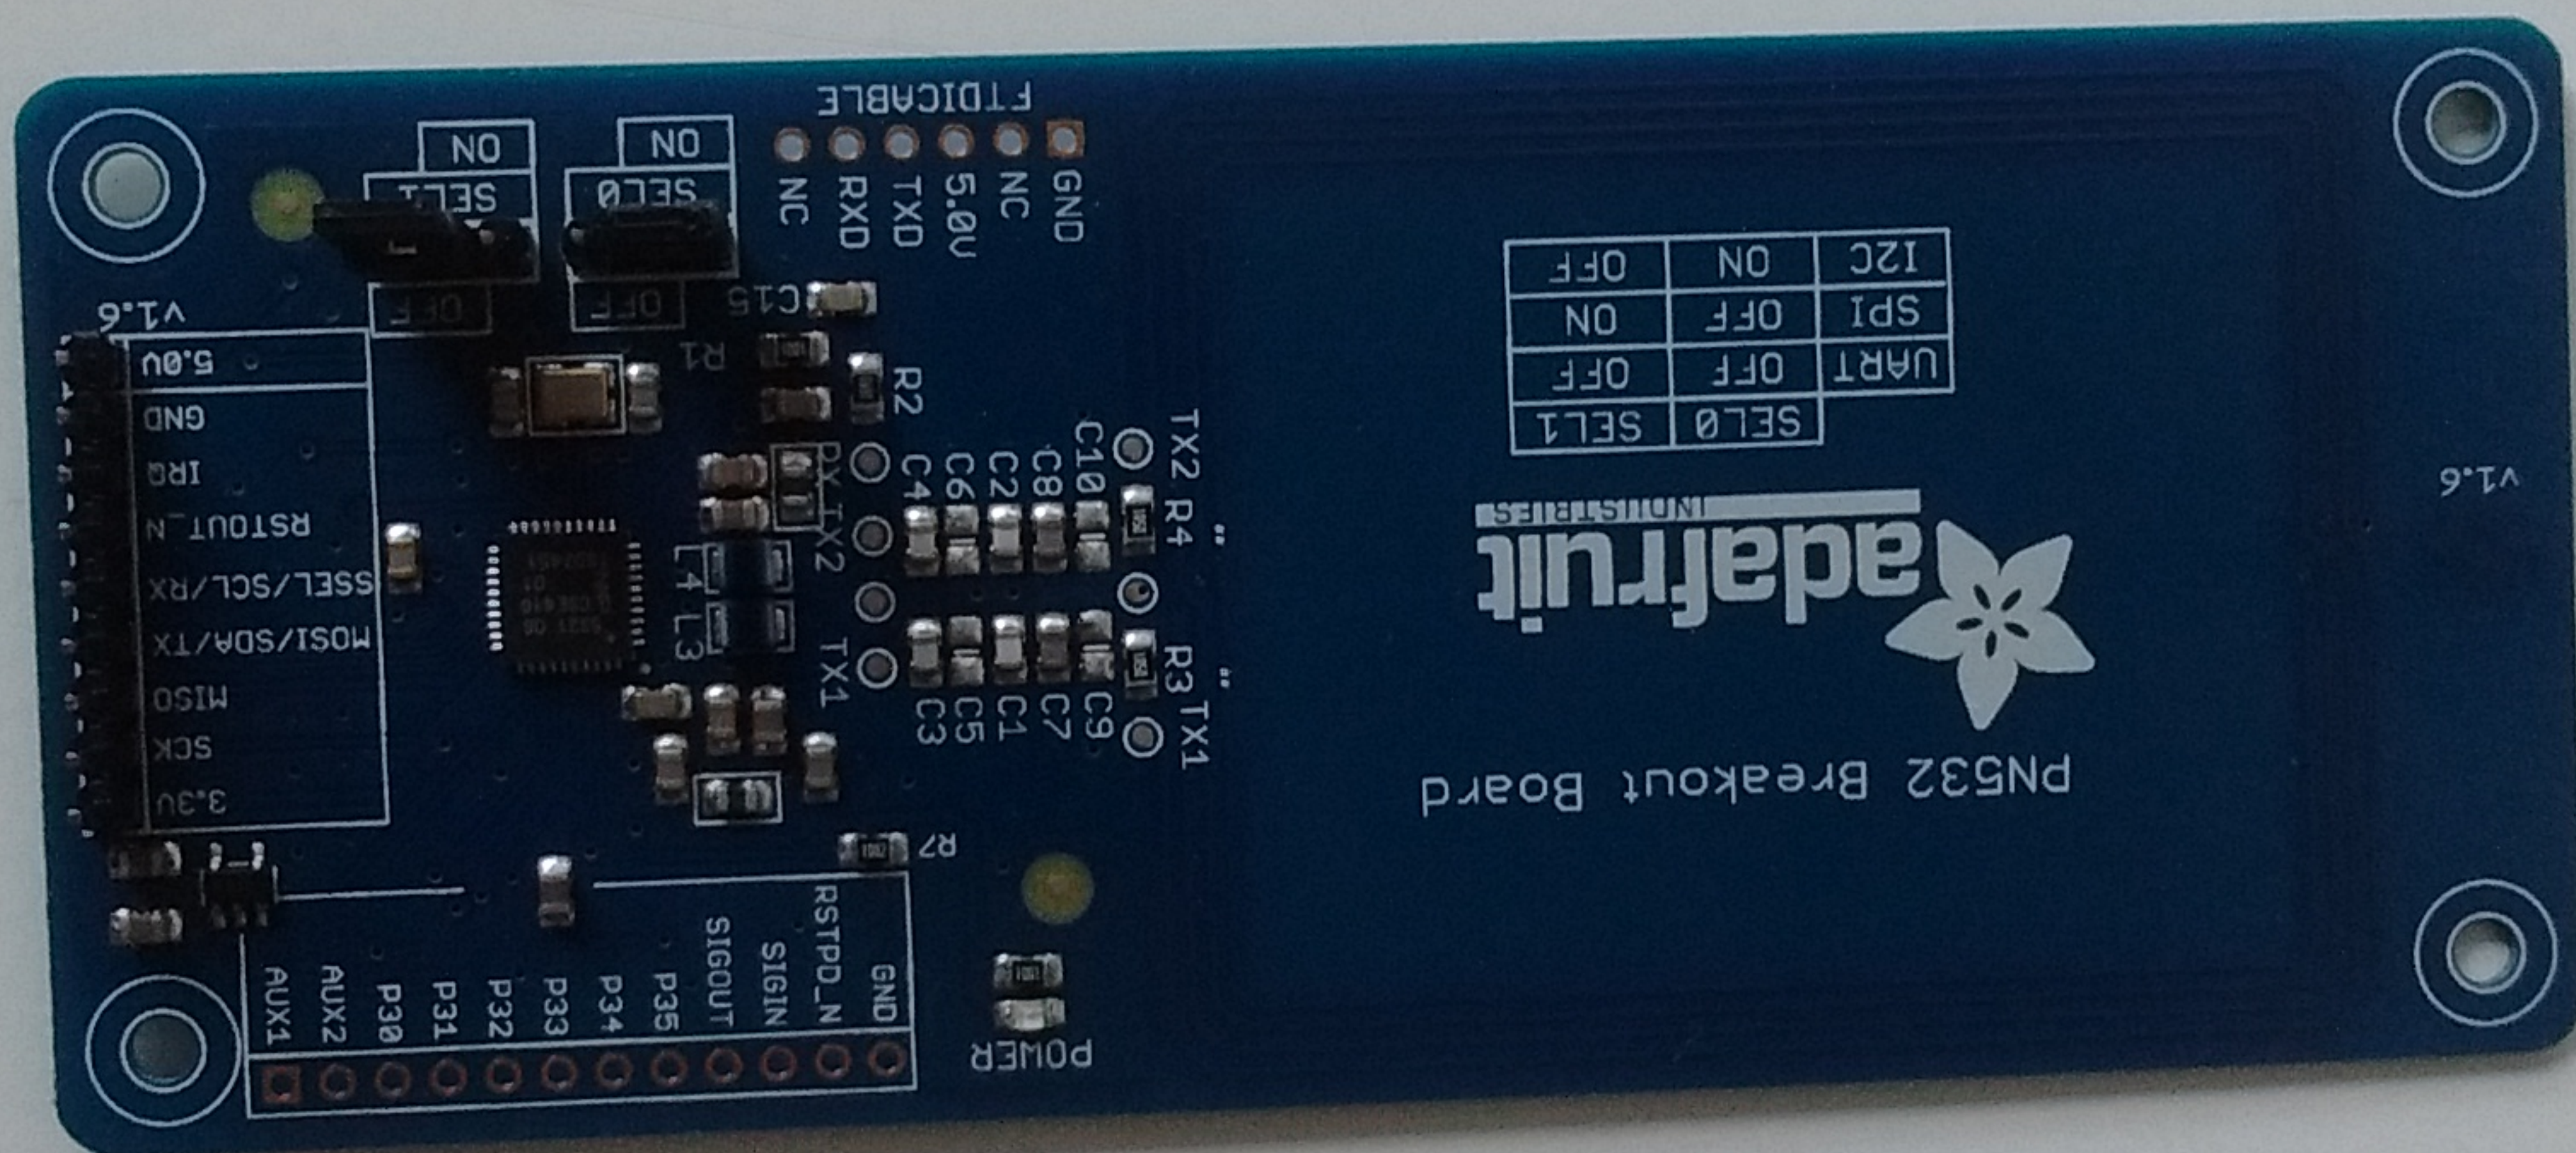

SEL1	OFF	UART	OFF	SPI	OFF	I2C	ON
SEL0	OFF	UART	OFF	SPI	OFF	I2C	ON

adafruit
PN532 Breakout Board

FT232RL
GND
NC
5.0V
TXD
RXD
NC
SEL0
ON
SEL1
ON

TX2 R4
C10
C8
C2
C6
C4
C3
TX1
R3
C9
C7
C1
C5
R2
C15
R1
L4
L3
L2
L1
3.3V
SCK
MISO
MOSI/SDA/TX
SS/SEL/SCL/RX
RSTOUT_N
IRQ
GND
5.0V
v1.6

POWER
GND
RSTPD_N
SIGIN
SIGOUT
P35
P34
P33
P32
P31
P30
AUX2
AUX1



 **taoglas**

PC104
Penta Band Cellular Antenna

1618

