

USER MANUAL


CYBERFISHING

CYBERFISHING

SRS3/SRS8

USERMANUAL

Smart Rod Sensor

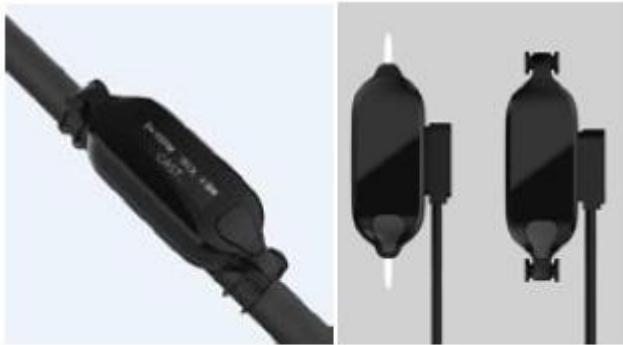

Operation Guide

Please scan the QR code or search the Cyberfishing APP from the Google Play or Apple App Store, download and install it in your smartphone.

Charging Your Smart Rod Sensor

Your Smart Rod Sensor comes with a built-in rechargeable battery and a standard USB charging port. Please charge fully before use.

Attach magnet charging cable to the Sensor and insert the USB to either a PC or power adaptor to start charging.

Power ON/OFF Your Smart Rod Sensor

Power On: Press and hold the button for 3-4 seconds until the

screen displays.

Notice: If you find nothing displayed, your Smart Rod Sensor may have no power, please charge it.

Power Off: Press and hold the button 3-4 seconds when the screen displays time until the screen goes off.

Notice: Your Smart Rod Sensor goes into a DEMO mode if the sensor is charging and you press the button for 10-11 seconds. To turn off the DEMO mode disattach charging cable then press the button for 3-4 seconds to exit the DEMO mode, then press the button for 3-4 seconds again, the Sensor turns off.

APP Connection & APP Setting

Pairing Your Smart Rod Sensor

First open the Cyberfishing APP. Choose your language and register your account. As soon your signed in the APP starts searching for available Smart Rod Sensors. Make sure your Smart Rod Sensor is turned on. Name your Sensor, scan or type the serial number of your Sensor printed on the packaging box for SRS3 and on the charging cable tag for SRS8.

Choose your fishing type, save data and Cyberfishing APP is ready to Start Fishing.

Notice: Your Smart Rod Sensor must to be connected with

smartphone by Cyerfishing APP, do not connect them by smartphone OS Bluetooth.

Setting

Set up your profile or download from your Facebook page. Set up your tackle box with your fishing tackle.

Smart Rod Sensor Operation

As soon as you connected Smart Rod Sensor with Cyberfishing APP, your Sensor is ready and it is in a CAST mode. After 5 seconds screen turns off, but your Sensor is ready to work and will count your casts automatically.

To record your catches, use CATCH mode by pressing the button one time from the CAST mode or two times from dark screen (first to wake up the Sensor). There is a green light on the Sensor flashes one time and your phone sound and vibrate to confirm your CATCH. You can modify type of CATCH from APP setting.

To make your spots, use MARKER mode by pressing the button two times from the CAST mode or three times from dark screen (first to wake up the Sensor). There is a red light on the Sensor flashes one time and your phone sound and vibrate to confirm your MARKER.

You can modify type of MARKER from APP setting.

After fishing

After fishing, you can check statistics of your fishing trip in the Cyberfishing APP or from www.Cyberfishing.com

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

"FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons."