



ONE KEY ADAPTER

IMPORTANT SAFETY INSTRUCTIONS

WARNING To reduce the risk of injury, read and understand this instruction sheet, as well as the operator's manual packaged with your power tool, battery pack, and charger. Read and save these instructions. **KEEP THESE INSTRUCTIONS.**

- Read these instructions.
- Keeps these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water. Never immerse the apparatus in liquid or allow a liquid to flow inside the apparatus. Water entering an apparatus will increase the risk for electric shock.
- Clean only with dry cloth. Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include: gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Clean dust and debris from vents. Keep the apparatus handle clean, dry and free of oil or grease.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Only operate this apparatus in a well ventilated area.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture or does not operate normally. Service or maintenance performed by unqualified personnel could result in a risk of injury.
- A battery operated apparatus with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Use battery operated apparatus only with specifically designated battery packs. Use of any other batteries may create a risk of fire.
- When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
- Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- Never disassemble the apparatus or try to do any rewiring on the apparatus's electrical system.
- Do not expose this apparatus to dripping and splashing, or place objects filled with liquids on this unit.

SPECIFIC SAFETY RULES

- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.
- This apparatus is designed to be powered by an 18 volt MILWAUKEE Li-ion battery pack. Do not attempt to use with any other voltage or power supply.

FCC Federal Communications Commission

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

Cat. No.	Volts DC	FCC ID:	Bluetooth FCC ID:
2700-20	18	2AEMT2700M18OKA	QOQBLE112

FUNCTIONAL DESCRIPTION

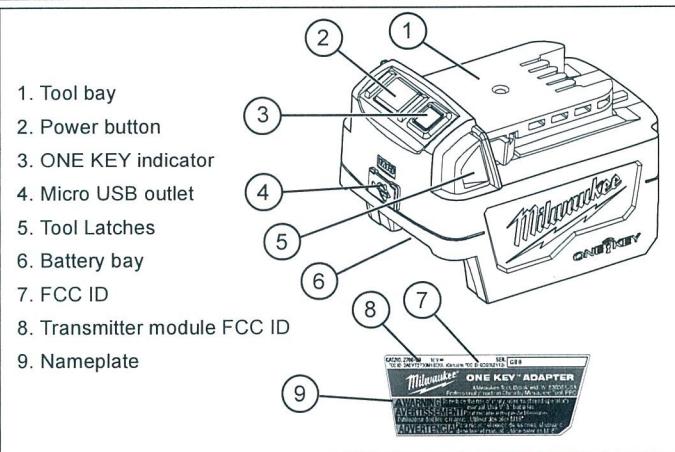

SYMBOLS

V	Volts
---	Direct Current
	To reduce the risk of injury, user must read operator's manual.
FCC	Federal Communications Commission

ONE KEY

To install the ONE KEY Adapter, remove the battery pack from your MILWAUKEE M18™ tool according to your tool's operator's manual. Slide the Adapter into the body of the tool. Make sure it latches securely into place. Slide an M18™ battery pack onto the adapter.

When the battery is installed or data is recorded, the ONE KEY icon lights. Tool report information is available via the ONE KEY App. Go to www.milwaukeetool.com/OneKey for more information regarding the features available from ONE KEY.

To download ONE KEY, visit the App Store, Google Play, or www.milwaukeetool.com/OneKey.

Data can be accessed wirelessly using the One Key app, or by connecting the One Key Adapter directly to a computer using a micro USB cable.