Quick Manual for Android and iOS

ROBOT CAMERA



Robot camera×1 Power cable×1

After open packing list box .please check product body and

Packing list

accessories as blow:



Interface







Accessories Kit x1 Positioning paper x1 Fixed accseeories x1

Operation

1.Download APP

and download

 
2.Power on

power outlet.

Tips one:Scan QR code.







BACK

FRONT

Power adapter*1



Tips two :Search "iCSee" in the App store or Googleplay

Install TF card first then connect the camera to the

3.Camera configuration

(If you don't have user name, please register first).

01.open the app "iCSee", choose the "login" (picture1)

1. Wireless network configuration:

02.After Click "+" (picture 2).

Picture 1

· — · · ·

Username | Joydame/Emo

■ Seve PW ■ Auto

Password Family

Picture 3

· — · · o


m 2 0 - 480 x 0.29 %(333 NE) 1

Add Device

Add A Device In the Same Route

(n)

Add Shared Device

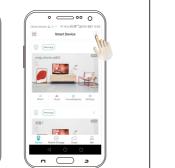

Picture 2

03.Enter to "Set Up My Device In Wi-Fi" (picture 3).please 04. After you hear a camera voice "connect successfully input WiFi router password(picture 4), Then confirm. ", will enter to "set pwd" Then confirm (picture 5).

Picture 4






05. After "confirm "will enter to "pick a name" (picture 6)

Picture 6



Picture 5

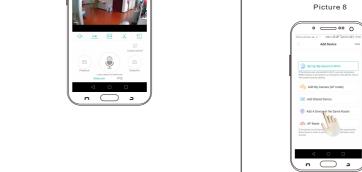

06. After click "save" will enter to video preview(picture 7

Picture 7

• - • 0

in thice 2.9 - 5150: 0.9 5425 FO 1:

2. Wired network configuration:

- A:Currently the camera supports FAT32G format Class6. After login successfully, click "+" in the upper right corner, and select the fourth way" Add A Device In the Same Router"(picture 8);
- Enter into "Searching Device" interface.click on the Q:The camera be offline.how to do? searched camera (picture 9); the camera will be A:Check the power and WiFi. shown online, which indicates that the wired network Restart power on and restart the camera. configuration of camera is complete; Reconfigure the camera. Check the home broadband network.
- Click to enter the view interface, and you can do related operations and settings. Q:How to switch network environment?



Picture 9



Class 10 TF Card, max supports 128G. When the TF Card is ful

it will delete earlier video automatically and loop recording.

Q:How to store a video camera?

FAQ

⚠ Notice

easy access to the venue.

⚠ Directions

cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user **Note:** This equipment has been tested and found to comply

Labelling requirements

with the limits for a Class B digital device, pursuant to part 15 of A:When using in the new network environment, please long the FCC Rules. These limits are designed to provide reasonable press the reset button(SET) for 6 seconds release the button protection against harmful interference in a residential It means that restored to factory setting successfully. Then yo installation. This equipment generates uses and can radiate radio can start to connect network configuration again. frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does While using this product, please modify the user cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user password, to avoid the delinquents misappropriation. is encouraged to try to correct the interference by one or more of Do not install the equipment in damp, dusty, children

-Reorient or relocate the receiving antenna.

the following measures:

Please allow within the scope of use and storage of -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from temperature and humidity, do not disassemble it at will.

that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

To comply with FCC RF exposure compliance requirements, this gran

t isapplicable to only mobile configurations. The antennas used for

this transmittermust be installed to provide a separation distance

of at least 20 cm from allpersons and must not be co-located or

operating in conjunction with any otherantenna or transmitter.

RF warning for Portable devic

App and device firmware will have new update irregularly, you could upgrade it online at app setting, instructions are for reference only.

Warranty Card This device complies with part 15 of the FCC Rules. Operation i subject to the following two conditions: (1) This device may not

> Name Gender

Name

Warranty period:one year.

This warranty card is only for our company's products.