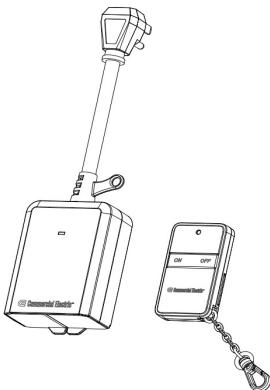


## USE AND CARE GUIDE

WIRELESS INDOOR/OUTDOOR  
REMOTE CONTROL SWITCH

## THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this outdoor wireless remote control. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

## Troubleshooting

Problem	Solution
The lights do not turn on and off via remote control.	Confirm remote operation after replacing batteries.
The lights do not turn on, even when the power indicator light indicates that the receiver is on.	Ensure the lights are functional by plugging them directly into an outlet.  Be sure that the lights are in the "ON" position if they have their own switch.  Be sure that the outlet that the receiver is plugged into is active.
Remote does not turn the device on or off.	Receiver and transmitter need to be re-synched. Replug the receiver into a properly grounded outlet and within 10 seconds, press the OFF button until the green indicator flash on the receiver, then press the ON button within 2 seconds.

## Safety Information

**Federal Communications Commission Interference Statement**  
This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Store indoors when not in use.

## RATINGS

125 VAC, 60 Hz

15 A General Purpose

15 A Resistive

1000W Tungsten

1/3HP

## Product Description


 **NOTE:** This product is suitable for outdoor use and use in damp locations.

## Product Description

1. Power indicator light: The power indicator light indicates that the receiver is on.

2. Outlets: The two outlets located on the bottom of the receiver allows the user to plug an array of devices into it. Plug the lights or devices to be controlled by the remote into one of the outlets.

3. Remote control:
  - ON: When the on button is pressed, it will override the receiver's current program to on function.
  - OFF: When the off button is pressed, it will override the receiver's current program to off function.
  - Remote indicator light: The LED light indicates that the ON or OFF button is being pressed.

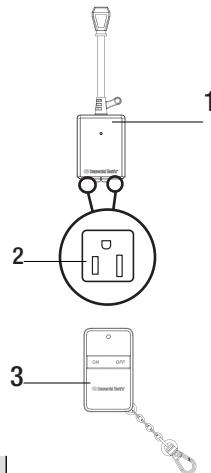

## Installation Instructions



**WARNING:** The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 ft. above the ground level to prevent water immersion.

- Mount the receiver onto a wall near a grounded electrical outlet.
- Insert a nail or screw (not included) into the mounting surface. Nail or screw head must extend at least 3/16 in. out from the wall. Hang the receiver from the slot on back of the unit onto the nail or screw. Plug the power supply cord of the receiver into the outlet.
- Plug the device cord into any of the two receptacles at the bottom of the receiver.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

## Operating Instructions

## 1 Using the remote control

- Plug the receiver into an outlet. Plug the devices to be controlled into the outlets on the receiver.
- To activate the receiver, press the "ON" button of the remote control. The green LED of the remote control will illuminate momentarily and the LED of the receiver will remain illuminated.
- To turn the receiver OFF, press the "OFF" button of the remote control. The LED on the receiver will shut off.

## Maintenance

## 2 Replacing the battery

**WARNING:** Do not mutilate or place the battery in a fire. The battery may burst or release toxic materials. Do not short circuit or reverse polarity as this may cause burns.

- Unscrew the screw on the battery compartment cover from the back of the remote control.
- Remove the old battery and place a new DC 3V CR2032 battery into the battery compartment, correctly observing the polarity indications (+/-) inside the battery compartment.
- Replace the battery compartment cover and locking the screw.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.