


WELCOME TO VIRTUAL REALITY

Valve hardware is your access to the wondrous people, places and things you'll interact with in VR.

While these worlds are infinite, thankfully this setup is not.

Let's get started!

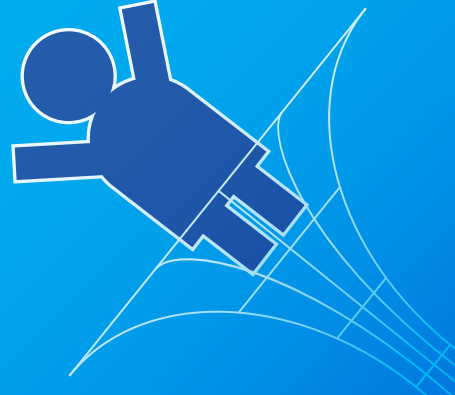

1 INSTALL STEAMVR


Download SteamVR from the website below and install it on your VR-Ready PC. Create or log into your Steam account before proceeding.

If you're setting up VR with a computer running SteamOS, skip directly to step 2.



<http://steamvr.steampowered.com>

2 CONNECT HEADSET

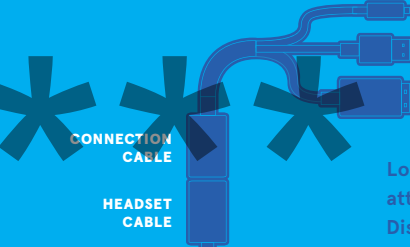

Locate the Connection Cable attached to your headset. Plug its Display Port and USB cables into your computer.


Plug in the headset's power cable using the included power adapter, or plug directly into the DC Port on your computer.

Do not unplug cables while important software is being installed.

3 SELECT A PLAY AREA

For Room Scale VR, you will need at least 2m x 1.5m (or 6.5ft x 5ft) of free space. Standing-only or seated setups can be achieved in smaller spaces.

Be sure to clear your Play Area of pets and obstacles.

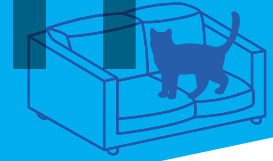

4 MOUNT & POWER UP BASES




For Room Scale VR, place your Base Stations at opposite corners of your play area, pointing toward its center.

Secure each Base Station using either a wall-mounted **A** or standing **B** configuration.


Hang wall-mounted Base Stations overhead, at least 2m (6.5ft) above the floor. Angle them 25-35° downward.

For standing-only or seated setups, place your Base Stations on any convenient surface in view of your headset and controllers.

Plug your Bases into an outlet.

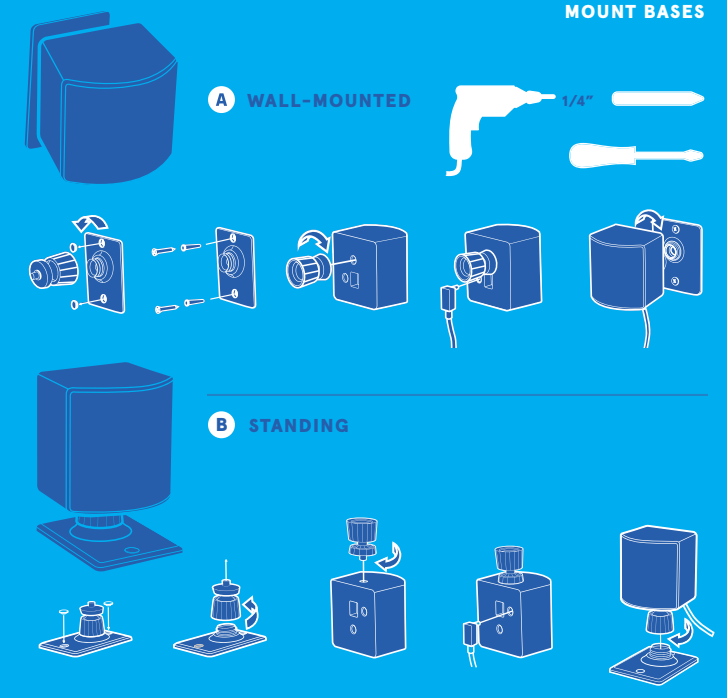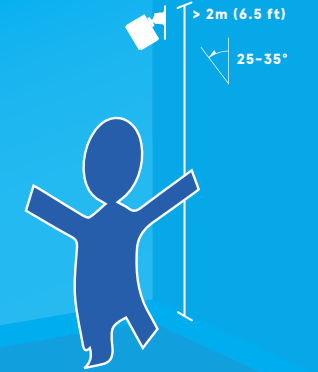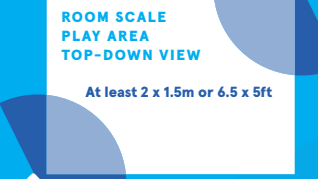


5 ADJUST HEADSET

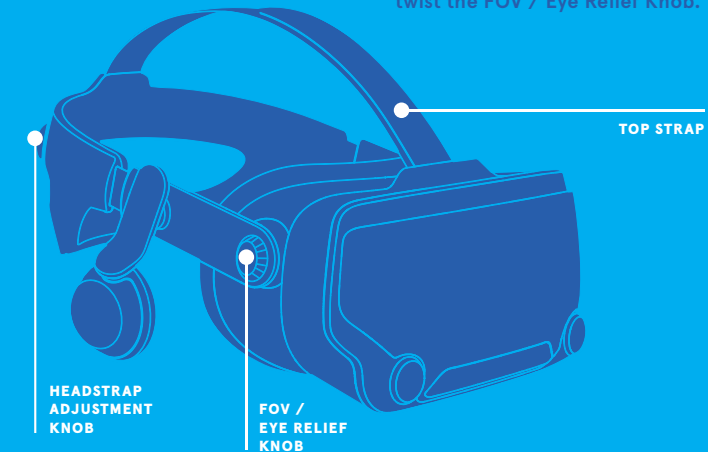

To adjust your headset, twist the Headstrap Adjustment Knob for a snug fit, then tighten the Top Strap.

To adjust for glasses, push in and twist the FOV / Eye Relief Knob.

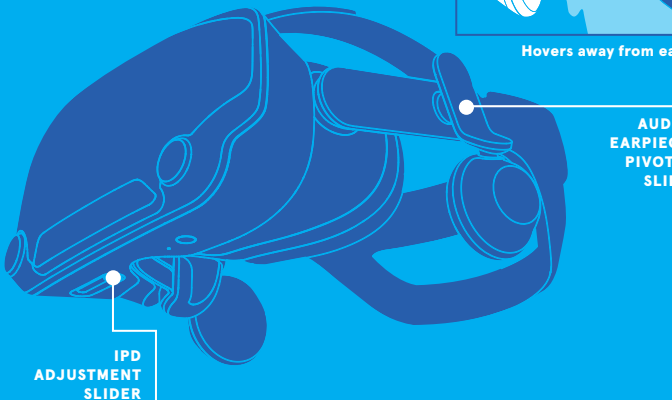

To optimize image clarity, move the IPD Adjustment Slider while wearing the headset.

To position Audio Earpieces, pivot and slide each until it is centered and hovers over your ear.

EARPIECE POSITIONING



AUDIO EARPIECE PIVOT & SLIDE

Hovers away from ear!

ADJUST HEADSET

6 POWER UP & ADJUST CONTROLLERS



Turn on your Controllers using the System Button. To pair your Controllers with your VR Headset, launch SteamVR, then select Devices > Pair Controller. Follow the on-screen instructions to complete the process.

SYSTEM BUTTON

Your Controllers are partially charged for a few hours of playtime. To charge them, use the provided USB cables with a port on your VR PC.



Grip the Controller and using your other hand, pull the Adjustment Strap snug. To loosen it, press the Release Button.

To adjust for different hand sizes, push in the Size Adjustment Arm, then swing it left or right.

For more Controller info, visit <http://steamvr.steampowered.com>





ADJUST CONTROLLERS

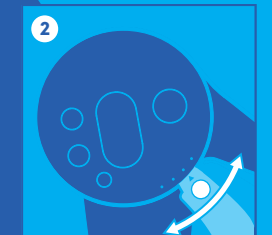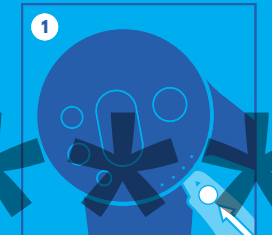

7 ENJOY VR!

Put on your Headset, grab your Controllers and follow the in-headset instructions to complete setup in the virtual world.

To launch SteamVR next time, click the VR button in the upper corner of Steam.

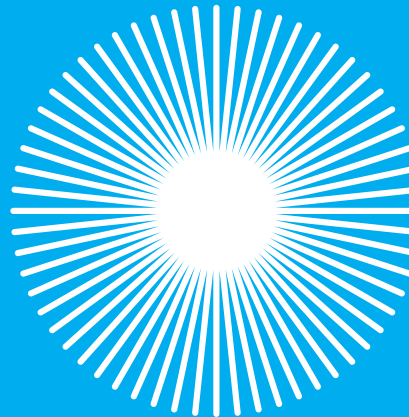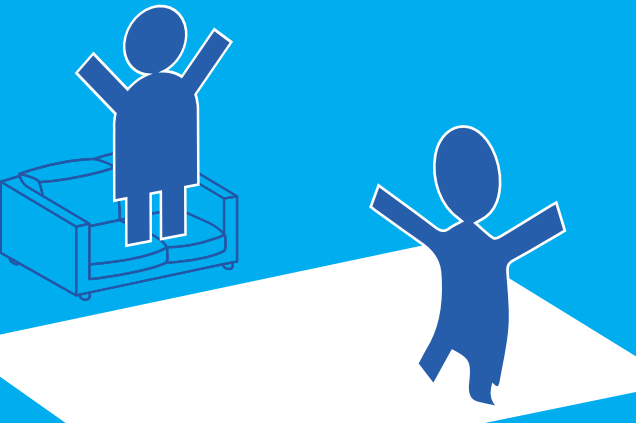

SETUP GUIDE
VALVE HEADSET