# **Charging the Mouse Droid:**





- 1. The Micro USB cable connects to the Mouse Droid
- 2. The USB will connect to your computer or electrical outlet to complete the charge
- 3. Red light On indicates: Charging
- 4. Red light Off indicates: Charge is completed

#### \*Approx.

The charge lead time by computer takes up to 6-7 hours (500mA input current) The charge lead time by electrical outlet (not included) takes up 4-5 hours (1A input current)


The Mouse Droid's battery life can run for approximately 5 hours, if the device is fully charged

## **Pairing:**



- 1 Turn on Remote Control
- 2 The red light flashing for 1 minute indicates the remote is ready for pairing
- 3 Turn on the Mouse Droid
- 4 When the Mouse Droid and Remote Control are paired, the red light will stay on
- 5 If the Mouse Droid and Remote Control are not paired, the red light will turn off. The user can press any button on the Remote Control to pair the devices again
- 6 If the Mouse Droid is turned off, the user needs to pair the two devices again

# **Function:**

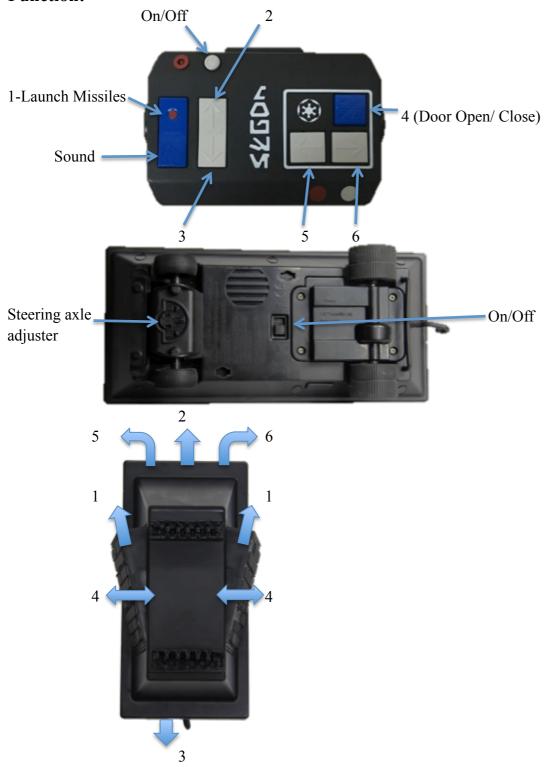

### **Missiles Instruction:**

FIRE all the missiles before reload. The Setting on structure will not allow user to reload 1st & 2nd level missiles before completed the shooting sequence.

- 1. Press button 1st time shooting top bullet x 2
- 2. Press button 2nd time shooting mid bullet x 2
- 3. Press button 3rd time shooting bottom bullet x 2
- 4. Mechanical reset