INSTRUCTIONS

WIRELESS CONNECTION

- Move the ON/OFF switch on your Bluetooth Wireless Speaker to the "ON" position (See Figure 1 on page 3). The Micro Box Bluetooth Wireless Speaker will announce "Bluetooth Mode" and the blue light will flash on and off.
- Turn on the Bluetooth Wireless capability on your device to make it discoverable to the Bluetooth Wireless Speaker. See your device's instructions to add or setup a Bluetooth Wireless device. The Bluetooth Wireless option can be found in the "Settings" or "Tools" on most devices.
- A menu will come up on your device showing the recognized Bluetooth Wireless device.
 Tap on the "BT" option and the Bluetooth Wireless Speaker will acknowledge by saying "Bluetooth Connected".
- While the speaker is scanning to pair with your device, the blue light on the back of the speaker will continue to flash. Once your device is discovered, the blue light will remain solid.
- 5. You can now arrow back on your device to your applications menu where your music is to start playing your song selections.

AUX CONNECTION

- Connect the Bluetooth Wireless Speaker to any device with a headphone jack or line out using the included 3.5mm audio cable. Bluetooth Wireless Speaker will acknowledge by saying "Audio Input".
- 2. The LED (red) will illuminate indicating a connection.
- 3. You can now arrow back on your device to your applications menu where your music is to start playing your song selections.

 
WARRANTY

Thank you for purchasing the Snap-on® SSX16P106KO Bluetooth® Wireless Speaker. Your Bluetooth® Wireless Speaker is guaranteed against defects in material and workmanship for the period of 1 Year including the date of purchase. This warranty is limited to the original purchaser of product. Product found to be defective during that period will be repaired or replaced by 41 International, Inc. at no charge.

This warranty is void if it is determined that unauthorized parties have attempted repairs or alterations of any nature. Warranty does not extend to cosmetics or finish. Before presuming a defect is present in the product, be certain that all related equipment and wiring is functioning properly. 4! International disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal and reinstallation of products are not covered by this warranty. 4! International's total liability will not exceed the purchase price of the product. A Return Material Authorization number (RMA) is required before shipping product back to 4! International. Call 262-656-1956 to obtain an RMA number.

Designed and Engineered in U.S.A. Made in China. Snap-on is a trademark of Snap-on Incorporated and used under license. @2015 Snap-on Incorporated. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Snap-on Incorporated and 4J International is under license. Other trademarks and trade names are those of their respective owners. Other trademarks and trade names are those of their respective owners.





4





BLUETOOTH SPEAKER KRA4059 CHEST



Please read and follow these safety warnings and cautions before using your **Bluetooth® Wireless Speaker** to ensure your personal safety and to prevent property damage.



FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Bluetooth Wireless Speaker to liquid, moisture, humidity, or rain.
- Do not use the Bluetooth Wireless Speaker near a bathtub, sink, sauna, pool, or steam room, exposure to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, microwave, incinerate, paint, or
 insert foreign objects into the *Bluetooth* Wireless Speaker. Such actions could result in electric
 shock.
- Clean the Bluetooth Wireless Speaker only with a dry cloth.
- Do not expose your Bluetooth Wireless Speaker to extremely high or low temperatures.
- Do not leave your Bluetooth Wireless Speaker in direct sunlight for extended periods of time.
- Do not leave your Bluetooth Wireless Speaker near open flames such as cooking burners, candles, or fireplaces.
- · Do not block any ventilation openings.



CAUTION

- Do not use abrasive cleaners on your Bluetooth Wireless Speaker, as this will cause damage.
- Do not insert anything into your *Bluetooth* Wireless Speaker unless otherwise specified in the user instructions. This could result in damaging the internal components.
- Do not attempt to repair, replace, modify or disassemble your Bluetooth Wireless Speaker yourself, it does not contain any user-serviceable components.
- Use only the manufacturer supplied power cord for your Bluetooth Wireless Speaker. Other
 power cords may look similar, but using them may result in electric shock or damage the unit.
- Do not use your Bluetooth Wireless Speaker on any aircraft.
- Observe all signs and displays that forbid any electrical device use in designated areas.
- Dispose of your Bluetooth Wireless Speaker in accordance with local regulations.

BLUETOOTH® WIRELESS SPEAKER FEATURES

- Voice Command Prompts
- 2 Large Full Range Speakers, 2 Subwoofers, 2 Tweeters
- Bluetooth 4.0 with aptX
- AUX Input via 3.5mm Stereo Jack
- UL Certified DC 24V 2.5A Power Supply

CONTROL FUNCTIONS (See Figure-1)

- ON/OFF Power button
- DC INPUT Port Connect supplied power cable to this port and to a standard 120V power outlet.
- Remote Control (Figure-2) Functions -Power ON/OFF and Volume control UP/DOWN.
- 4. Line Output 3.5mm connection for additional speaker source with 3.5mm input.
- 5. AUX INPUT 3.5mm connection for any audio source with 3.5mm output.
- 6. Volume Down Press to decrease volume.
- Volume Up Press to increase volume.
- 8. Mode Multiple key functions for cycling *Bluetooth* and AUX modes (default is *Bluetooth* mode).
- Bluetooth mode LED (Blue) indicator During the pairing mode the (Blue) LED
 will be flashing. When connection has been completed, LED (Blue) will be a
 solid light.
- AUX LED (Red) When there is a connection change to AUX IN, the AUX LED will be solid red.

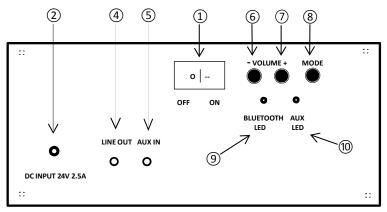


Figure-2



2

Figure-1

3

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter