

INSTRUCTIONS

CHARGING

- 1. To charge the Snap-on® Micro Box Bluetooth® Wireless Speaker, plug the provided power cord into an outlet.
- 2. The LED (red) will illuminate while charging and then to green when fully charged.
- 3. The Micro Box Bluetooth Wireless Speaker will require 2.5 hours or more to fully charge the internal battery.

WIRELESS CONNECTION

- 1. Move the ON/OFF switch on your Micro Box Bluetooth Wireless Speaker to the “ON” position (See Figure 1) on page 2. The Micro Box Bluetooth Wireless Speaker will announce “Bluetooth Mode” and the blue light will flash on and off.
- 2. Turn on the Bluetooth Wireless capability on your device to make it discoverable to the Micro Box Bluetooth Wireless Speaker. See your device’s instructions to add or setup a Bluetooth Wireless device. The Bluetooth Wireless option can be found in the “Settings” or “Tools” on most devices.
- 3. A menu will come up on your device showing the recognized Bluetooth Wireless device. Tap on the “BTmicro” option and the Micro Box Bluetooth Wireless Speaker will acknowledge by saying “Connecting”.
- 4. While the speaker is scanning to pair with your device, the blue light on the back of the speaker will continue to flash. Once your device is discovered, the blue light will remain solid.
- 5. You can now arrow back on your device to your applications menu where your music is to start playing your song selections.

AUX CONNECTION

- 1. Connect the Micro Box Bluetooth Wireless Speaker to any device with a headphone jack or line out using the included 3.5mm audio cable.
- 2. The LED (green) will illuminate indicating a connection.
- 3. The Micro Box Bluetooth Wireless Speaker will require 2.5 hours or more to fully charge the internal battery.

WARRANTY

Thank you for purchasing the Snap-on® Micro Box Bluetooth® Wireless Speaker. Your Micro Box Bluetooth Wireless Speaker is guaranteed against defects in material and workmanship for the period of including the date of purchase until November 30th, 2016, (11/30/2016). This warranty is limited to the original purchaser of product. Product found to be defective during that period will be repaired or replaced by 4J International, Inc. at no charge. This warranty is void if it is determined that unauthorized parties have attempted repairs or alterations of any nature. Warranty does not extend to cosmetics or finish. Before presuming a defect is present in the product, be certain that all related equipment and wiring is functioning properly. 4J International disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal and reinstallation of products are not covered by this warranty. 4J International’s total liability will not exceed the purchase price of the product. A Return Material Authorization number (RMA) is required before shipping product back to 4J International. Call 262-656-1956 to obtain an RMA number.

Designed and Engineered in U.S.A. Made in China. Snap-on is a trademark of Snap-on Incorporated and used under license. ©2015 Snap-on Incorporated. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Snap-on Incorporated and 4J International is under license. Other trademarks and trade names are those of their respective owners. Other trademarks and trade names are those of their respective owners.



Bluetooth Speaker



Please read and follow these safety warnings and cautions before using your **Micro Box Bluetooth® Wireless Speaker** to ensure your personal safety and to prevent property damage.



FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Micro Box Bluetooth Wireless Speaker to liquid, moisture, humidity, or rain.
- Do not use the Micro Box Bluetooth Wireless Speaker near a bathtub, sink, sauna, pool, or steam room, exposure to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, microwave, incinerate, paint, or insert foreign objects into the Micro Box Bluetooth Wireless Speaker. Such actions could result in electric shock.
- Clean the Micro Box Bluetooth Wireless Speaker only with a dry cloth.
- Do not expose your Micro Box Bluetooth Wireless Speaker to extremely high or low temperatures.
- Do not leave your Micro Box Bluetooth Wireless Speaker in direct sunlight for extended periods of time.
- Do not leave your Micro Box Bluetooth Wireless Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.



BATTERY / CHARGER HAZARD

- Do not dispose of your Micro Box Bluetooth Wireless Speaker in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the Micro Box Bluetooth Wireless Speaker.
- Do not attempt to disassemble the Micro Box Bluetooth Wireless Speaker charger or force open the built-in battery because this may result in electric shock.
- Do not charge the Micro Box Bluetooth Wireless Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.

- Do not clean the Micro Box Bluetooth Wireless Speaker when it is being charged. Always unplug the charger first before cleaning the Micro Box Bluetooth Wireless Speaker.

Automobile Accident Hazard

- Do not leave or store the Micro Box Bluetooth Wireless Speaker or any of its accessories near or over your automobile’s airbag because serious injury may result when an airbag deploys.



CAUTION

- Do not use abrasive cleaners on your Micro Box Bluetooth Wireless Speaker, as this will cause damage.
- Do not insert anything into your Micro Box Bluetooth Wireless Speaker unless otherwise specified in the user instructions. This could result in damaging the internal components.
- Do not attempt to repair, replace, modify or disassemble your Micro Box Bluetooth Wireless Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Micro Box Bluetooth Wireless Speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your Micro Box Bluetooth Wireless Speaker. Other chargers may look similar, but using them may result in electric shock or damage the unit.
- Do not use your Micro Box Bluetooth Wireless Speaker on any aircraft.
- Observe all signs and displays that forbid any electrical device or RF radio use in designated areas.
- Dispose of your Micro Box Bluetooth Wireless Speaker in accordance with local regulations. Do not dispose of battery with regular household waste.

MICRO BOX BLUETOOTH® WIRELESS SPEAKER FEATURES

- Voice Command Prompts
- 2 Large Full Range Speakers
- Integrated Microphone for Hands-Free Phone Use
- Bluetooth 4.0 with aptX
- Built-in Rechargeable Battery with up to 8-Hour Playback Capacity
- AUX Input via 3.5mm Stereo Jack

CONTROL FUNCTIONS (See Figure-1)

- 1. ON/OFF - Power button
- 2. DC INPUT Port - Connect supplied power cable to this port and to a standard 120V power outlet to recharge internal battery.
- 3. LED Charge Indicator - Indicates charging status. (Red) Indicates charging while (Green) indicates charge is complete.
- 4. Line Output - 3.5mm connection.
- 5. AUX INPUT - 3.5mm connection for any audio source with 3.5mm output.
- 6. Volume Down - Press to decrease volume.
- 7. Volume Up - Press to increase volume.
- 8. Mode - Multiple key functions for cycling Bluetooth and AUX modes (default is Bluetooth mode).
- 9. Bluetooth mode LED (Blue) indicator - During the pairing mode the (Blue) LED will be flashing. When connection has been completed, LED (Blue) will be a solid light.
- 10. AUX LED - (Green) When there is a connection change to AUX IN, the AUX LED will be solid green.

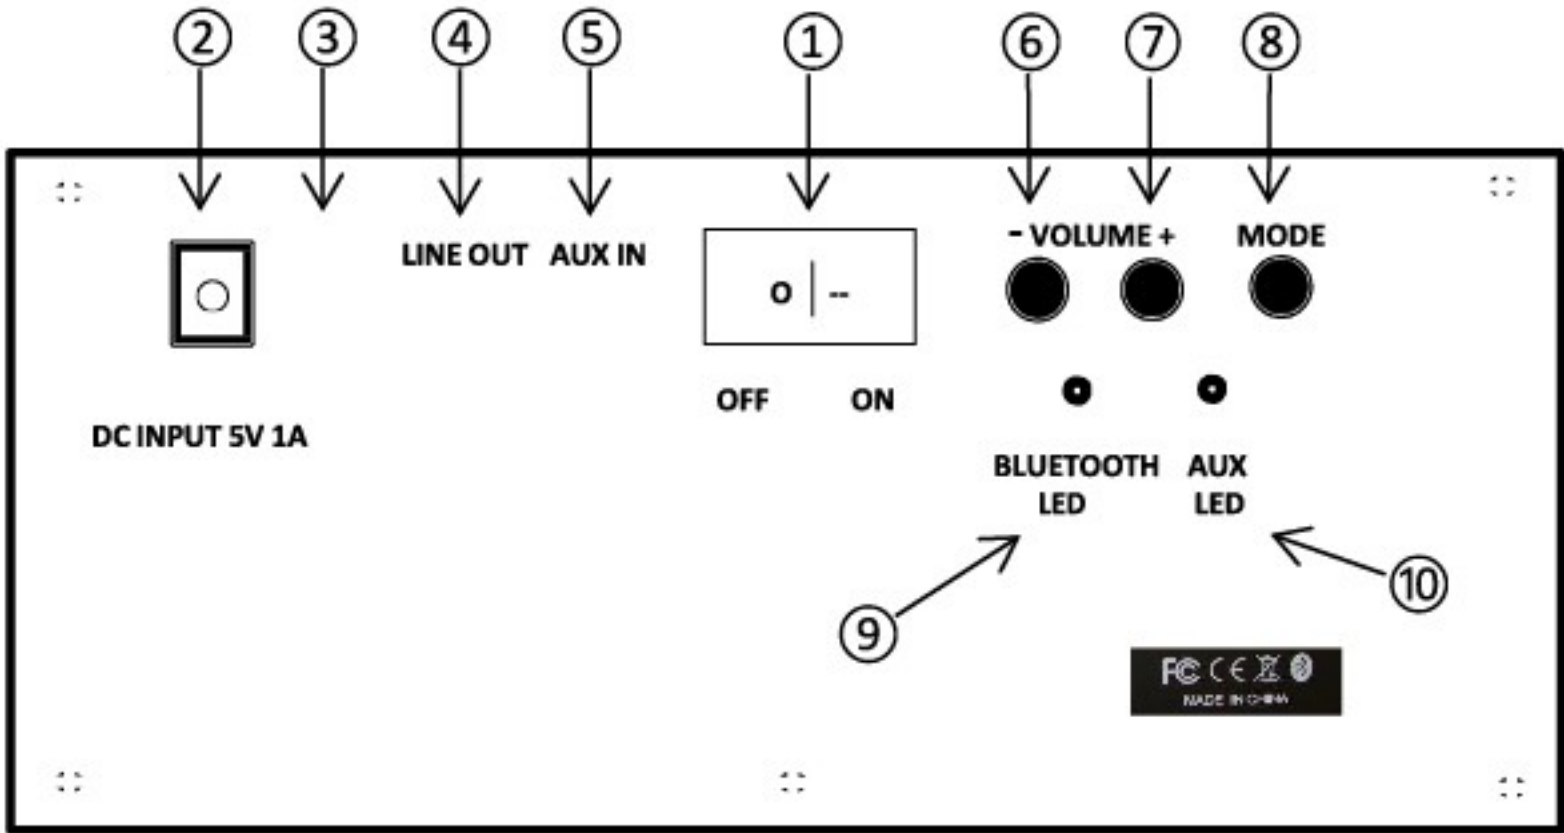


Figure-1

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter